

MITEL 5330 IP PHONE



- Display
- Ring/Message Indicator
- Volume, Speaker, Mute Controls
- **Fixed Function Keys**
- Keypad
- Page Navigation Keys
- Personal Keys
- Speaker
- Handset



Speaker



Mute



Menu



Cancel





Transfer/Conference



Message

NOTE: For more information about other features and applications on your 5330 IP Phone, refer to 5330/5340 IP Phone User Guide located at www.mitel.com, or contact your Administrator. SIP Users: Refer to the 5330/5340 SIP User and Administrator Guide.

Make a Call

- Lift the handset OR
- 3 Press (1).
- 5 Dial the number OR
- Press a Speed Call key OR
- 4 Press 12 OR
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- Lift the handset OR
- 3 Press (1), and begin speaking

End a Call

- 4 Press X OR
- Peplace the handset.

Place a Call on Hold

- 4 Press . The line key flashes.
- Replace the handset if necessary.

Retrieve a Call from Hold

- Lift the handset OR
- 3 Press (1).
- **7** Press the flashing line key.

Retrieve a Message

- 4 Press It flashes when a message is
 - Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press ASS.
- **5** Dial the number. Wait for an answer.
- Hang up OR announce the transfer and then hang up.

Conference a Call

- 4 Press A SQL.
- **5** Dial the number. Wait for an answer.
- 4 Press ~ 100 .

Program a Speed Call

- 4 Press Menu OR
 - Press Programmable Keys.
 - Press the key you wish to program.
 - Press Speed Call.
 - Press Edit Info and enter the label for the Speed Call.
 - Press Save.
 - Press Edit Number and enter the phone
 - number for the Speed Call.
 - Press Save, and then press Save again.
 - Press Close and then press Close again.

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust handset or speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume OR
- repeatedly to lower the volume.
- 3 Press **b** to mute your microphone.