



Model 8690

Inter-Tel Protocol Mode

User Guide



Notice

This Inter-Tel[®] user guide is released by Inter-Tel, Inc. as a guide for end-users. It provides information necessary to use the Model 8690 endpoint. The contents of this user guide, which reflect current Inter-Tel standards, are subject to revision or change without notice. Some features or applications mentioned may require a future release and are not available in the initial release. Future product features and applications are subject to availability and cost. Some features or applications may require additional hardware and/or specific software.

Some system features can only be accessed by an administrator. For information about these features, see the Frequently Asked Questions section on page 137.

**For sales, service, or technical support,
contact your local authorized Inter-Tel provider.**

**Comments about this user guide or other
technical documentation should be directed to
Inter-Tel's Technical Publications Department at:
Tech_Pubs@inter-tel.com**

All products and services mentioned in this publication are the trademarks, service marks, registered marks, or registered service marks of their respective owners.

Inter-Tel[®], Axxess[®], Enterprise[®], Unified Communicator[®], and CommSource[®] are registered trademarks of Inter-Tel, Incorporated.

Microsoft[®], Windows[®], ActiveSync[®], and Outlook[®] are registered trademarks of Microsoft Corporation.

PRODUCT DISPOSAL INSTRUCTIONS



This symbol indicates that the product is classified as electrical or electronic equipment and should not be disposed of with other commercial or household waste at the end of its working life. For appropriate disposal and recycling instructions, contact your local recycling authority or Inter-Tel provider.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) was established by the European Union to minimize negative impact on the environment, control hazardous substances, and curtail landfill expansion by using the best available recovery and recycling techniques.

Table of Contents

CONTENTS	PAGE
FINDING YOUR WAY	1
Welcome	2
About This Guide	2
About Your Endpoint	3
Telephone Interface	7
About the Operating System	12
About Voice Mail	15
What You See and Hear	19
Software Compatibility	20
Guidelines for Using the Model 8690 Endpoint	21
Endpoint Basics	22
Setting Up Voice Mail	26
Accessing Your Mailbox	29
Disabling and Enabling ASR	30
GETTING STARTED	31
Introduction	32
Calibrating the Screen	32
Setting Backlight Options	33
Configuring VLAN Ports	34
Using the System Tray Menu	35
Installing Software and Firmware Upgrades	42
Making and Receiving Calls	45
Placing Calls On Hold	50
Placing Conference Calls	51
Transferring Calls	52
Using Reverse Transfer	53
Forwarding Calls	54
Redialing a Number	56
Accessing Voice Mail Messages	57
Using Do-Not-Disturb Mode	63
Using Reminder Messages	65

CONTENTS	PAGE
MOVING ON	67
Introduction	68
Setting Endpoint Preferences	68
Setting Mailbox Preferences	71
Speed Dialing	77
Using Record-A-Call	79
Paging	80
Performing a “Hookflash” During a Call	81
Using Account Codes	81
Screening Calls	82
Using Call Logging	83
Using Directories	84
Programming Remote Feature Access	89
Requesting Agent Help	91
Working in Hunt Groups	92
USING UC	95
Introduction	96
Logging On and Off of UC	96
Using UC Views	97
Unified Communicator View	98
Messages View	104
Call List View	105
Call Log View	109
Address Book View	113
Call Routing View	119
USING E-MAIL READER	121
Introduction	122
E-Mail Reader Features	123
Using Your Advanced Mailbox	124
Setting Up Your E-Mail Password	125
Accessing E-Mail Messages	127
Using Main Menu E-Mail Reader Count	129
Accessing Fax Messages	130
Recovering Deleted Messages	131
Changing Message Envelopes	132
Voice Mail Flowchart (Advanced Mailbox)	133

CONTENTS	PAGE
LEARNING MORE	135
Introduction	136
What the Administrators Can Do for You	136
Frequently Asked Questions (FAQs).....	137
Default Feature Codes	141
INDEX	145

Finding Your Way

SECTION CONTENTS	PAGE
Welcome	2
About This Guide	2
About Your Endpoint	3
Endpoint Connectors	4
Optional USB Devices	5
Message Indicator Lamp	5
Reset Button	6
Power Requirements	6
Telephone Interface	7
Feature Buttons	8
Display and Menu	9
Unified Communicator Elements	10
Interface Skins	11
About the Operating System	12
Input Panel	13
System Memory and Storage	13
System Registry	14
Operating System Help	14
About Voice Mail	15
Enterprise Messaging	17
Automatic Speech Recognition (ASR)	18
What You See and Hear	19
Software Compatibility	20
Guidelines for Using the Model 8690 Endpoint	21
Endpoint Basics	22
Adjusting Your Endpoint's Viewing Angle	22
Displaying Information on Your Endpoint	22
Using the Speakers and Microphone	23
Using the Message Button	24
Using a Headset	25
Setting Up Voice Mail	26
Initializing Your Mailbox	26
Recording Your Personal Greetings	27
Recording Your Voice Mail Directory Name	28
Accessing Your Mailbox	29
Disabling and Enabling ASR	30

WELCOME

Your new Model 8690 endpoint provides access to several features, each of which is described in this guide. The Inter-Tel multi-protocol endpoints support two different modes of network protocols, and can operate in either Inter-Tel Protocol (ITP) mode or Session Initiation Protocol (SIP) mode. The operating mode determines which features and options are enabled on the endpoint. This guide is for the Model 8690 endpoint operating in ITP mode. If your endpoint is configured to operate in SIP mode, request a copy of the *Model 8690 User Guide: Session Initiation Protocol Mode* (part number 550.8025) from your system administrator.

The *About This Guide* section below lists the different sections in this user guide and describes the type of information you can find there.

ABOUT THIS GUIDE

This guide contains instructions for using the Model 8690 endpoint on the Inter-Tel® telephone system. To help you find information more quickly, this guide is divided into six separate sections, as indicated by the tabs. These sections include the following:

- **Finding Your Way:** This section provides you with a picture of the Model 8690 endpoint and includes general information designed to help you find what you need.
- **Getting Started:** This section includes basic endpoint and voice mail information, and provides instructions on how to perform everyday tasks, such as answering calls, making calls, and using voice mail.
- **Moving On:** In this section you'll learn how to use advanced endpoint and voice mail features.
- **Using UC:** This section includes information on how to use the advanced communication features available with Unified Communicator® (UC).
- **Using E-Mail Reader:** This section includes information on how to use the advanced messaging features available with E-Mail Reader.
- **Learning More:** This section outlines how your administrators can help if you experience a problem with your endpoint. It also provides you with a list of Frequently Asked Questions (FAQs) so you can troubleshoot problems and learn more about the system.

In addition, this guide contains a list of default feature codes (see [page 141](#)) and an index (see [page 145](#)) for easy reference.


NOTE: Because the telephone system is very flexible and programmable, the procedures for using the features might vary slightly from the descriptions in this guide. If so, your trainer or system administrator can tell you how your system differs and how to use the features.

ABOUT YOUR ENDPOINT

Your Model 8690 is a desktop endpoint that uses the technology available with a Personal Data Assistant (PDA). The operating system on the endpoint is a customized version of Microsoft® Windows® CE .NET 4.2. The Model 8690 has a Liquid Crystal Display (LCD) touch screen that displays a telephone interface with traditional telephone elements that include a display, dialpad, feature buttons, and menu buttons. A stylus pen provides access to elements on the interface.

Additional endpoint features include:

- **Headset Jack:** Connects to a headset.
- **Handset Jack:** Connects to a handset.
- **Two Speakers:** Provide audio output.
- **Message Indicator Lamp:** Flashes when you have a waiting message.
- **Built-In High Fidelity Microphone:** Allows you to use the endpoint handsfree.
- **Hearing Aid-Compatible (HAC) Handset:** Allows you to make and receive calls privately.

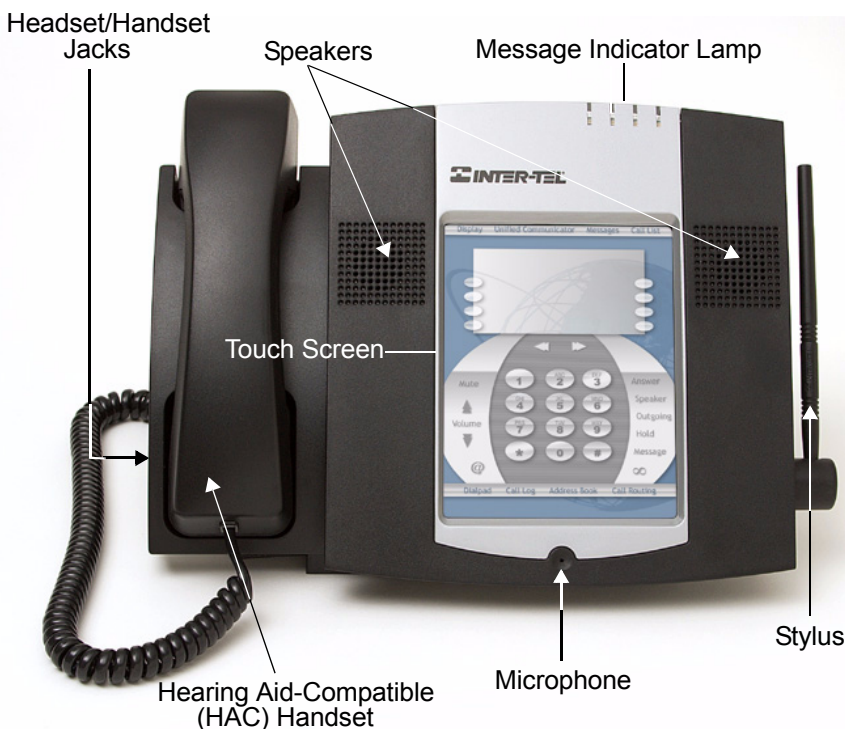


NOTE: The Model 8690 is not designed to be wall mounted.

Endpoint Connectors

Your Model 8690 endpoint has various connectors that are required for an IP endpoint. Two light-emitting diodes (LEDs) on the PC ports and LAN/Power jack indicate link status and the speed of the connections.

The ports and connectors on the Model 8690 endpoint include the following:

- **External Microphone Jack:** Allows you to connect an external microphone to the endpoint.
- **External Speaker Jack:** Allows you to connect an external speaker to the endpoint.
- **Reset Button:** If your endpoint is equipped with a reset button, it allows your administrator to restore default settings (see [page 6](#) for details).
- **Compact Flash (CF) Port:** Allows you to connect a CF memory card if additional memory is needed.
- **Personal Computer Memory Card International Association (PCMCIA) Port:** Allows you to connect a PCMCIA memory card if additional memory is needed.
- **LAN/PWR Jack:** Connects the endpoint to a network hub/switch and the power supply.
- **Universal Serial Bus (USB) Client Port:** Connects the endpoint to a host computer running ActiveSync®.
- **USB Host Port:** Allows you to connect a keyboard, mouse, or other USB device to your endpoint.
- **Three PC Ports:** Allows you to connect your PC or any other 10/100 Ethernet device to your endpoint.

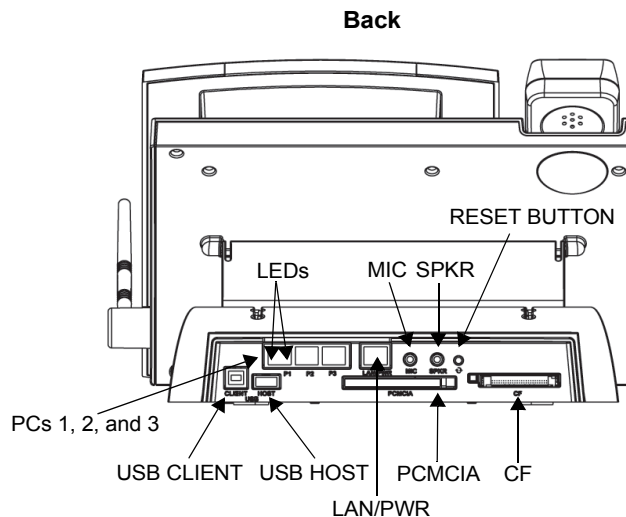

Optional USB Devices

You can connect a standard USB device to your Model 8690 endpoint using a standard USB cable (not included) connected to the USB host port on the back of the endpoint (see [page 4](#)). The operating system will automatically detect the device when the endpoint is powered on.

If you connect a USB keyboard, you can configure the keyboard properties under Start - Settings - Control Panel - **Keyboard**. You can also use the USB host port to connect a mouse. You can configure mouse properties under Start - Settings - Control Panel - **Mouse**.

If you would like to connect both a mouse and a keyboard to the endpoint, you will need to use two USB cables. First connect the mouse to the keyboard and then connect the keyboard to the USB host port on the endpoint. The operating system recognizes all daisy-chained USB devices.

Message Indicator Lamp

The Message Indicator lamp (located at the top, right corner of the endpoint) flashes whenever there is one or more waiting messages. In addition, the display indicates the number of messages you have waiting. See [page 25](#) for instructions on retrieving messages.

NOTE: By default, the message lamp is programmed to light when you receive a new voice mail message. However, this lamp can be programmed for other functions. Check with your system administrator if you are unsure what your endpoint's lamp is programmed to indicate.

If desired, you can program the endpoint so that the message lamp does not flash, even when new messages are waiting. For details, see [page 36](#).

Reset Button

If your endpoint is equipped with a reset button on the back, pressing it immediately shuts down the operating system and any applications that are currently running on the endpoint, the screen goes blank, and the default settings are restored. After a few moments the operating system restarts and the client application re-opens when network connectivity is re-established.

CAUTION

Do not press the Reset button on your endpoint unless you are told to do so by your system or network administrator. Desktop shortcuts and any preferences that have not been saved in the registry are lost when you press the Reset button. In addition, the endpoint will require additional programming to restore it to its previous operational state.

Power Requirements

The Model 8690 should remain powered on at all times. The endpoint receives power from an individual power supply unit. It is important to use a power supply unit that is compatible with the endpoint. The Inter-Tel Universal Power Supply (part number 806.1119) is compatible with the Model 8690 endpoint and is available through Inter-Tel's CommSource[®] division.

It is recommended that you plug your endpoint's power supply unit into an Uninterruptible Power Supply (UPS). If your endpoint's power supply unit is not plugged into a UPS and the power fails, the current call will be dropped.


NOTE: Contact your network administrator to order a new power supply unit for your endpoint.

Your system may be configured to use a centralized power source (power over Ethernet) as a backup power source. Your network administrator will explain how to connect your endpoint to the centralized power source. If your power supply unit fails and your system is running power over Ethernet, you will be able to use the audio portion only of the endpoint. Power over Ethernet does not support the display portion of the endpoint.

TELEPHONE INTERFACE

The Model 8690 user interface contains elements that simulate a traditional Inter-Tel six-line display endpoint. These elements allow you to place and receive calls and access endpoint and voice mail features from the Model 8690 just like a conventional Inter-Tel endpoint. The interface includes the following elements:

- **Navigation buttons:** Provide access to UC views (see [page 10](#)).
- **Six-line display:** Provides extension and system information and a menu for accessing additional options or features.
- **Menu buttons:** Allow you to scroll through options and make selections based on the active feature.
- **Dialpad buttons:** Allow you to enter numbers and letters.
- **Feature buttons:** Provide quick access to various telephone and voice mail features.

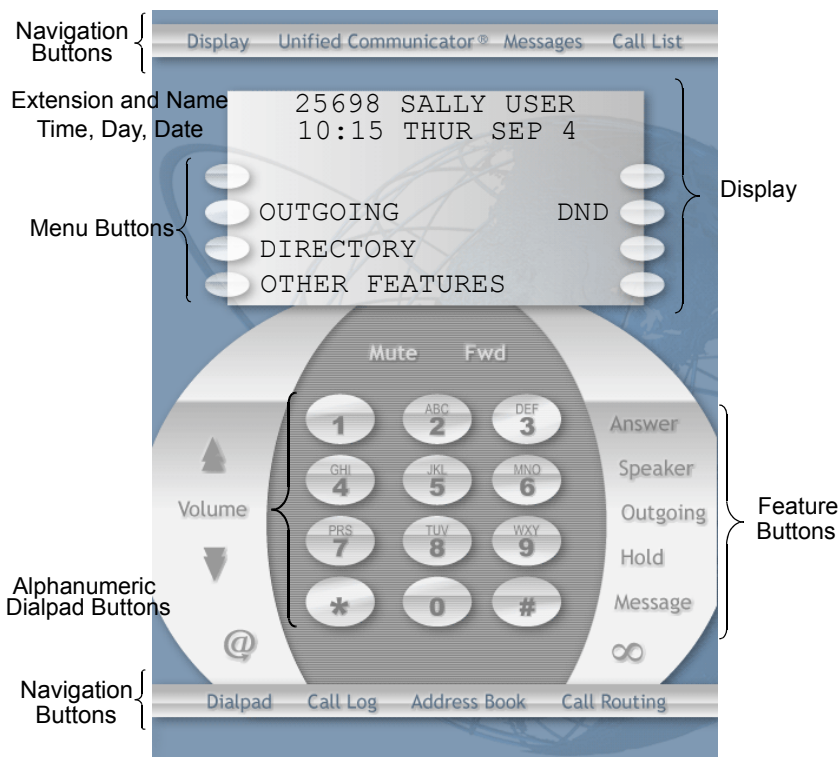

NOTE: The instructions throughout this user guide assume that you are using the stylus with the endpoint. When you are instructed to “press” an area on the screen, gently tap the appropriate area of the touch screen with the stylus.

Feature Buttons

The feature buttons are designed to automate some of the commonly-used functions, such as dialing an outside number. Each of these is described in the table below.

BUTTON	IF YOU...	YOU CAN...	PG.
Mute	Press Mute	Mute the microphone.	23
Fwd	Press Fwd	Forward your calls.	54
Answer	Press Answer	Answer a call.	46, 48
Speaker	Press Speaker	Put a call on the speaker.	23
Outgoing	Press Outgoing and dial the number	Place an outgoing call.	47
Hold	Press Hold	Put a call on hold.	50
Message	Press Message	Leave or listen to a message.	24
Volume Up Volume Down	Press the Up or Down Volume arrow	Adjust volume.	68
Auto Dial	Press the Auto Dial button (@)	Enable/disable the auto dial feature.	37

In addition to the buttons identified in the preceding table, your endpoint has a Special button (∞). Depending on how your telephone system is configured, you may need to press this button before you dial a feature code. Consult your system administrator if you have questions about how your system is configured.

Display and Menu

The six-line display area of the interface provides basic system information as well as a menu to access more advanced endpoint features. The first line of the display contains the extension and name of the user. The lower four lines of the display contain menu options that change according to the feature that you are currently using. To select an option on the menu, press the menu button closest to it. If there is only one option on a line, you can press the button on either side. (You can also select the text in the display.)

Because the menu display can only support 16 characters, you may see a few abbreviations. The most commonly used abbreviations are provided in the table below.

ABBREVIATION	WORD/PHRASE
ACCT CODE	Account Code
CNF	Conference
DEST	Destination
DIR	Directory
DND	Do-Not-Disturb
EXT	Extension
MSG	Message
RCL	Recall
SPKR	Speaker
SPKRPHN	Speakerphone
STN SPD	Station Speed Dial
SYS SPD	System Speed Dial
TFR	Transfer
TG	Trunk Group (a group of outside lines)
TRNK	Trunk (an outside line)
MISSED (number)	Missed Calls

Unified Communicator Elements




Unified Communicator (UC) is a productivity tool designed to help you manage your communication effectively. UC allows you to interact with the software through personal computers, desktop endpoints, cell phones, handheld organizers, and speech. With multiple interfaces, you can access features and functionality, no matter where you are.

The UC elements on the telephone interface consist of the system tray icon in the system tray and the navigation buttons on the telephone interface. Information about these elements appears below. For instructions on how to use UC features and options on your endpoint, see [page 95](#).

System Tray Icon

When the client application is running, the system tray icon appears in the Windows® system tray. The system tray is located in the lower-right portion of the taskbar near the clock. If you press the icon, the system tray menu is displayed. For menu options and instructions, see [page 35](#).

The system tray icon represents the current UC status as one of the following:

-  You are not currently logged on to UC.
-  You are currently logged on to UC and your status is available.
-  You are currently logged on to UC and your status is unavailable.

Navigation Buttons

The navigation buttons on the interface provide access to UC views. Pressing a navigation button highlights the button and displays the associated view. Pressing the button again closes the view. At any time, you can press the **Display** or **Dialpad** navigation buttons to return to the display or dialpad.

- Unified Communicator: Provides access to advanced UC features (see [page 98](#)).
- Messages: Displays a list of various messages (see [page 105](#)).
- Call List: Displays a list of your current calls (see [page 105](#)).
- Call Log: Allows you to view a history of your recent calls (see [page 109](#)).
- Address Book: Allows you to store and manage contact information (see [page 113](#)).
- Call Routing: Allows you to enable and disable call routing rules (see [page 119](#)).

NOTE: The names for the navigation buttons may vary slightly depending on the skin that you are using. The instructions in this user guide assume you are using the default skin (Globe).

Interface Skins

You can customize your endpoint's appearance by selecting a "skin" and applying it to the interface. All skin options include navigation buttons, a display, a dialpad, and feature buttons. Skin options for the interface are shown below.

Facets



Retro




Globe
(Default Skin)



Heavy Metal



Flower Power

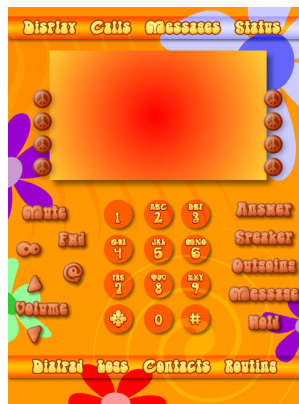


To select a skin for the interface:

1. Press the system tray icon (see [page 10](#)), then select **Options** from the menu. The Options dialog box opens to the Session tab.
2. Press the Appearance tab, then enable the **Specify alternate appearance** option.
3. Press **Browse** to navigate to the program folder where the desired skin is stored, and select the skin specification file. (The specification file has an **.xml** file extension.)
4. Press **OK**.

ABOUT THE OPERATING SYSTEM

The operating system on the Model 8690 is a customized version of Microsoft Windows CE .NET V4.2. When you first power up your endpoint, the screen remains blank for approximately 10 seconds. After this period, the Windows CE .NET desktop appears, followed by the Loading Application Appearance dialog box. This dialog box signals that the telephone application is launching. Once it has launched, the telephone interface (see [page 7](#)) covers the entire desktop except the taskbar.

 
To minimize the telephone interface and access the desktop area of the screen, press the telephone icon or the Show Desktop icon located on the taskbar, as shown below. When you minimize the interface, you have access to the desktop. To restore the interface, press either icon again.



The version of Windows CE .NET running on the Model 8690 has been customized specifically for the endpoint. This version is different from Windows PC operating systems and Windows handheld/mobile device operating systems. When using Windows CE .NET, you may notice the following differences:

- The Windows Viewer applications that are included in the operating system do not have the full functionality that their counterparts do on Windows PC operating systems. These applications include Word, Excel, PowerPoint, Media Player, and Internet Explorer.
- A range of applications, tools, and functionality normally included in PC operating systems, such as Microsoft Outlook[®], administrator tools, fonts, etc., are not included with Windows CE .NET.
- Some applications will not work with Windows CE .NET. Before running an application, make sure it is compatible with Windows CE .NET.
- Because Windows CE .NET has limited RAM available for executing programs, you may experience much slower processing times than you are accustomed to on your desktop PC.

Input Panel

The operating system includes an on-screen keyboard function called the Input Panel. When a feature requires you to enter characters, the Input Panel pops to the front of the screen. To access the Input Panel, press the Input Panel icon () located in the far-right corner of the taskbar. Then select **LargeKB** (large keyboard). You can relocate the Input Panel by pressing the title bar with the stylus and dragging it to another area of the screen. To hide the Input Panel, press the Input Panel icon and then press **Hide Input Panel**.

If you connect an external keyboard to your endpoint (see [page 5](#)), it is recommended that you disable the Input Panel.

To disable the Input Panel:

1. Press Start - Settings - **Control Panel**.
2. Double-press **Input Panel**.
3. Disable the **Allow applications to change the input panel state** option.
4. Press **OK**.
5. Save the registry (see [page 14](#)).

System Memory and Storage

The Model 8690 ships with 128 MB of RAM and 64 MB of flash RAM. The telephone application is pre-loaded on the device, and you have approximately 5 MB of RAM available for use.

CAUTION

The Model 8690 does not have a built-in hard drive. **Storage memory will not survive a reset or an upgrade to the operating system unless the files are stored in the Mounted Volume folder on the endpoint (My Computer\Mounted Volume) or on a host that is accessible from the Model 8690.** Desktop shortcuts and any preferences that have not been saved in the registry (including UC preferences) will be lost if you upgrade the operating system or if the endpoint resets.

You can view the available amount of system memory using the System Properties dialog box. System memory is divided into Storage Memory (see caution above) and Program Memory. Program Memory is used for executing programs.

To view system memory:

1. Press Start - Settings - **Control Panel**.
2. Double-press **System**.
3. Select the Memory tab.

NOTE: While using the Memory tab, you can re-assign the system memory. Check with your network administrator before adjusting this.

System Registry

The information stored in the Windows CE .NET registry is not accessible. The registry contains a number of settings and preferences that are saved in two separate locations for backup purposes.

To safeguard registry settings, it is recommended that you save the registry after you make changes to operating system preferences using the Control Panel, and to UC preferences using the system tray menu. If the endpoint loses power during a registry update, the registry will be destroyed. However, the last saved version of the registry can be recovered upon reboot.

Saving the registry takes approximately 60 seconds to complete. To avoid locking up the endpoint, do not make additional changes to your preferences until the “Registry Saved Successfully” dialog box is displayed.

NOTE: Normally, the endpoint should remain powered on at all times. If your system or network administrator tells you to power off your endpoint, it is recommended that you save the registry first.

To save registry settings:

1. Press Start - Programs - **Save Registry**.
2. Press **Yes** to save registry settings.

When the “Registry Saved Successfully” message appears, press **OK**.

Operating System Help

A help file is provided with the Windows CE .NET operating system and can be accessed under the Start menu. The information in this file is provided by Microsoft and is limited to Windows CE .NET and the viewer applications that come with the operating system. Because the operating system has been customized, some of the information provided in this file may not apply to your endpoint. See [page 41](#) for more information about accessing the help files created specifically for the telephone and UC.

ABOUT VOICE MAIL

Voice mail is an application that is part of the Inter-Tel voice processing system. Using voice mail, you and other callers can send and receive recorded messages from any supported endpoint on the system. To use voice mail features, each user (or subscriber) is assigned a mailbox, which usually corresponds to the extension number assigned to your endpoint. You can, however, have an unassociated mailbox that does not correspond to an extension. (Unassociated mailboxes are typically used for agents or other personnel who don't have a permanent office.)

With your mailbox, you can use personal or system greetings to let callers know if you are out of town, on a call, etc. If a caller reaches your mailbox, they can leave a message, hang up, or access an attendant. In addition, if your voice mail administrator sets up one or more “group lists” of mailboxes, you can send a message to a group of people by entering one number instead of everyone's individual mailbox number.

Inter-Tel voice mail systems support the following types of mailboxes:

- **Advanced Mailbox:** If E-Mail Reader is enabled for your mailbox, you have access to voice mail, e-mail, and fax messages in your mailbox. You can also customize your personal mailbox options, and access advanced messaging features. See [page 121](#) for information and instructions about using E-Mail Reader features. For a voice mail flowchart for advanced mailbox users, see [page 133](#).
- **Standard Voice Mailbox:** This type of mailbox allows you to send and receive voice mail messages, record personal greetings, and allows you to customize personal mailbox options. A standard voice mailbox does not allow you to access e-mail and fax messages. For a voice mail flowchart for standard mailbox users, see [page 151](#).

NOTE: If you have the Enterprise[®] Messaging (EM) voice mail system, you also have access to advanced communication and messaging features such as E-Mail Reader and Automatic Speech Recognition (ARS). For more information about EM, see [page 17](#)

The instructions for many voice mail tasks are identical for standard voice mailbox and advanced mailbox users. The instructions for the following common mailbox tasks are included in this section as well as the *Getting Started* and *Moving On* sections of this guide:

- Initializing your mailbox (see [page 26](#))
- Recording your personal greetings (see [page 27](#))
- Recording your voice mail directory name (see [page 28](#))
- Accessing your mailbox (see [page 29](#))
- Disabling and enabling ASR (see [page 30](#))
- Accessing voice mail messages (see [page 57](#))
- Recording and sending voice mail messages (see [page 60](#))
- Canceling unheard voice mail messages (see [page 62](#))
- Changing your mailbox password (see [page 71](#))
- Changing the call screening transfer method (see [page 73](#))
- Programming a fax destination (see [page 74](#))
- Changing the message search order (see [page 74](#))
- Programming remote messaging (see [page 75](#))
- Screening calls (see [page 82](#))
- Using the voice mail directory (see [page 87](#))

Enterprise Messaging

Enterprise Messaging (EM) is the Inter-Tel messaging system that uses industry-standard protocols for communication and messaging. EM unifies communication and messaging by providing access to voice mail, fax, and e-mail messages in your mailbox. The EM system provides voice mail users with the following advanced messaging features:

- **Automatic Speech Recognition (ASR):** ASR can be enabled for the entire system or it can be enabled for specific applications (like voice mail) or mailboxes. When ASR is enabled for your mailbox, you can issue spoken commands to navigate the voice mail menus. ASR also allows subscribers and non-subscribers to navigate automated attendant menus, call routing applications, and search the directories. ASR can be enabled for standard voice mailboxes and advanced mailboxes (see [page 15](#)). For more information about ASR, see [page 18](#).
- **E-Mail Reader:** E-Mail Reader allows you to access voice, e-mail, and fax messages from your mailbox. For e-mail messages, E-mail Reader uses Text-to-Speech (TTS) capabilities included with EM to convert the text in an e-mail message to a **.wav** file. For fax messages, E-Mail Reader announces the fax envelope. If E-Mail Reader has been enabled for your mailbox, your voice mail, e-mail, and fax messages are unified in one convenient location. For more information and instructions about how to use E-Mail Reader features, see the *Using E-Mail Reader* section, starting on [page 121](#).

Consult your voice mail administrator to see if ASR and/or E-Mail Reader is enabled for your mailbox.

NOTE: EM also includes Unified Messaging inbound and outbound faxing capabilities. For information and instructions about Unified Messaging features, see Issue 2.3 of the *Unified Messaging User Guide*, part number 550.8121.

Automatic Speech Recognition (ASR)

Automatic Speech Recognition (ASR) is a feature available for systems using EM. Because ASR is a very flexible feature, it can be enabled or disabled on several different levels. When ASR is enabled for your mailbox, you can issue spoken commands to navigate the voice mail menus. ASR also allows subscribers and non-subscribers to navigate automated attendant menus, call routing applications, and search the directories using voice commands.

When you access voice mail, if you are given the option to say a command or press a dialpad button to complete a task, then ASR is enabled for your mailbox. If you are only prompted to press a dialpad button, ASR is not enabled for your mailbox. If your mailbox is not ASR-enabled, you can still navigate the menus and perform tasks by pressing the appropriate dialpad buttons when prompted by the system.

When using ASR, follow these guidelines for best results:

- When completing a mailbox-related task, either say the command each time or press the dialpad buttons each time.
- Use the handset when issuing spoken commands. Your endpoint's speaker can pick up background noise and other sounds, which may cause the system to misinterpret a command.
- Voice mail command words are shown on display endpoints. If your endpoint has a display and you don't hear the command word when the prompt is announced, look at the display for the appropriate voice command.
- When you use the dialpad buttons to complete a task, you are sometimes prompted to press **#** to indicate to the system that you have finished entering digits. It is not necessary to say "Pound" or "Hash" when using ASR. The silence that follows your voice command replaces the **#** digit.
- While you are recording a message, ASR is temporarily disabled, therefore you cannot issue spoken commands to access options like pause and erase. If you attempt to issue a spoken command while you are recording, your recording will include the command you issued. To access the pause and erase options, you must press the appropriate dialpad buttons.
- You cannot use ASR to set up your e-mail password (see [page 125](#)). For security reasons, you must enter your e-mail password characters by pressing the appropriate dialpad buttons. Entering passwords this way prevents others from overhearing your password.
- If the system cannot interpret your voice commands for three consecutive attempts, ASR is temporarily disabled by the system for the current call. You can still complete tasks using the dialpad buttons; however, you will no longer be prompted to say a command.
- You can temporarily disable ASR for the current call by selecting option eight from the main menu.

WHAT YOU SEE AND HEAR

Your Model 8690 endpoint and the telephone system come equipped with many features. To help you understand what everything means, it is recommended that you read the following information *before* you use your endpoint:

- The endpoint has a 640x480 pixel LCD touch screen. To access the elements on the screen, use the stylus that is shipped with the endpoint. When you are instructed to “press” an area on the screen, gently tap the appropriate area of the touch screen with the stylus.
- To “right-click” an element on the screen, press and hold the stylus on an icon. A ring of black dots appears indicating a right mouse click, and the “right-click” menu appears.
- If the endpoint remains idle for more than four hours, the backlight on the screen will time out and the screen will go dark (see [page 33](#) to change the default backlight timeout). To “wake” the screen, either lift the handset or touch the screen. The display automatically “wakes” when you make or receive a call.
- To enter letters and numbers when using basic endpoint features, use the dialpad on the interface. To switch to alphanumeric mode from numeric mode, press **Message**. If the Message Indicator lamp is lit, you are in alphanumeric mode, which allows you to enter letters. If the Message Indicator lamp is unlit, you are in numeric mode and can only enter numbers and special characters. When entering letters and numbers, to backspace press **Mute** to backspace. To insert a forward space, press **Fwd**.
- The telephone application’s audio feature has priority over the operating system’s audio feature. For example, if you are running Windows Media Player to play music and your endpoint receives a call, the audio for Media Player is cut off, and audio output switches to the call. When the call ends, audio is switched back to Media Player. You can configure audio properties under Start - Settings - Control Panel - **Volume & Sounds**.
- If you hear four fast tones or repeating fast tones, you have pressed an invalid button combination, tried to select a restricted line, dialed a restricted or invalid number, dialed too slowly between digits, or waited too long before performing the next step. Hang up and try again.
- Your telephone system may be programmed for one or two dial tones. Systems with two dial tones have one for intercom calls and one for outside calls.
- Many features “time out” if you wait too long before performing the next step. If this happens, you must hang up and start over.
- Off-hook” means that the handset is lifted and “on-hook” indicates that the handset is in the cradle. For example, you must first go “off-hook” to make a call, but you must go “on-hook” to end a call.

SOFTWARE COMPATIBILITY

Depending upon which software version your telephone system is using, some of the features included in this guide may not be available for your endpoint. Check with your system administrator to see which software version your telephone system currently uses and if there are any features restrictions for your system.

Your Model 8690 endpoint is compatible with the following Inter-Tel software:

- Inter-Tel[®] 5000 system software v1.0 and later
- Axxess[®] system software v8.1 and later
- Unified Communicator[®] v2.1 and later
- Enterprise[®] Messaging v1.0 and later

GUIDELINES FOR USING THE MODEL 8690 ENDPOINT

It is recommended that you read the following guidelines before using your Model 8690 endpoint:

- Consult your system administrator and your local Inter-Tel servicing company for important information about dialing emergency services from your Model 8690 before you begin using it.
- There can only be one memory card (PCMCIA or CF) inserted when you power on the endpoint. If you use both types of memory cards, remove one card before powering up the endpoint.
- Generally the endpoint should remain powered on at all times. Do not power down the endpoint unless you are instructed to do so by your network administrator. If you are instructed to power down your endpoint, save the registry first (see [page 14](#)). If you do not save the registry, your preferences will be lost when you power down the endpoint.
- Consult your network administrator before setting options in the Advanced sub-menu (see [page 39](#)). Although you can access these options from the system tray menu, you should not use them unless your network administrator has supplied you with all of the network settings and additional information that are required.
- Periodically, the endpoint checks for software upgrades. When an upgrade is available, the Software Upgrade dialog box opens, and you are prompted to install the upgrade. **You must take certain precautions to safeguard data and preferences before performing an upgrade to the operating system.** See [page 42](#) for important information about installing software upgrades.
- To avoid a flash memory conflict, do not make or receive calls while upgrading the operating system. See [page 42](#) for important information about installing software upgrades.
- Because the Model 8690 does **not** contain a battery, any data and/or files in storage memory that are not saved in the Mounted Volume folder will be **lost** when the device loses power.
- Because the Model 8690 has a limited storage capacity, it is recommended that you save applications and data on a host, such as a desktop PC or a memory card (see [page 5](#)) that is accessible from the endpoint. For example, using a 128 MB Compact Flash memory card significantly increases the available storage on the Model 8690. Any data or files saved on the memory card will be saved even if the endpoint loses power or resets.
- Before you begin using UC on your endpoint, note that some options must be changed or implemented from the UC Web Client on your PC (see [page 97](#)). You cannot access the UC Web Client URL from your endpoint's browser.

For additional information about Windows CE .NET, go to www.microsoft.com/windows/embedded/ce.net/default.asp.

ENDPOINT BASICS

Before you begin using your endpoint, take a moment to learn how to complete basic tasks such as adjusting the angle of the endpoint, using the speaker and the microphone, and using a headset.

Adjusting Your Endpoint's Viewing Angle

Your Model 8690 endpoint has an adjustable base that allows you to tilt it to enhance the viewing angle.

To adjust the viewing angle of the endpoint:

1. Position the bottom of the endpoint's base on a flat surface.
2. Tilt the endpoint to the desired angle.
3. Place the "feet" of the support mechanism in the holes on the base to secure the position of the endpoint.

Displaying Information on Your Endpoint

Your Model 8690 endpoint has two lines of display that contain system and call information, such as the date and time or the outside party's name/number.

Date, Time, Name, and Extension Number

You can temporarily display the system date and time, your username, and your extension number at any time.

To show the date and time display (while on a call, in DND, etc.):

Press ∞ and dial **3 0 0**.

Outside Party's Name/Number

If you are currently connected to an outside caller with Caller ID, you can toggle between displaying the caller's name and number.

To show the outside party's name:

Press ∞ and dial **3 7 9**.

NOTE: If there is no outside party name available, the display shows CANNOT ACCESS FEATURE.

Using the Speakers and Microphone

If you are not using a headset, you can talk handsfree using your speakers and microphone. The microphone has a mute feature, which, when enabled, allows you to hear the other party but they cannot hear you. (This does not put the party on hold.) You can also use the speakerphone for on-hook dialing, call monitoring, and background music.

Mute Button

To mute the microphone:

Press **Mute** or the **MUTE** menu button.

To turn the mute feature off:

Press **Mute** or the **UNMUTE** menu button.

NOTE: The **Mute** button is also used to backspace when you are using the dialpad to input letters or numbers.

Group Listen Using the Speaker

With the Group Listen feature, you can transmit a conversation over the speaker while you use the handset to continue speaking. This allows other people to hear the caller while the caller can only hear you.

NOTE: You cannot use this feature on a handsfree call. You must be on a call using the handset before entering the feature code.

To turn the group listen feature on or off during a call:

Press ∞ and dial **3 1 2**. You hear a confirmation tone and the display shows GROUP LISTEN ON or GROUP LISTEN OFF. (The other party will not hear the confirmation tone.)

Using the Message Button

In today's busy world, it's almost guaranteed that someone will call you while you are on another call, away from your work station, or in DND. When this occurs, the other party can leave a message for you. When you have received a message from another party, your endpoint's Message Indicator lamp flashes. When you press **Message**, a call is automatically placed to the calling endpoint or voice mail system to retrieve the message.

When you leave a message, you can:

- **Have the called party return your call.** When the party you called responds to the message indication, a call is automatically placed to your endpoint.
- **Leave a message with the called party's message center, (which can be a person or voice mail).** When the party you called responds to the message, a call is automatically placed to his or her message center instead of your endpoint.

To indicate that a message is waiting, the **Message** button and the Message Indicator lamp flash, and the display shows the number of waiting messages.

Leaving Messages

To leave a station message while on an intercom call: Press **Message** or the **LEAVE MESSAGE** menu button and hang up.

To leave a voice mail message while on an intercom call: Press **Message** or the **LEAVE MESSAGE** menu button and wait for the message center to answer.

To leave a silent message without placing an intercom call:

1. Press **Message** and then press the **LEAVE MESSAGE** menu button.
2. Dial the desired extension number and hang up.

To cancel a message that you left at another endpoint:

1. Press **Message** and then the **CANCEL MESSAGE** menu button.
2. Dial the extension number of the endpoint where you left the message.

Retrieving Messages

To retrieve a message (Message Indicator lamp is flashing):

Lift the handset and press **Message**. A call is automatically placed to the endpoint or message center that left the message. (See [page 29](#) for information about accessing your mailbox.)

To select the message you want to answer first:

1. With the handset in the cradle, press the **VIEW MESSAGE** menu button to view the waiting message. If more than one message is waiting, scroll to the desired message using the **PREVIOUS** or **NEXT** menu buttons or press the high (up arrow) or low (down arrow) end of the **Volume** button.
2. Press the **REPLY** menu button to respond to the desired message.

To cancel a waiting message:

1. Press **Message** or the **VIEW MESSAGE** menu button to view the message to be canceled.
2. Press *** (star)** or the **DELETE** menu button to cancel the displayed message.

Using a Headset

With an electret headset, you can talk on the endpoint handsfree, without using your speaker and microphone.

NOTE: If your headset has a power-saver mode, make sure the system administrator has the Headset Connect Tone flag enabled in the telephone system. If this flag is *not* enabled, you may miss the first few seconds of incoming calls.

To connect a headset:

1. Insert the headset plug into the headset jack.
2. With the handset in the cradle, dial **3 1 5** (Headset On feature code) or dial **3 1 7** (Headset On/Off feature code). The display shows HEADSET MODE ON.

NOTE: If using a headset, press **Speaker** to connect and disconnect calls.

To disconnect a headset:

1. Unplug the headset cord from the headset jack.
2. With the handset in the cradle, dial **3 1 6** (Headset Off feature code) or dial **3 1 7** (Headset On/Off feature code). The display shows HEADSET MODE OFF.

NOTE: If you have both a headset and a handset connected to your endpoint and you are using the headset, you can quickly transfer audio to the handset by lifting the handset from the cradle. Press **Speaker** to transfer the call back to the headset before replacing the handset in the cradle.

SETTING UP VOICE MAIL

To begin using your mailbox you will need to complete a few basic set-up procedures to initialize your mailbox, customize your personal greetings, and record your voice mail directory name.

NOTE: If your telephone system uses Enterprise Messaging (EM), your mailbox may have the Automatic Speech Recognition (ASR) feature enabled. When ASR is enabled for your mailbox, you have the option of issuing a spoken command or pressing a dialpad button. See [page 18](#) for ASR guidelines.

ALSO: If your mailbox has E-Mail Reader enabled, you have an advanced mailbox. See [page 121](#) for information and instructions about using E-Mail Reader features.

Initializing Your Mailbox

To access voice mail, the first thing you need to do is initialize your mailbox. This allows you to change the default password for your mailbox, record your name for the company directories, and listen to the voice mail introduction.

To initialize your mailbox:

1. Dial the voice mail extension number. (You hear the main menu.)

NOTE: If you do not know the voice mail extension number, check with your voice mail administrator.

2. Say “Login” or press ***** to identify yourself as a subscriber.
3. Say or enter your mailbox number using the dialpad buttons.
4. Enter your default password using the dialpad buttons.

NOTE: Your mailbox number is your default password.

*If you want a password, say or enter a new password using digits 0-9 (up to 12 digits). Then press **#**. The messaging system plays back your password.*

*If you do not want to use a password, just say “Skip” or press **#**.*

5. Say “Accept” or press **#** to accept the entry or say “Erase” or press **3** to re-enter your password. The system prompts you to record your directory name.

6. After the tone, record your first and last name.
7. When prompted, do one of the following:
 - Say “Accept” or press **#** again to accept the name.
 - Say “Replay” or press **1** to replay the name you just recorded.
 - Say “Append” or press **2** to add to your name.
 - Say “Re-record” or press **3** to erase and re-record your name.

NOTE: The system then plays a prompt that introduces you to the basic voice mail system features. You can skip this introduction by saying “Skip” or by pressing **#**, if desired.

Recording Your Personal Greetings

You can store two different personal greetings in your voice mailbox: a primary and an alternate. You may change or choose to use either greeting at any time. You can then select which greeting you want played when a caller reaches your voice mailbox. Because the purpose of this greeting is to tell callers why they have reached your voice mailbox, you should include the following information:

- Whether or not you are in the office and where you can be reached
- When you will be returning calls
- For callers who do not wish to leave a message, how to exit voice mail (press **0** to return to the operator)

The following are some sample greetings to help you plan your message:

- **Primary Greeting:** Hello, this is _____. I am either on another line or away from my desk and cannot take your call at this time. If you need to speak to someone immediately, please dial zero now. Otherwise, leave a detailed message, and I will return your call as soon as possible. Thank you.
- **Alternate Greeting:** Hello, this is _____. I will be away from the office from *day/date* until *day/date*. If you need to speak to someone immediately, please dial zero now. Otherwise, leave a detailed message, and I will return your call when I return. Thank you.

You can also select the **System Greeting** if you do not want to record a primary or alternate greeting. The system greeting states, “Mailbox number (xxxxx) is not available.” Depending on how your system is programmed, the system greeting may also include, “After the tone, please record your message. When finished, you may hang up to deliver the message or press pound for more options.”

To record/change your personal greeting:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Greeting” or press **1** to record/change your personal greeting.
4. Do one of the following:
 - Say “Primary” or press **1** to record and/or enable your primary greeting.
 - Say “Alternate” or press **2** to record and/or enable your alternate greeting.
 - Say “System” or press **3** to enable the system default mailbox greeting.
5. *If you selected the system greeting option, hang up.*
*If you selected the primary or alternate greeting option, record your greeting when prompted, then press **#**.*
If you already have a primary or alternate greeting, it is played when you select primary or alternate.
 You can then do one of the following:
 - Say “Accept” or press **#** to accept the greeting.
 - Say “Replay” or press **1** to replay the greeting.
 - Say “Append” or press **2** to add to the greeting.
 - Say “Erase” or press **3** to erase and re-record the greeting.
 - Say “Cancel” or press ***** to exit without changing your greeting.
6. Hang up.

Recording Your Voice Mail Directory Name

Your recorded name is used to identify you in the voice mail directory and to verify your mailbox number when messages are addressed to you. Although you record your name when you first initialize your mailbox, you can change it at any time.

To record your directory name:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Name” or press **2**. Your current name is played.
4. Do one of the following:
 - Say “Accept” or press **#** again to accept your recorded name.
 - Say “Replay” or press **1** to replay your recorded name.
 - Say “Append” or press **2** to add to your name.
 - Say “Erase” or press **3** to erase and re-record your name. When you hear a tone, record your first and last name. Then say “Accept” or press **#** to accept your recorded name.
5. Hang up.

ACCESSING YOUR MAILBOX

If you have a message waiting in your mailbox, you must access your mailbox to retrieve it.

NOTE: If your telephone system uses Enterprise Messaging (EM), your mailbox may have the Automatic Speech Recognition (ASR) feature enabled. When ASR is enabled for your mailbox, you have the option of issuing a spoken command or pressing a dial-pad button. See [page 18](#) for ASR guidelines.

ALSO: If your mailbox has E-Mail Reader enabled, you have an advanced mailbox. See [page 121](#) for information and instructions about using E-Mail Reader features.

When you access your mailbox, depending on the voice processing system, enabled features, and mailbox status, you may hear one of the following messages:

- **Mailbox almost full or full:** If your mailbox is full, no new messages can be received until you delete waiting or saved messages.
- **Quota grace limit reached:** The quota grace limit is an EM feature. If this feature is enabled, it allows a mailbox to “overflow” beyond normal capacity. When the quota grace limit has been reached, this announcement is played.
- **Message count and type:** The system announces the number of new and/or saved messages that are in your mailbox. The system also informs you if the messages are priority messages. If E-Mail Reader is enabled for your mailbox, the media type is indicated.
- **Remote Messaging:** The system indicates if the Remote Messaging feature is enabled (see [page 75](#)). It also alerts you if a programming error has been detected when attempting to place a Remote Messaging call.

To access your mailbox:

1. Dial the voice mail extension number. (You hear the main menu.)
2. During or after the greeting, say “Login” or press ***** to identify yourself as a subscriber.
3. Say or enter your mailbox number.
4. Enter your mailbox password (if programmed), then press **#**. If you do not have a password, press **#** to bypass the password prompt. See [page 71](#) for information on programming passwords.

NOTE: Generally, saying “Skip” or pressing **#** during any voice mail operation will advance you to the next step. For example, when leaving a voice mail message for another voice mail user, you can say “Skip” or press **#** to skip the person’s introductory message and proceed directly to the recording phase. Similarly, while listening to messages, you can say “Skip” or press **#** to skip the system-generated voice prompts and proceed directly to the playback phase. Also, at any menu level, you can say “Cancel” or press ***** to cancel or return to the previous menu.

DISABLING AND ENABLING ASR

If your telephone system uses Enterprise Messaging (EM), your mailbox may have the Automatic Speech Recognition (ASR) feature enabled. When ASR is enabled for your mailbox, you have the option of issuing a spoken command or pressing a dialpad button.

If your environment prevents you from using ASR, you can temporarily disable it by accessing option number eight on the main subscriber menu. This option disables ASR for that particular call only.

Option number eight is used as a toggle, and you can re-enable ASR by pressing the number eight again on the main subscriber menu only. Also, if you press a dialpad button at the main subscriber menu to access mailbox functions, ASR is automatically turned off and will remain off for the rest of the call.

For ASR guidelines, see [page 18](#).

NOTE: If your mailbox has E-Mail Reader enabled, you have an advanced mailbox. See [page 121](#) for information and instructions about using E-Mail Reader features.

To temporarily disable ASR:

1. Access your mailbox as described on [page 29](#).
2. Say “Disable” or press **8** to disable ASR for the call.

NOTE: To enable ASR after disabling it, press ***8** until you are back at the main menu. Press **8** to enable ASR.

Getting Started

SECTION CONTENTS

PAGE

Introduction	32
Calibrating the Screen	32
Setting Backlight Options	33
Configuring VLAN Ports	34
Using the System Tray Menu	35
Setting Options	35
Adding a .NET Passport	39
Using Advanced Options	39
Using Help	41
Installing Software and Firmware Upgrades	42
Firmware Upgrades	42
Telephone Client Application	42
Operating System	43
Installing a New Version of Software or Firmware	44
Making and Receiving Calls	45
Intercom Calls	45
Outside Calls	47
Emergency Calls	49
Call Waiting	49
Placing Calls On Hold	50
Placing Conference Calls	51
Transferring Calls	52
To Another Extension	52
To Voice Mail	52
To an Outside Number	52
Using Reverse Transfer	53
Forwarding Calls	54
Manual Call Forwarding	54
System Forwarding	55
Redirect Call	55
Redialing a Number	56
Accessing Voice Mail Messages	57
Listening to Messages	57
Recovering Deleted Voice Mail Messages	59
Recording and Sending Voice Mail Messages	60
Canceling Unheard Voice Mail Messages	62
Using Do-Not-Disturb Mode	63
Using Reminder Messages	65

INTRODUCTION

Now that you know what your endpoint can do, it's time to start using it. In this section, you'll learn how to make and receive calls, transfer calls, retrieve voice mail messages, and much more. Most of the features in this section do not require the endpoint to be logged on to UC. For instructions on how to use UC advanced features on your endpoint, see [page 95](#).

For additional information about client application and operating system options and settings, see the *Model 8690 Administrator's Guide*.

CALIBRATING THE SCREEN

Before using the touch screen, it is important to calibrate it. Calibration ensures the display interprets the stylus presses accurately. These settings are stored in the Windows CE .NET registry and may need to be configured again if the registry is lost or reset.

To test and calibrate the screen:

1. Press Start - Settings - **Control Panel**.
2. Double-press **Stylus**.
3. Test your settings using the icons on the Double-Tap tab.
4. If the screen does not respond to your presses properly, press the Calibration tab.
5. Press **Recalibrate**.
6. Press and hold the stylus on the center of the target in every position on the screen.
7. Tap the screen to save the settings in the registry.
8. Press **OK**.

SETTING BACKLIGHT OPTIONS

To save power and extend the life of the display, you can set an option that will automatically shut off the display's backlight. When the endpoint remains inactive for the specified amount of time, the display automatically goes into "sleep" mode and the screen goes dark. To "wake" the screen, either lift the handset or touch the screen. An incoming call or input from an external mouse or keyboard will also "wake" the screen.

The default backlight timeout is four hours. You can select a different backlight timeout as explained below.

NOTE: UC Message alerts (see [page 119](#)) and status alerts (see [page 120](#)) do not "wake" the screen, however software upgrade prompts (see [page 42](#)) do.

To change the default value for the backlight timeout:


1. Press Start - Settings - **Control Panel**.
2. Double-press **Display**.
3. Select the Backlight tab.
4. Select the **Automatically turn off backlight while on external power** option.
5. Select the amount of time you want the endpoint to remain idle before the backlight turns off. Timeout choices include:
 - 1 minute
 - 2 minutes
 - 5 minutes
 - 10 minutes
 - 15 minutes
 - 30 minutes
 - 1 hour
 - 4 hours
6. Press **OK**.

CONFIGURING VLAN PORTS

To improve voice quality and security, your network administrator may place your endpoint in a Virtual Local Area Network (VLAN).

A VLAN is a network of computers that behave as if they are connected to the same wire, even though they may be physically located on different segments of a LAN. VLANs minimize congestion on the network because they allow voice and data to be routed more efficiently. If your endpoint resides on a VLAN, your network administrator may instruct you to program the VLAN ID for the ports.

NOTE: Do not configure the VLAN ID for your endpoint unless instructed to do so by your network administrator.

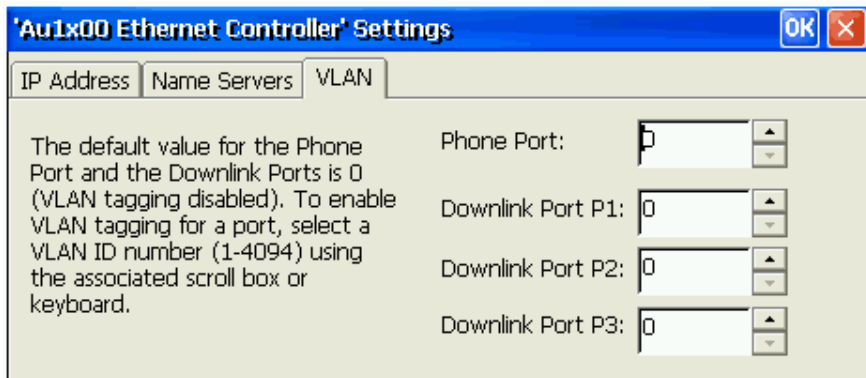

To configure VLAN IDs for the ports:

1. Press Start - Settings - **Control Panel**.
2. Double-press **Network and Dial-up Connections**.
3. Double-press **AUMAC1**. The 'AU1x00 Ethernet Controller' Settings dialog box opens as shown above.
4. Select the VLAN tab.
5. Select the VLAN ID number (supplied by your network administrator) for the Phone Port and the Downlink Ports using the associated scroll buttons.
6. Press **OK**.
7. Save the registry (see [page 14](#)).

USING THE SYSTEM TRAY MENU

To access the system tray menu, press the system tray icon (see [page 10](#)) to display the menu. Menu-accessible options are discussed throughout this section.

Setting Options

The system tray menu provides access to the Options dialog box, which allows you to set options for your client application. The Options dialog box contains the Session, Appearance, Behavior, Advanced and About tabs. These tabs have options you can set and information about the endpoint.

The following instructions explain how to set the available options in the Options dialog box. Some of these settings require information you must obtain from your network administrator. To open the Options dialog box, press the system tray icon, then select **Options** from the menu. The Options dialog box opens to the Session tab.

Session Tab

To set or edit options on the Session tab:

1. Enter the **Web Address** that you use to access UC.
2. Enter your account **Username**. (This is the same username that you use to log on to UC on your desktop PC.)
3. Enter your account **Password**. (This is the same password that you use to log on to UC on your desktop PC.)
4. Enable the **Automatically log on** option if you would like UC to launch without having to enter the Web address, username, and password information.

If this option is enabled, the application will not prompt you for Web address, username and password information, unless you have not already provided it or the logon fails.

NOTE: Enabling the **Automatically log on** option will not automatically launch UC. See [page 96](#) for instructions on how to log on to UC.

5. Press **OK** in the upper-right corner of the Options dialog box or select another tab to edit.

NOTE: Check with your network administrator before changing these fields.

Appearances Tab

To set or edit options on the Appearance tab:

1. Select **Specify alternate appearance** to change the default skin (see [page 11](#)).
2. Select the UC functions where you would like to use large icons. You may want to use large icons so that screen items are easier to read. However, less information will be displayed. Options include:
 - Search Results (see [page 99](#))
 - Messages (see [page 104](#))
 - Call List (see [page 105](#))
 - Call Log (see [page 109](#))
 - Address Book (see [page 113](#))
 - Call Routing (see [page 119](#))
3. Press **OK** in the upper-right corner of the Options dialog box or select another tab to edit.

Behavior Tab

To set or edit options on the Behavior tab:

1. If desired, change the endpoint's ring from the default:
 - a. Enable **Specify custom ring**.
 - b. Press **Browse** to navigate to the folder where **.wav** files are stored. Select from a list of **.wav** files you want to use. The **.wav** files must be in the following format: PCM 11.025 kHz, 8 Bit, Mono.
 - c. Press **OK**.
2. Enable or disable the option for the client application to be displayed using the **Display window when** field. Select from the following options:
 - Phone goes off-hook (when you lift the handset or press **Speaker**)
 - Incoming call received (when your endpoint receives a call)
3. Enable or disable the option to display alert messages using the **Show alerts when** field. An "alert" is a system tray popup window that draws your attention to specific events. Select from the following options:
 - I receive a new message
 - The status of a contact in my speed-dial list changes
 - I receive a new call

NOTE: Alerts are only shown when you are logged on to UC.

4. Enable or disable the **Flash message lamp for new messages** option.
5. Press **OK** in the upper-right corner of the Options dialog box or select another tab to edit.

Advanced Tab

To set or edit options on the Advanced tab:

1. Enable or disable the **Auto Dial** option. If you enable this option, you must provide a telephone number. When Auto Dial is enabled the @ symbol is highlighted. Pressing the @ symbol quickly enables/disables the Auto Dial option. When Auto Dial is enabled, picking up the handset dials the number you chose for the Auto Dial option.

NOTE: Typically, you would enter the extension of the Unified Communicator telephone client (or an attendant) in this field. When the telephone auto dials the UC telephone client, you can use the UC Voice User Interface (VUI) to issue voice commands such as, “Call Bob Smith” to make calls. Check with your network administrator to obtain your system’s telephone client number. You must enable the auto-logon option (using the Web Client - My Account link - Advanced tab options) to use the Auto Dial option to dial the Unified Communicator telephone client.

2. Enter the number for the **Backup Number** option.

NOTE: This field allows you to specify a backup telephone number that the endpoint will automatically dial when you go off hook if the Windows CE .NET subsystem is down. Typically, you would enter a telephone number (such as the attendant’s) in this field. If “0” is not the number you use to reach an attendant or operator, then provide the number here. Check with your network administrator to obtain your system’s backup number.

3. Enter the maximum amount of disk space in KB that you want to allocate for endpoint diagnostic files on the Windows CE .NET subsystem. By default, this is 200 KB, but is limited by the amount of available RAM on the endpoint.

NOTE: Check with your network administrator before changing this field. If this field value is set too high, the endpoint may run out of available memory.

4. Enable or disable the following options:

- **Log to file:** Diagnostics are logged to a file stored in the My Computer folder on the endpoint. This option is ON by default.

NOTE: This file is stored in an area of the file system that will be lost if you reset the endpoint. If you are asked to provide this file to technical support, either copy the file off of the device, or copy the file to the Mounted Volume folder (My Computer\Mounted Volume) before resetting the endpoint.

- **Log to telephone system:** Diagnostics are logged to a location on the system. This option is OFF by default.
- **Log extended information:** Additional diagnostic information is logged. This option is usually only enabled when a network administrator needs to troubleshoot endpoint issues. Enabling this option may affect client application performance.

NOTE: Check with your network administrator before changing these fields.

5. Press **OK** in the upper-right corner of the Options dialog box to save and apply your selections.

About Tab

The About tab contains read-only and copyright information about your endpoint. This information includes:

- Model number (Model 8690)
- User Interface Version
- Firmware Version
- Operating System Version

Adding a .NET Passport

NOTE: This option is only available when you are logged on to UC.

Microsoft Passport is a “universal login” service that allows users to log in to many Web sites using one account. Working with .NET Messenger service, passport holders can also send messages online or through the telephone system if it is configured to handle calls from this type of endpoint. Ask your network administrator if your telephone system is configured to handle .NET Messenger calls.

NOTICE

At the time of this publication, Microsoft had disabled connectivity to the MSN network for third-party products like Unified Communicator, in preparation for a licensing model which had not yet been disclosed. Currently, the .NET Passport dialog box allows you to enter information, but the **functionality has been disabled**. When Inter-Tel is able to determine licensing requirements (if any) and how that will affect the future functionality of this product, the documentation will be updated accordingly.

To add passport information:

1. Press the system tray icon, then select **Passport from the menu**.
2. Enter your .NET passport **Username** and **Password** in the fields provided.
3. Enable **Handle passport calls**.
4. Press **OK**.

Using Advanced Options

This section details how to use the advanced options available on your client application. Instructions for advanced options are located in the *Model 8690 Administrator's Guide* (part no. 550.8120) and the *IP Devices Installation Manual* (835.2195). It is strongly recommended that you check with your network administrator before using advanced options.

CAUTION

Consult your network administrator before setting options on the Advanced sub-menu. Although you can access these options from the system tray menu, you should not use them unless your network administrator has supplied you with all of the network settings and additional information that are required.

Auto Upgrade and Pending Upgrades

Although your endpoint automatically checks for upgrades, you can run the Auto Upgrade feature using the Advanced option on the system tray menu. If there are no new upgrades available, you will not be notified, and your endpoint will function normally. If there is an upgrade available, the Software Upgrade dialog box opens, and you are prompted to install the upgrade. You can choose to install the upgrade immediately by pressing **OK** or set a reminder to install it later (see [page 44](#)).

To run the Auto Upgrade feature:

1. Press the system tray icon, then select Advanced – Auto Upgrade – **Check for New Versions**. The upgrade search dialog box opens.
2. Press **OK** to allow the system to search for software upgrades. You are not informed if upgrades are *not* available.

In addition to running the Auto Upgrade feature, you can view, install, or cancel pending upgrades using the Advanced options.

To view and install pending upgrades:

1. Press the system tray icon, then select Advanced – Auto Upgrade – **Pending Upgrades**. The Pending Upgrades dialog box opens and displays the status for the following:
 - Firmware
 - Phone Application
 - Operating System

NOTE: The **Upgrade Now** option indicates a pending software upgrade.

2. Press **Upgrade Now** next to the upgrade you want to install. There is one button for each upgrade type.
3. When the Software Upgrade dialog box opens, press **OK** to install the upgrade.

To cancel pending upgrades:

1. Press the system tray icon, then select Advanced – Auto Upgrade – **Pending Upgrades**. The Pending Upgrades dialog box opens and displays the status for the following:
 - Firmware
 - Phone Application
 - Operating System
2. Press **Cancel** next to the upgrade that you want to cancel. There is one button for each upgrade type.
3. Press **OK**.

Station Password

NOTE: This option is only available when you are logged on to UC.

The station password allows you to quickly add your endpoint as a device to UC.

To set the station password:

1. Press the system tray icon, then select Advanced – **Set Station Password**.
2. Enter your old password.
3. Enter a new password.
4. Enter the new password again to confirm it.
5. Press **OK**.

Default Configuration

The Default Configuration option restores the endpoint configuration to its default state. When this option is selected, your network administrator will need to reconfigure the network settings on your endpoint if they differ from the default. In addition, you will need to re-enter your UC login information on the Session tab of the Options dialog box, as indicated in the following instructions.

NOTE: Do not select the Default Configuration option unless you are instructed to do so by your network administrator.

Self Test

The Self Test option is used as a diagnostics tool by your network administrator. The self test can help determine if the endpoint is operating properly.

NOTE: Do not select the Self Test option unless you are instructed to do so by your network administrator.

Setup Wizard

The first time your network administrator runs the client application on your Model 8690, the setup wizard automatically launches. Once the endpoint setup is complete, the wizard will not run again unless you default the endpoint.

NOTE: Do not select the Setup Wizard option unless you are instructed to do so by your network administrator.

Using Help

The system tray menu includes a **Help** option for access to telephone and UC user information. Pressing **Help** opens the online help file. Navigate to the appropriate area of the help file for assistance.

INSTALLING SOFTWARE AND FIRMWARE UPDATES

Your endpoint may be configured to download software and firmware updates from a configured server automatically. If so, your endpoint will periodically check the server to see if any updates are available. When an update is available, the endpoint downloads it automatically. The Auto Upgrade option (see [page 40](#)) on the Advanced submenu allows you to manually search for new software versions, and access pending upgrades.

The upgrade process is explained in the following sections.

Firmware Upgrades

Your endpoint comes pre-installed with Inter-Tel-provided firmware that allows it to communicate with the telephone system. Firmware is software that is embedded in a hardware device (e.g., your endpoint) that allows it to operate. Endpoints may require updates when a new version of software or firmware is available.

When the endpoint downloads a new firmware version, you are notified that the upgrade is starting, and the client application continues to run. You can monitor the progress of the upgrade on the six-line display. When the upgrade is complete, the endpoint resets and returns to normal operation.

Telephone Client Application

When the endpoint downloads a new version of the telephone client application, the application exits and the upgrade application launches. The upgrade application downloads the new version of the client application from the TFTP server, and you can monitor the download progress. When the download completes, the upgrade application launches the Windows CE .NET installation mechanism and installs the new client application version. At this point, you are prompted for where you would like to install the new files (the default is \\Mounted Volume\8690 Phone). Press **OK** to continue with the installation. Press **Yes** when prompted to overwrite existing files. You are notified when the upgrade is complete. The upgrade application launches the new version of the client application and then exits

CAUTION

Do not press **Cancel** when the installation dialog box prompts you where you would like to install the new files. At this point the previous client application has been deleted and if you cancel the upgrade, you will need to contact your network administrator to manually reinstall the client application. Also, do not change the default location (\\Mounted Volume\8690 Phone) specified in the installation dialog box. The client application must be installed in the Mounted Volume folder to survive a reset or an upgrade to the operating system.

Operating System

When a new version of the operating system is downloaded, the client application exits, and the upgrade application launches. An upgrade of the operating system takes approximately 30 minutes to complete.

CAUTION

It is imperative that you do not interrupt the operating system process before it completes. **Do not disconnect the endpoint from its power source or attempt to use the endpoint during the download process. These actions may cause serious damage to the endpoint, and the endpoint may need to be shipped back to Inter-Tel for repair.**

The upgrade application erases the existing version of the operating system from the persistent memory. Upon completion, the upgrade application downloads the new version of the operating system from the TFTP server. As the new version of the operating system is downloaded, it is simultaneously written to persistent memory, and you can monitor the progress. When the download and installation completes, you are notified and the endpoint resets. The registry settings are lost when the operating system is upgraded. This means that certain client application settings stored in the registry are lost as well. These include the session and diagnostic options.

Installing a New Version of Software or Firmware

When an upgrade is available, the Software Upgrade dialog box opens, and you are prompted to install the upgrade. To install the upgrade immediately, press **OK**. To install the upgrade later, you can set a reminder (see instructions below). When the reminder timer has expired, the Software Upgrade dialog box automatically prompts you to install the pending upgrade.

CAUTION

The Model 8690 does not have a built-in hard drive. Desktop shortcuts, and any preferences that have not been saved in the registry (including UC preferences) will be lost if you upgrade the operating system or if the endpoint resets. **Storage memory will not survive a reset or an upgrade to the operating system unless your data is stored in the Mounted Volume folder on the endpoint (My Computer\Mounted Volume) or on a host that is accessible from the Model 8690.**

To set a reminder to install an upgrade:

1. On the Software Upgrade dialog box, set the reminder timer using the drop-down box. Your options are:
 - **1 hour**
 - **1 day**
 - **3 days**
2. Press **Remind Me Later**. When the specified time has elapsed, the Software Upgrade dialog box opens, and you are prompted to install the pending upgrade.

MAKING AND RECEIVING CALLS

Making and receiving calls is the basic purpose of any endpoint. With your Model 8690 endpoint, you can make/receive intercom and outside calls and make emergency calls.

CAUTION

Consult your system administrator and your local Inter-Tel servicing company for important information about dialing emergency services from your Model 8690 endpoint before you begin using it.

Intercom Calls

Your extension number allows other people to place intercom calls to you, without dialing any extra codes. And, because every endpoint in your system is assigned an extension number, you can call other people in your system quickly and easily.

NOTE: Ask your system administrator for a list of extensions.

Placing Intercom Calls

To place an intercom call:

1. With or without the handset lifted, dial an extension number.
2. *If your call goes through handsfree to an endpoint's speaker, speak after you hear a double tone.*

If you hear continuous ringing, wait for the call to be answered.

The system allows you to place a call that will force the extension you are calling to ring.

To place a call that will ring at the other endpoint until answered:

Press **#** before dialing the extension number.

NOTE: Dialing **#** before the extension number forces the called extension to ring and overrides the handsfree option.

To program your endpoint to *always* send non-handsfree calls using the Ring Intercom Always feature:

With the handset in the cradle, dial **3 7 7**. The current status is shown.

If there is no answer or if the endpoint is busy when you place an intercom call, you can do any of the following:

- **To leave a station message:** Press **Message** or the **LEAVE MESSAGE** menu button and then hang up.
- **To leave a voice mail message:** Press **Message** or the **LEAVE VOICE MAIL** menu button and wait for the message center to answer.

NOTE: This option is only available if the called endpoint has a voice mailbox.

- **To camp onto a busy extension:** Stay on the line and wait for the endpoint to become available. Do not hang up. After the system timer expires, you hear music until the endpoint is available.

NOTE: You cannot camp on to an endpoint if it is in DND mode.

- **To request a callback (queue on to the endpoint):** Press **6** and hang up. When the endpoint is available, your endpoint rings. (To cancel the queue request before the callback, press **6**.)

Receiving Intercom Calls

Your endpoint can receive both intercom and non-handsfree intercom calls. If the handsfree feature is enabled on your endpoint, intercom calls are automatically answered. Non-handsfree intercom calls (see [page 45](#)) override the handsfree option.

If your handsfree feature is disabled, or if you receive a non-handsfree intercom call, you must pick up the handset or press the **Answer** button to answer the call.

When you use Unified Communicator to route incoming calls to your endpoint, calls will always ring the endpoint, even if you have chosen to use the handsfree feature. Without this initial ring, your endpoint would terminate the routing of the call, potentially preventing you from receiving the call on a cell phone or other device while you are away from your desk.

To enable or disable your endpoint's handsfree answering feature:

With the handset in the cradle, dial **3 1 9**.

To receive an intercom call:

If the handsfree feature is enabled, the call is automatically answered.

If the handsfree feature is disabled, either press the **Answer** button to answer the call, or lift the handset for privacy.

To receive a non-handsfree intercom call:

EITHER, Press the **Answer**.

OR, Lift the handset for privacy.

NOTE: You must lift the handset if the caller has the Ring Intercom Always feature (377) enabled.

Instead of answering a ringing call, you can press one of the following menu buttons:

- **SEND TO V-MAIL:** Sends the call directly to your voice mailbox. You will not see this option if you do not have a mailbox.
- **IC CALL TO DND:** Places your endpoint in DND mode and blocks the call. (See [page 63](#) for more information about DND mode.)
- **SEND TO DEST:** Redirects the call to the intercom or outside number that you enter. (See [page 55](#) for more information about the Redirect Call feature.)

Outside Calls

With outside calls, you can talk to people who aren't members of your telephone system. When you make an outside call, however, you must dial any area codes or long distance digits that your telephone company requires.

Placing Outside Calls

To place an outside call:

1. With or without the handset lifted, press **Outgoing** or the **OUTGOING** menu button.
2. Dial the desired number.

NOTE: If you see a request for an account code and hear a single beep, you must dial an account code before you can place your call (see [page 81](#)).

Depending on how your system is programmed, you may be able to use one of the following methods to select an outgoing line, instead of pressing the **Outgoing** button:

- Dial the Outgoing Call access code (default is **8**).
- Dial a Select Line Group access code (defaults are 92001-92208).
- Dial the Automatic Route Selection (ARS) access code (default is 92000).

NOTE: Check with your system administrator to see if your system uses customized feature/access codes, or if the auto dial feature (see [page 37](#)) allows you to dial out directly.

To request a callback (queue on to the line) if all outgoing lines are busy when you try to call out:

When you hear busy signals, press **6** and hang up. When the line is available, your endpoint rings.

To cancel the queue request before your endpoint rings:

Press **6**.

When dialing the number, you can press one of the following menu buttons:

- **OUTSIDE DIR:** Selects the speed-dial directory. (See [page 84](#).)
- **STN SPEED DIAL:** Selects the Station Speed-Dial feature. (See [page 77](#).)
- **SYS SPEED DIAL:** Selects the System Speed-Dial feature. (See [page 79](#).)
- **REDIAL:** Redials the last outside number you dialed. (See [page 56](#).)

Receiving Outside Calls

To receive an outside call:

EITHER, Lift the handset.

OR, Press **Answer** or the **ANSWER** menu button.

Instead of answering a ringing call, you can press one of the following menu buttons:

- **SEND TO V-MAIL:** Sends the call directly to your voice mailbox. This option is not available if you do not have a mailbox.
- **SEND TO DEST:** Redirects the call to the intercom or outside number that you entered. (See [page 55](#) for more information about the Redirect Call feature.)

Emergency Calls

With Inter-Tel communication systems, you do not have to access an outside line (press the **Outgoing** menu button) to dial an emergency number.

To make an emergency call:

Dial **9 1 1**. A call is automatically placed to the preset emergency number

CAUTION

Consult your system administrator and your local Inter-Tel servicing company for important information about dialing emergency services from your Model 8690 endpoint before you begin using it.

NOTE: Dial **9 9 9** in Europe for emergency services.

Call Waiting

If you receive a call while you are already on another call, you will hear a “call waiting” tone.

To respond to a waiting call (you hear a single tone):

End your current call, place it on hold, and/or use one of the following menu buttons:

- **ANSWER:** Answers the ringing call. If you did not place the current call on hold, it is disconnected.
- **SEND TO V-MAIL:** Sends the call directly to your voice mailbox without interrupting the current call. (You will not see this option if you do not have a mailbox.)
- **IC CALL TO DND:** Places your endpoint in DND mode and blocks the call without interrupting the current call. (See [page 63](#) for more information about DND mode.)

PLACING CALLS ON HOLD

You can place calls on hold in one of two ways: individual or system.

- **Individual Hold** places the call on hold at one endpoint. It can then be directly picked up at that endpoint or it can be picked up at another endpoint using the Call Pickup (Reverse Transfer) feature (see [page 53](#)).
- **System Hold** places the call on hold in the system. You can then pick up the call at any endpoint that has a flashing button for the call, including the endpoint that placed it on hold.

NOTE: You cannot place intercom calls on system hold.

To place a call on Individual Hold:

1. Press **Hold**.
2. Hang up or place another call.

To place an outside call on System Hold:

1. Press ∞ and dial **3 3 5**.
2. Hang up or place another call.

To return to a call that is on hold:

Lift the handset and press **Hold**.

PLACING CONFERENCE CALLS

With the Conference feature, you can establish a conference call with up to three intercom and/or outside parties (four, including you).

To place a conference call:

1. While on the first call, press the **CNF** menu button to put the call on hold.
2. Place another intercom or outside call.
3. Press the **CNF** menu button to place the call on hold. (If necessary, repeat steps 2 and 3 to add another caller to the conference.)
4. Press the **CONNECT TO CONFERENCE** menu button to join all of the calls together in the conference.

During the conference call, you can do the following:

- **To place the conference on hold:** Press the **HOLD** menu button. This places the conference on hold without disconnecting the parties. To return to the conference, press the **CNF** menu button.
- **To drop out of the conference:** Press the **CNF** menu button and hang up. This removes your endpoint from the conference, but leaves the other parties connected.
- **To add parties to the conference:**
 - a. Press the **ADD PARTY** menu button. This leaves the conference parties connected.
 - b. Place a call to the party to be added to the conference.
 - c. Press the **CNF** menu button once, and then press **CONNECT TO CONFERENCE**. You and the new party are added to the conference.
- **To end the conference and place all parties on individual hold:** Press the **CNF** menu button and then press the **HOLD** menu button to place all of the parties on individual hold. You can then speak to one party at a time by pressing the **HOLD** menu button.
- **To mute your microphone:** Press the **MUTE** menu button. This turns your microphone on or off during the conference. If mute is enabled, you can hear the conferenced parties, but they cannot hear you.
- **To transfer the conference to another extension or to voice mail:** Press the **TRANSFER CNF** menu button and dial the desired extension number. Then hang up when you are ready to complete the transfer.

TRANSFERRING CALLS

Although transferring calls is considered a basic function of an endpoint, the Model 8690 endpoint has many advanced options for this feature. With your endpoint, you can transfer to another extension, voice mail, or even an outside line.

To Another Extension

1. *EITHER*, Press the **TRANSFER** menu button.
OR, Press the **TRANSFER TO HOLD** menu button to place the call on hold at the other endpoint.
2. Dial the desired extension number or press the **IC DIRECTORY** menu button to look up the number.
To transfer to your message center, press the **MESSAGE CENTER** menu button.
3. Wait for an answer, announce the call, and then hang up.
If the number is busy, there is no answer, or the transfer is refused, press **Answer** to return to the caller.

NOTE: If you are receiving a transferred call and the Transfer-To-Connect option is enabled for your endpoint, you are automatically connected to the transferred caller once the transferring party hangs up. If this option is disabled, you must press **Answer** or lift the handset to answer the transferred call.

To Voice Mail

1. Press the **TRANSFER** menu button.
2. Press the **VOICE MAIL** menu button.
3. *EITHER*, Dial the desired mailbox number and hang up.
OR, Hang up to send the call to the voice mail menu (so that the caller can select the mailbox number).

To an Outside Number

1. Press the **TRANSFER** menu button.
2. Select an outgoing line by pressing the **OUTSIDE PHONE** menu button.
3. Dial the desired telephone number.
4. Wait for an answer, announce the call, and then hang up.
If the number is busy, there is no answer, or the transfer is refused, press the flashing button to return to the caller.

USING REVERSE TRANSFER

The Reverse Transfer (Call Pick Up) feature allows you to answer a call that is ringing or holding at another endpoint. For example, if the attendant transfers a call to you but you have stepped away from your endpoint, you can pick up the call using another endpoint.

To answer a call ringing or holding at another endpoint:

1. Lift the handset and dial **4**.
2. Dial the extension or hunt group number (see [page 91](#)) where the call is ringing or holding. The call is transferred to the endpoint you are using, and you are connected to the caller.

NOTE: If the Group Call Pickup feature is enabled, you can pick up a call ringing at any station in a hunt group by dialing the hunt group's extension number.

FORWARDING CALLS

With the Forwarding feature, you can have calls follow you (e.g., forwarded to a cell phone), or you can redirect calls to a voice mail or other extension. For greater flexibility with status changes and call forwarding, use the composite status (see [page 98](#)) and call routing features (see [page 119](#)) provided in Unified Communicator instead of DND and device forwarding.

NOTE: The **Fwd** button is also used to insert a space when you are using the dialpad to input letters or numbers.

Manual Call Forwarding

Manual call forwarding allows you to send incoming calls to another extension number. You can even forward calls to outside numbers, if your endpoint is programmed to allow this.

To forward calls:

1. Press **Fwd**.
2. Select one of the following menu buttons:
 - **ALL:** All incoming calls are forwarded without ringing at your endpoint.
 - **NO ANSWER:** All incoming calls are forwarded if they are not answered before a timer expires.

NOTE: Only the installer or system administrator can adjust this timer.

- **BUSY:** When your endpoint is busy, all incoming calls are forwarded without ringing at your endpoint.
 - **NO ANSWER/BUSY:** All incoming calls are forwarded if your endpoint is busy or if you do not answer, as described above.
3. Do one of the following:
 - To forward to an outside telephone number:
 - Press the **OUTSIDE CALL** menu button.
 - Dial a telephone number or press the **OUTSIDE DIR** menu button to look up and select a number. (See [page 84](#) for more information on directories.)
 - *If you want to forward to an extension number:* Dial the extension number. *OR*, press the **IC DIRECTORY** menu button to look up and select a number.
 - *If you want to forward to your voice mailbox:* Press the **VOICE MAIL** menu button.
 - *If you want to forward to your message center:* Press the **MESSAGE CENTER** menu button.

To cancel any call forward request:

1. Press **Fwd**.
2. Press the **FWD OFF** menu button.

System Forwarding

System Forwarding allows the system to automatically route calls based on the type of call and the status of your telephone. Although you cannot program the path of a system forward, you can enable or disable this feature on your endpoint.

To enable or disable System Forwarding:

Dial **3 5 4**.

NOTE: Manual forwarding overrides System Forwarding.

Redirect Call

The Redirect Call feature allows you to forward any call that is ringing on your endpoint without having to answer the call.

NOTE: You cannot redirect calls to an extension that is in DND or to a restricted outside number.

To redirect a call to an extension number:

1. *EITHER*, Press **∞** and dial **3 3 1**.
OR, Press the **SEND TO DEST** menu button.
2. Dial the extension number or press the **IC DIRECTORY** menu button to look up and select a number.

To redirect a call to an outside telephone number:

1. *EITHER*, Press **∞** and dial **3 3 1**.
OR, Press the **SEND TO DEST** menu button.
2. *EITHER*, Press the **OUTSIDE CALL** menu button and enter the telephone number.
OR, Use a speed-dial number (see [page 77](#)).
3. Press **#**.

REDIALING A NUMBER

The Redial feature allows you to quickly redial the last outside number you dialed. Although most endpoints redial the last number *dialed*, your system administrator can program your endpoint to redial the last number *saved*. For UC redial options, see [page 103](#).

To use the Last Number Dialed feature (if enabled):

With or without the handset lifted, press the **OUTSIDE CALL** menu button and then the **REDIAL** menu button. The number is dialed.

To use the Last Number Saved feature (if enabled):

- **To save the last number dialed:** While the endpoint is idle or while listening to intercom dial tone, press the **REDIAL** menu button.
- **To redial the saved number:** Press the **OUTSIDE CALL** menu button and then the **REDIAL** menu button. The number is dialed. If there is no redial number available, the display shows NO NUMBER TO DIAL.

ACCESSING VOICE MAIL MESSAGES

When you access your mailbox, you can listen to new and saved voice mail messages. After listening to your voice mail messages you can access the associated options.

NOTE: If your telephone system uses Enterprise Messaging (EM), your mailbox may have the Automatic Speech Recognition (ASR) feature enabled. When ASR is enabled for your mailbox, you have the option of issuing a spoken command or pressing a dial-pad button. See [page 18](#) for ASR guidelines.

ALSO: If your mailbox has E-Mail Reader enabled, you have an advanced mailbox. See [page 121](#) for information and instructions about using E-Mail Reader features.

Listening to Messages

To listen to messages:

1. Access your mailbox as described on [page 29](#).
2. *If E-Mail Reader is enabled for your mailbox*, say “Voice Mail” or press **1**.
If E-Mail Reader is not enabled for your mailbox, skip this step.
3. *EITHER*, Say “New” or press **1** to listen to your new messages.
OR, Say “Saved” or press **3** to listen to your saved messages.
4. While you are listening to a voice mail message, you can use the following options:
 - Say “Skip” or press **#** to skip to the end of the recording.
 - Say “Back up” or press **1** to “rewind” a few seconds and replay the message.
 - Say “Pause” or press **2** to pause. (Say “Continue” or press **#** to continue.)
 - Say “Forward” or press **3** to skip ahead.
 - Say “Lower” or press **4** to lower the volume.
 - Say “Envelope” or press **5** to play the message envelope.
 - Say “Higher” or press **6** to raise the volume.
 - Say “Save” or press **7** to save the new message in your mailbox.
 - Say “Delete Message” or press **9** to delete the message.

NOTE: You may be prompted to confirm deleting the message. Say “Yes” to delete the message or “No” to cancel the request to delete the message.

5. When the message has finished playing, you have the following options:

- Say “Replay” or press **1** to replay the message from the beginning.
- Say “Reply” or press **2** to reply to the message. You have the following options:
 - Say “Voice Mail” or press **1** to leave a voice mail message for the caller.
 - If the caller has a mailbox number, you are prompted to verify the destination by saying “Yes” or by pressing **#**.*
 - If the number was not associated with a mailbox, the prompt requests a mailbox number.*
 - If the message was from an outside caller, you cannot leave a voice mail message.*
 - Say “Call Back” or press **2** to make a return call. Your call will be transferred automatically to the caller’s extension or telephone number, if the number is available.
 - If the user is not available, you will have the option of leaving a voice mail message.*
 - If the telephone number is not available, you cannot reply to the message.*
- Say “Forward” or press **3** to forward a copy of the message to another subscriber. *If you want to include an introduction, say “Record” or press **1**.* Otherwise, say “Accept” or press **#** to forward the message without additional comments.
- Say “Previous” or press **4** to listen to the previous message.
- Say “Envelope” or press **5** to play the introductory message envelope (see [page 72](#) for information on envelope options).
- Say “Next” or press **6** to listen to the next message.
- Say “Save” or press **7** to save the new message in your mailbox.
- Say “Delete Message” or press **9** to delete the message.

NOTE: You may be prompted to confirm deleting the message. Say “Yes” to delete the message or “No” to cancel the request to delete the message.

6. Hang up.

Recovering Deleted Voice Mail Messages

If you accidentally delete a voice mail message, you can retrieve it within a specific time frame (programmed by your system administrator). Any retrieved messages are then restored to your saved-message queue. Messages that are not undeleted within the programmed time (up to 24 hours) are automatically erased.

NOTE: If E-Mail Reader is enabled for your mailbox, you can also recover deleted e-mail and fax messages. See [page 131](#) for instructions about how to recover deleted voice mail, e-mail, and fax messages.

To recover deleted voice mail messages:

1. Access your mailbox as described on [page 29](#).
2. Say “Options” or press **5** for Message Options.
3. Say “Recover” or press **2** to access undelete options.
4. *EITHER*, Say “Listen” or press **1** to listen to your deleted messages and choose which ones to recover. After each message you can:
 - Say “Replay” or press **1** to replay the message.
 - Say “Reply” or press **2** to reply to the message.
 - Say “Forward” or press **3** to forward the message.
 - Say “Previous” or press **4** to listen to the previous message.
 - Say “Envelope” or press **5** to play the message envelope.
 - Say “Next” or press **6** to listen to the next message.
 - Say “Recover” or press **7** to recover the message.

OR, say “Recover” or press **2** to recover all deleted messages.

OR, Say “Purge” or press **3** to **permanently** delete all deleted messages.
5. Hang up.

Recording and Sending Voice Mail Messages

You can record and send voice mail messages by accessing the record option on the main menu.

NOTE: If E-Mail Reader is enabled for your mailbox, a reply to an e-mail message (see [page 127](#)) is a recorded voice message that is attached to the e-mail as a `.wav` file.

To record and send voice mail messages:

1. Access your mailbox as described on [page 29](#).
2. Say “Record” or press **2**.
3. Say or enter the desired mailbox number or group list number. The system announces the name assigned to the mailbox number or group list number. You have the following options:
 - Say “Yes” or press **#** to accept the subscriber’s name.
 - Say “No” or press ***** to start over.
4. Record your message after the tone. While recording, you have the following options:
 - Press **2** to pause while recording. (Say “Continue” or press **#** to continue.)
 - Press **3** to erase and re-record your message.
5. When finished recording, you can press **#** to access the following options:

NOTE: If you select the copy or special delivery options and then do not respond to the prompts, the system will time out and deliver your message to the original recipient.

- Say “Send” or press **#** to send the message and return to the voice mail options.
- Say “Cancel” or press ***** to cancel the recording.
- Say “Replay” or press **1** to replay your message.
- Say “Append” or press **2** to add to your message.
- Say “Erase” or press **3** to erase and re-record your message.
- Say “Copy” or press **4** to copy your message to other mailboxes.

NOTE: If you are not using an Enterprise Messaging (EM) voice mail system, you can send the message to additional mailboxes from the “Special Delivery Options” menu **after** sending the message to the first recipient (see [page 61](#)).

- Say or enter the mailbox number or group list number. The system announces the name assigned to the mailbox number or group list number. You have the following options:
 - Say “Yes” or press **#** to accept the subscriber’s name.
 - Say “No” or press ***** to start over.Press ***** when you are done adding mailboxes.
- Say “Options” or press **9** to use special delivery options. You can then use one or more of the following options:
 - Say “Private” or press **1** to mark the message “private.” (This prevents the recipient from forwarding it to other subscribers.)
 - Say “Certified” or press **2** to mark the message “certified.” (When the recipient listens to the message, you will receive a receipt notice.)
 - Say “Priority” or press **3** to mark the message “priority.” (This will place your message ahead of all other waiting messages in the receiving mailbox.)
 - Say “Cancel” or press ***** to cancel delivery options.
 - Say “Send” or press **#** to send the message and return to voice mail options.

NOTE: If you are not using an EM voice mail system, you can send the message to additional mailboxes **after** sending the message to the first recipient.

To send the message to additional mailboxes from a non-EM system:

1. After sending the first message, press **#** and then enter the next recipient’s mailbox number.
 2. Press **#** to send the message or press ***** to exit and return to voice mail options.
-

6. Hang up.

Canceling Unheard Voice Mail Messages

You can cancel unretrieved messages that you have sent to individuals, but not messages that you sent to group lists.

To cancel unheard voice mail messages:

1. Access your mailbox as described on [page 29](#).
2. While listening to the voice mail main menu, say “Options” or press **5** for Message Options.
3. Say “Unheard” or press **1**.
4. When prompted, say or enter the number of the mailbox containing the unheard message.
5. Say “Yes” or press **#** to confirm the mailbox you are selecting. Voice mail will tell you how many messages you have waiting at the mailbox and play them for you. After each message, you can:
 - Say “Replay” or press **1** to replay the message.
 - Say “Append” or press **2** to add to the message.
 - Say “Forward” or press **3** to forward the message to another mailbox.
 - Say “Previous” or press **4** to listen to the previous message.
 - Say “Envelope” or press **5** to play the message envelope.
 - Say “Next” or press **6** to listen to the next message.
 - Say “Save” or press **7** to save the message in your mailbox.
 - Say “Delete Message” or press **9** to delete the message.

NOTE: You may be prompted to confirm deleting the message. Say “Yes” to delete the message or “No” to cancel the request to delete the message.

6. Hang up.

USING DO-NOT-DISTURB MODE

If you are away from your desk, or if you do not want to be disturbed, you can use the DND feature. This halts all pages and calls to your endpoint, except queue callbacks, recalls, and direct ring-in calls. When other users call your endpoint, they hear a repeating signal of four fast tones and, if they have a display endpoint, see the DND message you have selected.

Your telephone system can have up to 20 different DND messages, each of which can be changed by the system administrator, installer, or programmer. Your trainer or system administrator will give you a list of the programmed DND messages. For convenience, you should update the following default list.

	DEFAULT MESSAGE	NEW MESSAGE		DEFAULT MESSAGE	NEW MESSAGE
01	DO-NOT-DISTURB		11	OUT OF TOWN 'TIL	
02	LEAVE A MESSAGE		12	OUT OF OFFICE	
03	IN MEETING UNTIL		13	OUT UNTIL	
04	IN MEETING		14	WITH A CLIENT	
05	ON VACATION/ HOLIDAY 'TIL		15	WITH A GUEST	
06	ON VACATION/ HOLIDAY		16	UNAVAILABLE	
07	CALL ME AT		17	IN CONFERENCE	
08	AT THE DOCTOR		18	AWAY FROM DESK	
09	ON A TRIP		19	GONE HOME	
10	ON BREAK		20	OUT TO LUNCH	

Because the system DND message only uses one line of your display, you can enter a second line of text, up to 16 characters. For example, if you select 03 (IN MEETING UNTIL) as your first line of text, you can enter “3:30” as your second line. Callers with a display endpoint will then see, “IN MEETING UNTIL 3:30.”

NOTE: By default, call routing is enabled when running Unified Communicator. If you do not want to receive calls while in DND or your status is “unavailable,” either turn call routing off, or create a rule for internal callers and external callers so that your calls are routed appropriately (for example, to voice mail). If you want callers to know your DND status, create greetings for each of the statuses on the system or create greetings for the statuses you use, then use these greetings in routing rules (based on the DND statuses). If using greetings in your call routing rules, turn off system forwarding.

To enable DND:

1. Press the **DND** menu button.
2. *EITHER*, Dial the two-digit number corresponding to the message you want to use.
OR, Press the **SCROLL** menu button followed by the **PREVIOUS** or **NEXT** menu button.
OR, Press the **Volume** high button (up arrow) or **Volume** low button (down arrow) to scroll through the messages.
3. *If desired*, customize the second display line by dialing the desired numbers or letters as described below:
 - *Remain in numeric mode (Message lamp unlit)*: Press the dialpad buttons to dial the desired numbers. Press **#** for a hyphen (-), ***** for a colon (:), **Fwd** to leave a space, or **Mute** to backspace.
 - *Change to alphanumeric mode (Message lamp lit)*: Press **Message** or the **USE ALPHA MODE** menu button and then press the dialpad buttons to enter the desired characters. (Refer to the chart below.) The number of times a button is pressed determines which character is entered. For example, 33377744432999 enters “FRIDAY.” When adjoining characters are located under the same button, press **Fwd** once to advance to the next character. For example, 6**Fwd**666**Fwd**66632999 enters “MONDAY.” (Note that letters correspond to the letters printed on the buttons.) Press **Fwd** twice to leave a space or press **Mute** to backspace.
4. Press the **ACCEPT** menu button or lift and replace the handset.

NUMBER OF TIMES BUTTON IS PRESSED					
BUTTON	1	2	3	4	5
1	-	&	()	1
2	A	B	C	'	2
3	D	E	F	!	3
4	G	H	I	*	4
5	J	K	L	# or / *	5
6	M	N	O	N or # *	6
7	P	Q	R	S	7
8	T	U	V	?	8
9	W	X	Y	Z	9
0	@	:	.	,	0

*The character available depends on the software version.

To cancel DND: Press the **DND** menu button, and then the **DND OFF** menu button.

USING REMINDER MESSAGES

Never be late for a meeting again! With Reminder Messages, you can program your endpoint, up to 24 hours in advance, to alert you at a specified time. At the programmed time, the reminder message signals you with eight short tones, and your display shows the message. If you are on a call, you still hear the tones, and the message displays for ten seconds. Then the display returns after you hang up. (Reminder displays interrupt, but do not affect programming.)

Your telephone system can have up to 20 different reminder messages, each of which can be changed by the system administrator, installer, or programmer. Your trainer or system administrator will give you a list of reminder messages for your system. For convenience, you should update the following default list.

	DEFAULT MESSAGE	NEW MESSAGE		DEFAULT MESSAGE	NEW MESSAGE
01	MEETING		11	CALL ENGINEERING	
02	STAFF MEETING		12	CALL MARKETING	
03	SALES MEETING		13	CALL ACCOUNTING	
04	CANCEL MEETING		14	CANCEL DND	
05	APPOINTMENT		15	CANCEL CALL FWD	
06	PLACE CALL		16	TAKE MEDICATION	
07	CALL CLIENT		17	MAKE RESERVATION	
08	CALL CUSTOMER		18	REVIEW SCHEDULE	
09	CALL HOME		19	LUNCH	
10	CALL CORPORATE		20	REMINDER	

To request a reminder message:

1. With the handset in the cradle, dial **3 0 5**.
2. *EITHER*, Dial the desired two-digit number for the message that you want.
OR, Press the **Volume** high button (up arrow) or **Volume** low button (down arrow) to scroll through the messages.
3. While the desired message is displayed, press **#**.
4. Enter the time you wish to receive the message in hours and minutes. For example, 0900 = 9:00. If you dial three digits, such as 900 for 9:00, press **#**.
If your system is set for 24-hour format, you must enter the time appropriately (e.g., 1400 = 2:00PM).
If your system is set for 12-hour display format, press **1** for AM or **2** for PM.

To cancel all reminder message requests before they signal you:

With the handset in the cradle, dial **3 0 6**.

To clear a received reminder message:

With the handset in the cradle, press *****.

Moving On

SECTION CONTENTS

PAGE

Introduction	68
Setting Endpoint Preferences	68
Changing Volume Levels	68
Selecting a Ring Tone	69
Enabling Background Music	69
Enabling Automatic Call Answer	70
Returning to Default Operation	70
Setting Mailbox Preferences	71
Changing Your Mailbox Password	71
Changing the Voice Mail Message Envelope	72
Changing the Call Screening Transfer Method	73
Programming a Fax Destination	74
Changing the Message Search Order	74
Programming Remote Messaging	75
Speed Dialing	77
Station Speed Dial	77
System Speed Dial	79
Using Record-A-Call	79
Paging	80
Enabling Paging	80
Making Pages	80
Performing a “Hookflash” During a Call	81
Using Account Codes	81
Screening Calls	82
Using Call Logging	83
Using Directories	84
Telephone Directory	84
Voice Mail Directory	87
Programming Remote Feature Access	89
Remote Access Password	89
Remote Feature Access	90
Requesting Agent Help	91
Working in Hunt Groups	92
Hunt Group Calls Enabled/Disabled	92
ACD Hunt Groups	92

INTRODUCTION

Now that you've mastered the basics, it's time to move on to the advanced features. In this section, you'll learn how to program your endpoint, use directories, access your voice mailbox remotely, and perform various other functions.

The features in this section do not require the endpoint to be logged on to UC. For instructions on how to use UC advanced features on your endpoint, see [page 95](#).

For additional programming information, see the *Model 8690 Administrator's Guide*.

SETTING ENDPOINT PREFERENCES

Customizable features on your endpoint include changing volume levels, enabling background music, selecting a ring tone, and others.

Changing Volume Levels

The endpoint has eight volume settings accessed through “soft” buttons on the interface: ringer, handset call, handset dial tone, speakerphone call, speakerphone dial tone, headset call, and headset dial tone.

NOTE: To change each of these levels, you must be using that feature. For example, if you want to change the outside call volume level, you must be on an outside call.

To change a volume level:

Press the Up **Volume** button to increase the volume. Press the Down **Volume** button to decrease the volume.

To save your change:

Press **Volume** to save your changes.

Selecting a Ring Tone

The ability to change your ring tone is helpful in close-quartered environments. If your ring tone is unique, you can quickly identify when a call is ringing on your endpoint.

To select the type of ring tone for your endpoint:

1. With the handset in the cradle, dial **3 9 8**.
2. Do one of the following to select your ring tone:
 - Press **0** or the **RINGER OFF** menu button for no ringing.
 - Press the **PREVIOUS** or **NEXT** menu button to scroll to the desired tone.
 - Press the high (up arrow) or low (down arrow) end of the **Volume** button to scroll to the desired tone.
 - Dial 1-9 to select a specific tone.
3. When you hear the tone you want, you can do any of the following:
 - Press **#**.
 - Press the **ACCEPT** menu button.
 - Press **Answer**.
 - Lift and replace the handset.

Enabling Background Music

If your telephone system is equipped with a music source, you can listen to music through your speaker.

To enable or disable background music:

Dial **3 1 3**.

Enabling Automatic Call Answer

The Automatic Call Answer feature determines whether or not you are automatically connected to a caller when you lift the handset (or press **Answer**). If this feature is enabled, you are automatically connected when you go off-hook. If it is disabled, you must first lift the handset (or press **Answer**) and then press the flashing button.

To enable/disable this feature for ringing outside calls:

With the handset in the cradle, dial **3 6 0**.

To enable/disable this feature for ringing (non-handsfree) intercom calls:

With the handset in the cradle, dial **3 6 1**.

Returning to Default Operation

You can return your endpoint to default levels at any time. This feature cancels DND, manual call forwarding, background music, and queue requests; and restores hands-free mode, pages, hunt group calls, and system forwarding all at once. To default the endpoint configuration and firmware, see [page 39](#).

To return your endpoint to default:

Dial **3 9 4**.

NOTE: See [page 68](#) for instructions on changing volume levels.

SETTING MAILBOX PREFERENCES

Your mailbox contains personal options to allow you to customize voice mail functions. However, before you change your voice mail options, you must first initialize your mailbox (see [page 26](#)).

NOTE: If your telephone system uses Enterprise Messaging (EM), your mailbox may have the Automatic Speech Recognition (ASR) feature enabled. When ASR is enabled for your mailbox, you have the option of issuing a spoken command or pressing a dial-pad button. See [page 18](#) for ASR guidelines.

ALSO: If your mailbox has E-Mail Reader enabled, you have an advanced mailbox. See [page 121](#) for information and instructions about using E-Mail Reader features.

Changing Your Mailbox Password

Your password prevents unauthorized access to your mailbox. When you first initialize your mailbox, you are prompted to change your password from the default (your mailbox number).

You can change your mailbox password at any time. The new password can be up to 12 digits long and must be numeric.

To change your mailbox password:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Password” or press **3**.

If you want a password, enter a new password using digits 0-9 (up to 12 digits), and then press **#** when you are done. The messaging system plays back your password.

If you do not want to use a password, just say “Skip” or press **#**.

4. Say “Accept” or press **#** to accept the password as entered or say “Re-enter” or press **3** to erase and re-enter your password.
5. Hang up.

Changing the Voice Mail Message Envelope

When you receive a voice mail message, the voice mail system plays an “envelope” that can include the time and date the message was left, the source of the message, and/or the message length. By default, the envelope contains all of this information, but you can change your envelope, as described below.

NOTE: If E-Mail Reader is enabled for your mailbox, you can also change your e-mail and fax message envelopes. See [page 132](#) for instructions about how to change your voice mail, e-mail, and fax message envelopes.

To change your voice mail message envelope:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Envelope” or press **4** to select the Message Envelope Options Menu.
You can then do any of the following:
 - Say “Time, Date” or press **1** to enable or disable the time and date options.
 - Say “Source” or press **2** to enable or disable the message source option.
 - Say “Length” or press **3** to enable or disable the message length option.
 - Say “All Options” or press **4** to enable all options and return to the Personal Options Menu.
 - Say “None” or press **5** to disable the entire envelope and return to the Personal Options Menu.
 - Say “Accept” or press **#** to accept the changes.
 - Say “Cancel” or press ***** to return to the Personal Options Menu.
4. Hang up.

Changing the Call Screening Transfer Method

NOTE: The Call Screening feature is available only if it is enabled for your mailbox. Contact your voice mail administrator to see if this feature is enabled for your mailbox.

Depending on the transfer method you select, calls that are transferred from your mailbox may be one of the following:

- **Unannounced Calls:** Calls are sent directly to your extension.
- **Announce-Only Calls:** Before voice mail transfers a call to you, a prompt asks the caller to record his or her name. When you answer, you hear “You have a call from (caller’s name).” Then the call is sent to your extension.
- **Screened Calls:** Before voice mail transfers a call to you, a prompt asks the caller to record his or her name. When you answer, you hear “You have a call from (caller’s name).” You can choose whether or not to accept the call.

See [page 82](#) for instructions about using the call screening feature.

To change your transfer method (if enabled):

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “More” or press **9** for More Options.
4. Say “Transfer” or press **5**. The system tells you what your current transfer method is. You can then select the desired transfer method, as follows:
 - Say “Unannounced” or press **1** to select unannounced transfers.
 - Say “Screened” or press **2** to select screened transfers.
 - Say “Announce” or press **3** to select announce-only transfers.
 - Say “Cancel” or press ***** to return to the Personal Options Menu without making changes.
5. Hang up.

Programming a Fax Destination

With the Inter-Tel voice processing system, when you specify a fax destination number for your mailbox, callers can access your mailbox to send a fax to your fax machine.

To change your fax destination number:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “More” or press **9** for More Options.
4. Say “Number” or press **1**.
5. Say or enter the number of your fax destination. (If you entered the letters using the dialpad, press **#** when you are done.)
6. *EITHER*, say “Accept” or press **#** to accept the number.
OR, say “Re-enter” and press **3** to erase and re-enter the number.
7. Hang up.

Changing the Message Search Order

You can change the order in which you retrieve your messages based on the date and time you receive them. When more than one message is left in your mailbox, they are available for you to access in the order you specify. The search order, can be configured as first in/first out, or last in/first out.

NOTE: If E-Mail Reader is enabled for your mailbox, when you change the message search order, your changes apply to your voice mail, e-mail, and fax messages.

To change the message search order:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “More” or press **9** for More Options.
4. Say “Order” or press **2** for the Message Search Order.
5. Select one of the following options:
 - Say “New” or press **1** to change the search order for new messages.
 - Say “Saved” or press **2** to change the search order for saved messages.
6. Your current message search order is played. Select one of the following options:
 - Say “First” or press **1** to retrieve the earliest-received messages first (First In/First Out).
 - Say “Last” or press **2** to retrieve the latest-received messages first (Last In/First Out).
 - Say “Cancel” or press ***** to return to the Personal Options Menu without making changes.
7. Hang up.

Programming Remote Messaging

NOTE: The Remote Messaging feature is available only if it is enabled for your mailbox. Contact your voice mail administrator to see if this feature is enabled for your mailbox.

ALSO: The remote messaging feature is supported for voice mail messages only. If E-Mail Reader is enabled for your mailbox, you cannot use remote messaging for e-mail and fax messages.

With Remote Messaging, you can program voice mail to call you when your mailbox receives new voice mail messages. Using a “cascade” (a series of up to nine telephone numbers), voice mail will call each number until it successfully connects to a device (e.g., pager, answering machine, etc.).

Because your mailbox can have a primary and an alternate cascade of numbers, you can program a cascade to be used during specific days and times. For example, if you want to be paged when you receive a voice mail message from 5-10 PM on weekdays, you can set up a primary cascade. If you also want to receive pages for messages marked “priority” on the weekends, you could set your alternate cascade for all day on Saturdays and Sundays.

To set up remote messaging for voice mail messages (if enabled):

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Remote” or press **5**. You have the following options:
 - Say “Primary” or press **1** to set up a primary cascade.
 - Say “Alternate” or press **2** to set up an alternate cascade.
4. Say “Level” or press **1** and then say or enter the number (1-9) of the level you wish to program. You then have the following options:
 - **To set up or change an extension or outside number:**
 - Say “Number” or press **2**.
 - *EITHER*, say “Internal” or press **1** for an extension number. *OR*, say “Outside” or press **2** for an outside number.
 - Say or enter the number.
 - **To set up or change pager notification:**
 - Say “Pager” or press **1**.
 - Say “Personal” or press **2**.

Say “Change” or press **1** to enable or disable the number.
5. Say “Days” or press **3**. Then select one of the following:
 - Say “Weekdays” or press **1** for Monday-Friday.
 - Say “Days” or press **2** for all days.
 - Say “Day” or press **3** to select individual days. You are prompted to say or press numbers 1-7 which correspond to the days Sunday through Saturday.
6. Say “Time” or press **2**. Then say or enter the times you want the message notification to start and stop. Enter or say the times with two digits for the hour and two digits for the minutes (e.g., 0900 = 9:00). If entering the time in 12-hour format:
 - Say “AM” or press **1** for AM.
 - Say “PM” or press **2** for PM.

NOTE: For 24-hour notification, program the starting and ending times to be the same.

7. Say “Category” or press **4**. You have the following options:
 - Say “All Messages” or press **1** for all messages.
 - Say “Priority” or press **2** for priority messages only.
8. Hang up or press **#** to save the settings and exit.

NOTE: If for some reason voice mail is not able to use your remote notification, your mailbox will receive a message stating that notification could not be completed.

SPEED DIALING

Speed dialing allows you (and your system administrator) to store frequently dialed numbers for easy dialing. Each number is stored on your endpoint (Station Speed Dial) or in the telephone system (System Speed Dial) and is identified by a location number. Once programmed, you can quickly dial these numbers by entering a feature code and dialing the desired location number. Because the system supports both station and system speed-dial numbers, you can have access to over 1000 stored numbers.

You can also use the speed-dial buttons through the Unified Communicator interface (see [page 103](#)). These buttons are not limited in the number you can have and they display real-time status. The Unified Communicator speed-dial list and the speed-dial functionality discussed here are not related.

Station Speed Dial

You can program and use up to ten personal speed-dial numbers on your endpoint. To use a speed-dial button, you must:

- Store the number in a speed-dial location.
- Associate a speed-dial location with the new speed-dial button.

NOTE: You can use the Speed-Dial feature even if your endpoint does not have programmable feature buttons.

Programming Station Speed-Dial Numbers

To store a speed-dial number, use the Station Speed-Dial Programming feature code to program the number in a speed-dial location. Use the following table to list the numbers that you store in speed-dial locations 0-9.

0	_____	5	_____
1	_____	6	_____
2	_____	7	_____
3	_____	8	_____
4	_____	9	_____

To store a number in a speed-dial location:

1. With the handset in the cradle, dial **3 8 3**.
2. Dial the speed-dial location (0-9) you want to program.
3. Enter the desired name for the speed-dial number, as described below:
 - *Alphanumeric mode (Message lamp lit):* Press the dialpad buttons to enter the desired characters. (Refer to the chart on [page 86](#).) The number of times a button is pressed determines which character is entered. For example, 533266 would enter “JEAN.” When adjoining characters are located under the same button, press **Fwd** once to advance to the next character. For example, 66**Fwd**6667776 would enter “NORM.” (Note that letters correspond to the letters printed on dialpad buttons 2-9.) Press **Fwd** twice to leave a space. Press **Mute** if you need to backspace.
 - Press the **ACCEPT** menu button to save the name.
4. Dial the extension number or telephone number to be stored, as described below:
 - *Numeric mode (Message lamp unlit):* Enter the number.

NOTE: You cannot use hyphens or colons in the number. *If your number includes an asterisk, pound, hookflash, or pause, use the menu buttons to enter the special character.*

- Press the **ACCEPT** menu button on the display to save the number.
-

NOTE: To dial outside telephone numbers without first selecting an outgoing line, enter the Outgoing Call access code (default is **8**) before the outside telephone number.

To erase a Station Speed-Dial name and/or number:

1. With the handset in the cradle, dial **3 8 3**.
2. Dial the desired location code (0-9).
3. Press **Mute** repeatedly until the name is erased.
4. Press **#** or the **ACCEPT** menu button to continue.
5. Press **Mute** repeatedly until the number is erased.
6. Press **#** or the **ACCEPT** menu button to exit.

Dialing Station Speed-Dial Numbers**To dial a Station Speed-Dial number:**

1. *If necessary,* select an outgoing line and press the **SPEED DIAL** menu button.
2. Press the **USE STN SPEED** menu button.
3. Press the desired Station Speed-Dial location number (0-9).

System Speed Dial

Your system administrator can store several speed dial numbers in the system speed dial locations. Depending on the size of your system, you can access up to 1000 or up to 5000 system speed dial locations, if they have been programmed.

To view and/or dial System Speed-Dial numbers:

1. Dial **3 8 1** or press the **SPEED DIAL** menu button.
2. Press the **SYS SPEED DIAL** menu button.
3. Dial the location code (000-999 or 0000-4999) for the desired number.
4. Press **#** or the **ACCEPT** menu button to dial the displayed number.

USING RECORD-A-CALL

NOTE: This feature is not supported on peer-to-peer (P2P) calls. Ask your system administrator if your endpoint is configured to use P2P audio.

If your telephone system is equipped with a Voice Processor (voice mail), you may have access to the Record-A-Call feature. If so, you can record an ongoing call as a mailbox message. You can then retrieve the message, just as you would any other mailbox message.

NOTE: The Record-A-Call feature remains active after the other party hangs up. This allows you to append the recorded call with your own message.

To use the Record-A-Call feature while on a call:

1. *EITHER*, Press **∞** and dial **3 8 5**.
OR, Press the **RECORD-A-CALL** menu button.
2. *If required*, dial the desired mailbox number. (Your endpoint may be programmed to select the mailbox, or you may be required to dial it.)

You hear a confirmation tone when the Record-A-Call feature is activated.

To turn off Record-A-Call you have the following options:

- Press **∞** and dial **3 8 5**.
- Press the **CANCEL RECORDING** menu button.
- Hang up.

PAGING

The Paging feature allows you to make an announcement through endpoint speakers or external speakers (if your system is equipped with external paging equipment). To prevent announcements from transmitting through every endpoint in the system, this feature uses page zones. Each zone contains a different combination of extensions and external paging equipment, and is programmed by your system administrator. Ask your trainer or system administrator how the zones are programmed, and list them below for your convenience:

0 _____	5 _____
1 _____	6 _____
2 _____	7 _____
3 _____	8 _____
4 _____	9 _____

Enabling Paging

You can enable or disable page receiving for your endpoint by using the Page Remove/Replace feature code. If your endpoint is assigned to more than one page zone, all zones are removed or replaced at once (you cannot turn off individual zones).

To turn paging on and off for your endpoint:

Dial **3 2 5**.

Making Pages

To make pages:

1. Dial **7**.
2. Dial the desired zone number (0-9).
3. After the tone, make your announcement and hang up.

PERFORMING A “HOOKFLASH” DURING A CALL

Certain telephone service companies may require a timed hookflash (a quick hang up and release).

To generate a hookflash while using a line:

EITHER, Press the **FLASH** menu button. If the **FLASH** menu button is not visible, press **MORE** until you see **FLASH**.

OR, Press ∞ and dial **3 3 0**.

NOTE: This features is known as a “Recall” in European systems.

USING ACCOUNT CODES

If your telephone system is programmed to use the Station Message Detail Recording (SMDR) feature, you might be required to enter account codes when you place a call. These codes add information to telephone record reports that the system will periodically print.

There are three types of account codes:

- Standard account codes are automatically entered into the SMDR report whenever you place a call.
- Forced account codes must be dialed before you can place an outside call.
- Optional account codes can be entered at any time during a call.

NOTE: Your system administrator can tell you which types of account codes are used on your telephone system.

To enter an optional account code:

1. Press ∞ and dial **3 9 0**.
2. Enter the optional account code. If the account code is not immediately accepted, press **#**.

To set an account code for all calls placed from your endpoint:

Dial **3 9 1** and then the account code. If the account code is not immediately accepted, press **#**. This code will be used for all calls made from your endpoint until it is disabled.

To disable the code:

Dial **3 9 1** and press **#**.

SCREENING CALLS

If desired, you can screen calls that are transferred from voice mail. This allows you to accept and/or refuse specific calls. Depending on the call screening transfer method you select (see [page 73](#)), calls from voice mail may be unannounced, announce only, or screened.

When your mailbox is programmed for screened calls, you have the following options when you receive a transfer:

- Say “Accept” or press **#** to accept the call.
- Say “Replay” or press **1** to replay the announcement.
- Say “Voice Mail” or press **2** to send the call to voice mail.
- Say “Forward” or press **3** and then enter the extension number to forward the call to another extension.
- Say “Refuse” or press ***** to refuse the call.

USING CALL LOGGING

NOTE: Call Logging may or may not be available depending on your software version and system settings.

The Call Logging feature stores a record of your missed, received, and dialed calls. A maximum of 20 entries can be stored in each of the call logs. Use Call Logging to:

- View recent call activity
- View caller ID information
- Return or redial calls

To use Call Logging:

NOTE: At any menu level you can press ***** to cancel or return to the previous menu, or press **#** to accept the menu option.

1. Dial **3 3 3** or press the **LOGS** menu button.
2. Select one of the following options:
 - Press **1** or the **MISSED CALLS** menu button for missed calls.
 - Press **2** or the **RECEIVED CALLS** menu button for received calls.
 - Press **3** or the **DIALED CALLS** menu button for dialed calls.
 - Press **4** or the **CLEAR CALL LOGS** menu button to clear all Call Logging entries.
3. Press the **>>** and **<<** menu buttons or the high/low end of the Volume button to scroll through the entries.

Call Logging displays the intercom or outside party's name (if available) on the first line, the extension or outside number (if available) on the second line, and the date and time on the third line. (See the following examples.)

INTERCOM CALL

```
JOHN SMITH  
56789  
TU OCT 23 08:23A
```

OUTSIDE CALL

```
SUSAN JONES  
4809619000  
WE OCT 24 10:30A
```

If the calling number is present but the caller's name is unknown, the number displays only. If no Caller ID information is available, **UNKNOWN CALLER** displays.

To return a call or redial a number listed in a call log: Press **#** or the **CALL NOW** menu button while the number is displayed.

To delete entries: Press **0** or the **DELETE** menu button to delete the displayed entry, or press the **DEL ALL** menu button to delete all entries in the current call log.

USING DIRECTORIES

With directories, you can use the dialpad to find names and numbers. You can then use the directory information to make calls, access features, or leave voice mail messages. There are two types of system directories:

- **Telephone directory:** Search for and connect to contacts or access features.
- **Voice Mail directory:** Search for voice mail contacts and leave voice mail messages (see [page 87](#)).

Telephone Directory

There are three subdirectories available in the Telephone directory:

- **Intercom:** Find (and dial) intercom extensions.
- **Outside:** Find (and dial) outside numbers listed in the company directory.
- **Feature:** Find (and activate) system features.


The Telephone directory uses one of two search methods to find contacts or features: Intelligent Directory Search (IDS) or Basic Search (see [page 86](#)). Enter a full or partial name with the dialpad buttons to search for a contact or feature. You can then contact the person or access the feature by dialing the number or pressing a button.

NOTE: The search method used for your system (IDS or Basic) depends on your software version.

Intelligent Directory Search (IDS)



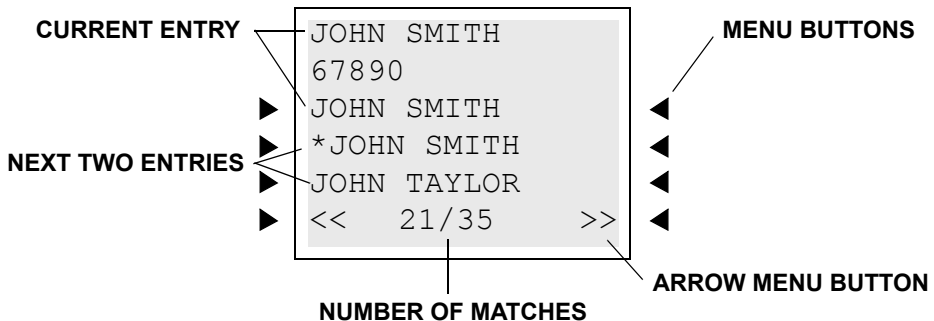

IDS simplifies searching for entries in a directory by allowing you to press a dialpad button once rather than several times to enter a character. As you enter characters, IDS displays the entry that best matches the characters entered as well as the next two entries (see the following example of an Intercom directory entry).

NOTE: The Intercom directory may display two similar entries, one without an asterisk and one with an asterisk (for example, “John Smith” and “*John Smith”). The entry without an asterisk is a primary extension; the entry with an asterisk is a secondary extension.



To search for a directory name or feature using IDS:

1. If the endpoint is idle, press the **DIRECTORY** menu button, then press the menu button for the desired directory (**IC**, **OUTSIDE**, or **FEATURE**).
If placing a call, choose between **IC DIRECTORY** and **OUTSIDE CALL**.
2. Press the dialpad buttons to enter characters (up to 16 characters). (See the following table for dialpad button character descriptions.) Each dialpad button represents several characters. As you press the dialpad buttons, the system connects the character sequence to possible directory matches. For example, to enter JONES, press **5** **6** **6** **3** **7**. This data entry method is similar to the “text on nine keys (T9)” feature found on cell phones.
3. Press the **>>** and **<<** menu buttons (or the high/low end of the Volume button) to move alphabetically (or numerically) through the directory.
4. Press **#** (or the menu button next to the entry) to dial a number or activate a feature code while the entry is displayed.

BUTTON	CHARACTERS REPRESENTED
0	0
1	1
2	2 A B C a b c Ç ç â ä å ã ç Ä Å á
3	3 D E F d e f é ê ë è Ê Ë
4	4 G H I g h i î ï í
5	5 J K L j k l
6	6 M N O m n o ô õ ö ò Ö ö ñ Ñ
7	7 Q P R S q p r s
8	8 T U V t u v ü û ù Ü ú
9	9 W X Y Z w x y z ÿ
Volume Up 	Moves to the next entry (ignored if no entry is found)
Volume Down 	Moves to the previous entry (ignored if no entry is found)
	Returns endpoint to the state before entering IDS
	Activates the selection
MUTE	Moves the cursor to the preceding space, deleting existing characters

Basic Search

Use Basic Search to search the Telephone directory for a contact name or feature.

To search the Telephone directory using Basic Search:

1. *If your endpoint is idle*, press the **DIRECTORY** menu button, then press the menu button for the desired directory (**IC**, **OUTSIDE**, or **FEATURE**).
If placing a call, choose between **IC DIRECTORY** and **OUTSIDE CALL**.
2. Press the dialpad buttons to enter characters (see the following table). The number of times a button is pressed determines which character is entered. For example, 77776444844 would enter “SMITH.” When adjoining characters are located under the same button, press **FWD** once to advance to the next character. Press **FWD** twice to enter a space. Press **MUTE** to backspace.
 - *To Remain in alphanumeric mode (Message button and lamp lit)*: Press the dialpad buttons to enter the desired characters.
 - *To Change to numeric mode (Message button and lamp unlit)*: Press the **NUMERIC** menu button. Then press the dialpad buttons to enter a number.
3. Press the **SEARCH** menu button to begin the search. Use the **PREVIOUS** and **NEXT** menu buttons (or the high/low end of the Volume button) to move alphabetically through the directory.
4. Press the **CALL** menu button (for IC or Outside directories) or the **ACCEPT** menu button (for the Feature directory) to dial a number or activate a feature while displayed.

NUMBER OF TIMES BUTTON IS PRESSED					
BUTTON	1	2	3	4	5
1	-	&	()	1
2	A	B	C	'	2
3	D	E	F	!	3
4	G	H	I	*	4
5	J	K	L	# or / *	5
6	M	N	O	N or # *	6
7	P	Q	R	S	7
8	T	U	V	?	8
9	W	X	Y	Z	9
0	@	:	.	,	0

*The character available depends on the software version.

Voice Mail Directory

With the voice mail directory, subscribers and non-subscribers can use ASR (if enabled) or dialpad buttons to search for names in the directory. Subscriber names are automatically added to the directory when their mailbox is initialized. ASR may not be able to locate names that are pronounced differently than they are spelled. For these types of names, use the alternate search method of spelling the name using the endpoint dialpad buttons (see table below).

You begin a search by dialing the system voice mail extension and selecting the directory option. You are prompted to say or spell the name of the mailbox user you want to search for. For example, if you say the name John, the system locates all of the subscribers with the first or last name of John. The list of names returned might include the names John Smith, John Jones, John Nielson, David John, Robert John, etc.

When one to 10 matches are located, you can browse the list of returned names by selecting the Previous (say “Previous” or press **1**) and Next (say “Next” or press **3**) options. The directory lists are circular. That is, when the end of the list is reached, the next name played will be the first name in the directory. When the correct name is played say “Yes” or press **#** to select it.

If the system locates more than 10 matches, you can either browse the list using the options mentioned above, or filter the list by responding to the filtering questions generated by the system. Based on your responses, the system filters the list to include first or last name matches only. If the system cannot locate an exact match, it returns the closest match found.

To use the dialpad buttons to spell a name: When prompted, press the appropriate dialpad buttons to spell the name. The number of times a button is pressed determines which character is entered, as shown in the table below. When adjoining characters are under the same button, press **Fwd** to advance to the next character. For example, 5666**Fwd**66337777 enters “Jones.”

BUTTON	NUMBER OF TIMES BUTTON IS PRESSED				
	1	2	3	4	5
1	-	&	()	1
2	A	B	C	'	2
3	D	E	F	!	3
4	G	H	I	*	4
5	J	K	L	#	5
6	M	N	O	ñ	6
7	P	Q	R	S	7
8	T	U	V	?	8
9	W	X	Y	Z	9
0	@	:	.	,	0

To perform a directory search:

1. Dial the voice mail number.
2. Say “Directory” or press **#**.
3. Say the last name of the person you are searching for or press the appropriate dialpad buttons to spell the name (see [page 87](#)).

If 10 or fewer matches are located, you can access and browse the list immediately (see [step 4](#).)

If the list contains more than 10 matches, you have the option to browse or filter the list. (skip [step 4](#). and see [step 5](#).)

4. If 10 or fewer matches are located, you have the following options:
 - Say “Yes” or press **#** to accept the name that is played.
 - Say “Previous” or press **1** to browse to the previous name in the list.
 - Say “More” or press **2** to hear more information about the subscriber.
 - Say “Next” or press **3** to browse to the next name in the list.
 - Say “New” or press **4** to search for a new name.
 - Say “Cancel” or press ***** to exit the directory.
5. If more than 10 matches are located, the system prompts you to browse or filter the list. Do one of the following:
 - Say “Yes” or press **1** to browse the list. (See [step 4](#). for options).
 - Say “No” or press **2** to select the filter option and then respond to one of the following filter questions:
 - The system begins by asking you if the name you are searching for is the last name. If it is, say “Yes,” press **1**, say the last name, or spell the last name.
 - If you did not respond to the first question, the system asks if the name you are searching for is the first name. If it is, say “Yes,” press **1**, say the first name, or spell the first name.

After the list has been filtered by first or last name, a smaller list of names is returned. You can then browse the list and select the appropriate name (see [step 4](#).)

PROGRAMMING REMOTE FEATURE ACCESS

If you are away from your desk and forgot to put your endpoint in DND, don't worry. With the Remote Feature Access, you can place your endpoint in DND or forward calls from any other endpoint on the system. And, if you have a special dial-up line, you can access your endpoint features from an outside line.

Remote Access Password

Before you use Remote Feature Access, you should program a password, as described below.

To change the password from your endpoint:

1. Dial **3 9 2**.
2. Enter your current password, followed by **#**.

NOTE: Your extension number is your password by default.

3. Enter the new password followed by **#**. You hear a confirmation tone.
4. Enter the new password again for verification followed by **#**. You hear a confirmation tone.

To change the station password using remote programming, see [Remote Feature Access](#) on [page 90](#). To change your station password using Unified Communicator, see [Using Advanced Options](#) on [page 39](#).

Remote Feature Access

To access your endpoint from another endpoint:

1. *EITHER*, Call your Direct Inward System Access (DISA) number (provided by your system administrator). If required, enter your password.
OR, Use any endpoint on the system.
2. Enter **3 5 9**.
3. Enter your extension number.
4. Enter your password followed by **#**. You can now use any of the following features.

To change the station password using Remote Programming:

- a. Enter **3 9 2**.
- b. Enter the new password, followed by **#**.
- c. Enter the new password again for verification, followed by **#**.

To turn on DND:

- a. Enter **3 7 0**.
- b. Enter the message number (01-20) and the optional second-line message text.

To turn off DND: Enter **3 7 1**.

To turn on Call Forward:

- a. Enter one of the following Call Forward feature codes.

All Calls..... **3 5 5**

If No Answer **3 5 6**

If Busy..... **3 5 7**

If No Answer or Busy **3 5 8**

- b. Enter an extension number or enter an outside line access code followed by a telephone number.

To turn off Call Forward: Enter **3 5 5**.

5. Hang up.

REQUESTING AGENT HELP

NOTE: This feature is not supported on peer-to-peer (P2P) calls. Ask your network administrator if your endpoint is configured to use P2P audio.

Your telephone system may be programmed to support the Agent Help feature, which allows you to request help from a designated “Agent Help Extension” (usually your supervisor) during a call. When your request call rings at the Agent Help Extension, the supervisor can choose to join the call or reject the request.

If the Agent Help Extension is a digital endpoint, the endpoint’s microphone is automatically muted so that the supervisor cannot be heard unless he or she presses the **Mute** button. If the Agent Help Extension is a single-line set, however, the supervisor **can** be heard as soon as the conference is established. In either case, the supervisor can hear all other parties on the call.

To use the Agent Help feature while on a call:

1. Press ∞ and dial **3 7 5**. *If you hear repeating tones, the Agent Help feature is not available at your endpoint, you already have four parties in your call, not enough system circuits are currently available, or the Agent Help Extension is in DND.*
2. Dial the Agent Help Extension number, if required. (Your endpoint may be programmed to automatically dial the number, or you may be required to dial it.)
If the Agent Help Extension accepts the call, you hear the Agent Help tone, if it is enabled, and the supervisor can monitor or join your call.
If the Agent Help Extension rejects the call, you hear a confirmation tone, and the display shows AGENT HELP REJECTED.

To respond to an Agent Help request:

When you receive an Agent Help request, your display shows <name> REQUESTS HELP. You can do one of the following:

- **To accept the call:** Answer as usual. Your microphone is muted and you cannot be heard by either party unless you press the **Mute** button.
- **To reject the call:** Press the **REJECT HELP** menu button.

WORKING IN HUNT GROUPS

Your system may be programmed with “hunt groups.” Hunt groups are groups of endpoints that share a common extension number in addition to having individual extension numbers. This allows someone to call anyone in the group (using the common extension) or a specific member (using the individual extension). The members of these groups and the common extension(s) are programmed by your system administrator.

When logged on to Unified Communicator and call routing is enabled, hunt group calls continue to work as usual. You can use Unified Communicator call routing in conjunction with your role as a hunt group member to receive personal calls while in DND or to simply route personal calls as desired.

Hunt Group Calls Enabled/Disabled

If you are a member of a hunt group, you can enable or halt hunt group calls to your extension.

To turn on or off hunt group calls:

Dial **3 2 4**.

ACD Hunt Groups

Some hunt groups use a special feature called Automatic Call Distribution (ACD) that distributes the hunt group calls equally among the available members. These hunt group members are referred to as “agents,” who log in to the ACD hunt group to receive calls and log out to halt ACD hunt group calls.

Distributing Calls

Calls are distributed through an ACD hunt group based on Agent IDs or extensions, as described below.

- **Agent IDs:** If the hunt group is programmed to use ACD Agent IDs, each agent is assigned an Agent ID number to enter during the login procedure (see [Logging In and Out of ACD Hunt Groups](#)). The hunt group calls are routed to logged-in agents, according to their Agent ID number instead of their extension number. Because the Agent ID is not associated with any extension, the agent can use any endpoint in the system to log in.
- **Members:** If the hunt group is **not** programmed to use Agent IDs, it will have a pre-programmed list of endpoints and will send calls to the endpoints where agents are logged in.

Logging In and Out of ACD Hunt Groups

Agents can log in to and out of the ACD hunt group at any time. While logged in, the agent receives calls through the ACD hunt group. When the agent is logged out, calls to that ACD hunt group bypass the agent.

To log in to all of your ACD hunt groups at once using the ACD Agent Login/Logout feature code:

With or without the handset lifted, dial **3 2 8** and enter your Agent ID, if necessary. The display shows AGENT LOGGED IN TO ALL ACDS, and you hear a confirmation tone.

NOTE: This feature code acts as a toggle. If you were already logged in, the display shows AGENT LOGGED OUT OF ALL ACDS, and you hear a confirmation tone.

To log in to one or more hunt groups using the ACD Agent Login feature code:

1. With or without the handset lifted, dial **3 2 6**. The display shows AGENT LOGIN ACD NUMBER.
2. *EITHER*, Enter the desired ACD hunt group number.
OR, Press **#** to log in to all of your ACD hunt groups at once. The display shows AGENT LOGIN AGENT ID.

NOTE: If you entered an invalid hunt group number, the display shows NOT AN ACD HUNT GROUP, and you hear repeating tones.

3. Do one of the following:
 - **To log into one or more ACD hunt groups using Agent IDs:** Enter your Agent ID. The display shows AGENT LOGGED INTO ALL ACDS. You are logged into the ACD hunt group using Agent IDs.

NOTE: If another Agent ID is already logged in at this endpoint, you hear repeating tones, and the display shows DIFFERENT AGENT ID ALREADY USED. You must have the other agent log out before you can use that endpoint.

- **To log into one or more ACD hunt groups not using Agent IDs:** Press **#**. The display shows AGENT LOGGED INTO ALL ACDS. You are logged into the ACD hunt group that does not use Agent IDs.

If you were already logged in, the display shows ALREADY LOGGED INTO <hunt group>.

If you are not a member of the entered hunt group, the display shows NOT AN AGENT IN THIS HUNT GROUP, and you hear repeating tones. Start over.

4. Hang up if off-hook. Repeat this procedure to log into additional ACD groups, if necessary.

When you log in to a group, you may be automatically connected to a call after you hear a short ring burst. If the ACD Agent ID Automatic Connect option is enabled for your hunt group and you are using a headset, you will be automatically connected. If this option is not enabled for your hunt group, the call will ring until you answer it or until it times out to another extension.

NOTE: Even if the ACD Agent ID Automatic Connect option is enabled, the first call you receive (after you log in or remove your endpoint from DND while logged in) will ring until you answer it. You will, however, be automatically connected to subsequent calls.

To log out of one or more ACD hunt group:

1. *EITHER*, Dial **3 2 8** to log out of all of your ACD hunt groups at once. The display shows AGENT LOGGED OUT OF ALL ACDS, and you hear a confirmation tone.
OR, With or without the handset lifted, dial **3 2 7**. One of the following displays will appear:
 - *If you were logged in to only one hunt group*, the display shows AGENT LOGGED OUT OF <hunt group>. The procedure is complete.
 - *If you were logged in to more than one hunt group*, the display shows AGENT LOGOUT ACD NUMBER. Dial the extension number of the desired ACD hunt group.
 - *If you were not logged in to any hunt group*, the display shows NOT LOGGED INTO ANY ACD GROUP.
2. Hang up if off-hook.

Ending an ACD Hunt Group Call

Each time you end an ACD hunt group call, a wrap-up timer is started. Until this timer expires, you will not receive another call through any ACD hunt group. You can, however, end the wrap-up session before this timer expires, as described below.

To terminate the ACD Agent wrap-up period before the timer expires:

With the handset in the cradle, dial **3 2 9**.

NOTE: If you were not logged in to an ACD hunt group, the display shows CANNOT ACCESS RESERVED FEATURE.

Using UC


SECTION CONTENTS	PAGE
Introduction	96
Logging On and Off of UC	96
Using UC Views	97
Placing a Call	97
Changing Web Client Options	97
Unified Communicator View	98
Changing Your Status	98
Creating a Temporary Status	98
Performing a Search	99
Redialing a Number	102
Running Feature Code Favorites	102
Working With the Speed-Dial List	103
Messages View	104
Call List View	105
Call Log View	109
Call Log Main Screen	109
Call Details Dialog Box	112
Address Book View	113
Sorting Address Book Contacts	113
Filtering Address Book Contacts	114
Adding a Linked Contact	116
Call Routing View	119
Receiving New Message Alerts	119
Receiving Status Change Alerts	120
Receiving Incoming Call Alerts	120

INTRODUCTION

In this section you'll learn how to log on and off of Unified Communicator (UC) and use UC views to access advanced endpoint features and presence management options.

NOTE: Before you use UC on your Model 8690, you must create a UC account using the Web Client, which is the primary UC client that runs on your PC desktop (see [page 97](#)). In addition, some UC options can only be changed or implemented from the Web Client. For information about using the Web Client, see the latest version of the *Unified Communicator User Guide*.

LOGGING ON AND OFF OF UC

The client application is configured to start automatically when the endpoint powers up. Although the client application may be running, you may not be logged on to UC (as indicated with the system tray icon ). If the client application is not running, you can launch it manually by navigating to My Computer\Mounted Volume\8690 Phone and then double-pressing **8690Phone.exe**.

To log on to UC:

1. Press the system tray icon, then select **Log on** from the menu. *If UC is not configured to log on automatically, you are prompted for the following information:*
 - a. Enter the **Web Address** that you use to access UC. The Web address is in the format `http://<UC Machine Name or IP Address>/uc`. (It is the same address you use to log on to UC from your Web Client on your PC.)
 - b. Enter your account **Username**. (This is the same username that you use to log on to UC on your desktop PC.)
 - c. Enter your account **Password**. (This is the same password that you use to log on to UC on your desktop PC.)
2. Enable the **Automatically log on** option if you would like to log on automatically to UC without entering the Web address, username, and password information.

If this option is enabled, the application will not prompt you for Web address, username and password information, unless you have not already provided it or the logon fails.
3. Press **OK** in the upper, right corner of the dialog box.

NOTE: If you enter the wrong username/password on three consecutive attempts, an error message appears, the logon dialog box closes, and you must attempt another logon from the system tray menu.

To log off of UC:

Press the system tray icon, then select **Log off** from the menu. The UC view items on the main interface are disabled.

USING UC VIEWS

This section provides instructions on how to use UC features and options from your Model 8690 endpoint.

Placing a Call

The most common task you can complete using UC is to place a call. You can place a call using any of the following features in the UC view:

- Search feature (see [page 99](#))
- Redial feature (see [page 102](#))
- Speed-Dial list (see [page 103](#))

You can also place a call from the following UC views:

- Call Log (see [page 109](#))
- Messages (see [page 104](#))
- Address Book (see [page 113](#))

Changing Web Client Options




Before you begin using UC on your endpoint, note that some options must be changed or implemented from the Web Client on your PC. These options include:

- Synchronizing your Address Book
- Editing your Favorites list (list of often-used feature codes)
- Changing DND on a device
- Changing Manual Forwarding on a device
- Editing personal account information and preferences
- Using Advanced Search
- Adding, editing, and deleting the following:
 - Devices
 - Statuses
 - Groups
 - Call Routing Rules
 - Greetings
 - Speed-Dial buttons

NOTE: You cannot access the UC Web Client URL from your endpoint's browser.

For instructions on using the Web Client on your desktop PC, see the latest version of the *Unified Communicator User Guide*.

UNIFIED COMMUNICATOR VIEW


The Unified Communicator view displays an icon of your current status next to your current location in the upper-left portion of the screen. The  icon indicates that you are available. The  icon indicates that you are unavailable. On the right side of the screen, there is a drop-down list that contains all of your saved status entries. You can use this list to change your status to any of the saved status entries. In addition, you can create a temporary status by pressing the  icon located to the right of the drop-down list.

Changing Your Status

NOTE: You must use the Web Client to delete and edit your Status **as well as to create your new, permanent composite status**. You can however, create a temporary status using your endpoint.

You can change your UC status using the status drop-down box in the UC view next to the composite status icon.


To change your status:

1. Press **Unified Communicator** on the endpoint display.
2. Select a status from the drop-down list next to the  icon. Your status icon changes to reflect the selected status.

Creating a Temporary Status

There are times when you may not be able to create a new composite status with the Web Client. For example, you may be going to a new location for a short time. In this case, you can create a new temporary composite status for this location.

To create a temporary composite status:

1. Press **Unified Communicator** on the endpoint display.
2. Press .
3. Select a status in the Temporary Status dialog box. Your choices are:
 - Available
 - Unavailable
4. Enter an extension number where you can be reached.
5. Press **Create Status**. Your status switches to the new temporary composite status, and the temporary status is saved in the status drop-down list.

Performing a Search

NOTE: You must use the Web Client to use the **Advanced Search** function.

ALSO: Unified Communicator will automatically try to eliminate duplicate results from the search results list. If the search matches an account, as well as one or more devices owned by the account, the search results only display the matching account.

The type-ahead search function allows you to search for contacts, accounts, or devices. The search function searches the following contact fields:

- first name
- middle name
- last name
- company
- device username
- device description
- device extension


Each search will match on the search text if it appears anywhere within one of the above fields. For example, a search for “sc” would match on all of the following:


- Contact with First Name: **Scott**
- Contact with Last Name: **Prescott**
- Contact with Middle Name: **Rosco**
- Contact with Company: **Bill’s Scooters**


Search results appear in a table under the following columns as you type:


- **Name:** Indicates the type of contact displayed with an icon and the contact or device name. If the contact is an account or a device in your address book, the icon also indicates the current status. If the contact is an account or device that is not in your address book, the icon indicates the result type, but it will indicate an unknown status. The search area results may include one or more of the following icons:

Account icons


 Indicates that the status of the user is currently unknown. Press this icon to retrieve a snapshot of the status. The snapshot reverts back to an unknown state in approximately 30 seconds.


 Indicates that a user is currently available.


 Indicates that a user is currently unavailable.


 Indicates that a user is currently on a call.

Device icons


 Indicates that the DND status for the device is currently unknown. This icon displays if the type-ahead results display a device that is not currently in your address book. Press this icon to retrieve the status. The snapshot reverts back to an unknown state in approximately 30 seconds. This icon can also appear when the node the device belongs to is down or when the connection between UC and the CT Gateway is down.


 Indicates that the DND status for the device is currently OFF.


 Indicates that the DND status for the device is currently ON.

 Indicates that the device is currently on a call.

Static contact icons

 Indicates a simple contact in your address book. No status information is available for this result type.


 Indicates a simple company contact in your address book. No status information is available for this result type.

- **Source:** Indicates where the search result was found. The source may be one of the following: address book, accounts, or devices.
- **Options:** Pressing the  icon opens the Call dialog box. You can place a new call or transfer the selected call in your Call List to this contact.

To perform a search:

1. Press **Unified Communicator** on the endpoint display.
2. Press **Search**.
3. Use the Input Panel to enter search information by contact or device name or by number.

4. When the search is complete, do any of the following:

- **To add the search result to the address book or speed-dial list:**
 - a. Select the search result.
 - b. Press **Add to Address Book** or **Add to Speed Dial**. Adding a contact to your speed dial-list automatically adds it to your address book.
- **To place a call:** Press the  icon next to a contact to open a Call dialog box that lists the telephone numbers for the contact. You can also double-press a search result to open the place call dialog. This icon does not appear if no numbers exist (i.e., number field is blank). Select from any of the following options:
 - Press one of the numbers in the list to initiate a call to that number.
 - Press **Find Me** to place a call to the account's primary device, allowing the account's call routing rules to route the call to the appropriate location. This option is only available if the contact is linked to an account, and the account has at least one device associated with it.
 - If the contact is linked to an account with at least one device, or if the contact is linked to a device, there will be two additional options in the popup menu: **Voicemail** and **Leave Message**. Press **Voicemail** to call the voice mail of the given person/device. Press **Leave Message** to leave a station message for the given person/device. If you leave a station message, the station message is left at the current location, or it is left at the primary device if the current location is not a UC device.

Redialing a Number

The Redial feature displays the last five outgoing calls (from the call log) as buttons containing information about the call. You can press one of the buttons to place a return call.

To redial a number:

1. Press **Unified Communicator** on the endpoint display.
2. Press **Redial**. The Redial dialog box appears.
3. Press one of the five buttons in the list. The Call dialog box appears.
4. Select from any of the following options:
 - Press one of the numbers in the list to initiate a call to that number.
 - Press **Find Me** to place a call to the account's primary device, allowing the account's call routing rules to route the call to the appropriate location. This option is only available if the contact is linked to an account, and the account has at least one device associated with it.
 - If the contact is linked to an account with at least one device, or if the contact is linked to a device, there will be two additional options in the popup menu: Voicemail and Leave Message. Press **Voicemail** to call the voice mail of the given person/device. Press **Leave Message** to leave a station message for the given person/device. If you leave a station message, the station message is left at the current location, or it is left at the primary device if the current location is not a UC device.

Running Feature Code Favorites

NOTE: You must use the Web Client to set up your **Favorites** list.

The Favorites button displays a list of feature code favorites for each device you own.

To run a feature code favorite:

1. Press **Unified Communicator** on the endpoint display.
2. Press **Favorites**. The Feature Code Favorites dialog box appears.
3. Press the feature code you want to run.

NOTE: Some feature codes may require additional input on the display.

Working With the Speed-Dial List

If you have added contacts to your speed-dial list, the list is located below the **Search**, **Redial**, and **Favorites** buttons (the location may vary depending on the display skin used). The speed-dial list provides quick access to frequently called numbers and shows the current status of accounts and devices.

NOTE: If you have several speed-dial entries, they are displayed (in alphabetical order) on two or more pages labeled “Page 1,” “Page 2,” etc. Click the page label to switch to that page of buttons.

To add contacts to the speed-dial list, use one of the following options:

- *If you want to use the address book*, press an address book entry to select it, then press **Add To Speed Dial**.
- *If you want to use the type-ahead search*, press a search results item to select it, then press **Add to Speed Dial**. Refer to [page 99](#) for information on the using the Search feature.

NOTE: To select a range of items, activate the Input Panel (see [page 13](#)). Select the first item in your list, press the SHIFT key on the Input Panel, then select the last item in the list. You can also select one item, then press the CTRL key and select additional items.


To delete speed-dial list buttons:

Use the Web Client from your desktop to delete speed-dial buttons from the speed-dial list, or to add/edit the list directly.

To make a call using a speed-dial button:

1. Press **Unified Communicator** on the endpoint display.
2. Press a speed-dial button.
3. Select from any of the following options:
 - Press one of the numbers in the list to initiate a call to that number.
 - Press **Find Me** to place a call to the account’s primary device, allowing the account’s call routing rules to route the call to the appropriate location. This option is only available if the contact is linked to an account, and the account has at least one device associated with it.
 - If the contact is linked to an account with at least one device, or if the contact is linked to a device, there will be two additional options in the popup menu: Voicemail and Leave Message. Press **Voicemail** to call the voice mail of the given person/device. Press **Leave Message** to leave a station message for the given person/device. If you leave a station message, the station message is left at the current location, or it is left at the primary device if the current location is not a UC device.

MESSAGES VIEW



The Messages view displays a list of voice mail, station, and system messages. Additional details are provided when pressing .



The messages are listed in a table containing the following columns:




- **From:** Specifies the message type. This column also indicates the telephone number (and the name, when available) of the caller that left the station or voice mail message. If the message is a system message, this column displays the message.
- **Mailbox:** Indicates the mailbox where the voice mail message was left.
- **Number:** Indicates the number of voice mail messages left in the mailbox.
- **Options:** Contains icons allowing access to voice mail, station, or system messages.

To check voice mail, station, or system messages:

Press **Messages** on the endpoint display. The actions you take depend on the message type. Message types include the following:

 **Station Message:** Press the  icon next to a station message to place a call to the person that left the station message, or double-press the station message to place the call.

 **Voice Mail Message:** Press the  icon next to a voice mail message to place a call to your voice mail system, or double-press the voice mail message to place the call.

 **System Message:** Press the  icon to open a dialog box showing the system message text. You can also select the  button below the message list to open a dialog box displaying the complete system message text.


To delete station or system messages:

1. Press **Messages** on the endpoint display.
2. Select one or more station or system messages, then press **Delete**.

NOTE: You can only delete voice mail messages using the voice mail system.

CALL LIST VIEW

The Call List view displays a list of your current calls. These include calls that are ringing, connected, or holding. The Call List view automatically appears any time you place or receive a call and remain active until you navigate to a different view. When the last call in the list ends, the previous view is displayed. You cannot sort the call list. The call list shows all call activity for every device you own (in addition to the Model 8690).

If an incoming caller is positively identified, a Caller ID icon () appears next to the caller's name. This indicates the caller was positively identified and the call followed any routing rules you may have set up for the caller. Calls are displayed under three columns:

- **State:** Indicates the current call state. Call states include the following:



Indicates a call that is currently in the dialing stage.



Indicates an incoming ringing call. Double-press to answer.



Indicates an outgoing ringing call.



Indicates a connected call.



Indicates a muted, connected call.



Indicates a connected conference call.



A combination of these two icons indicates a muted, connected conference call.



Indicates a call you placed on hold. Double-press to answer.



Indicates you are currently holding for a connected call.




Indicates a call in an error state. The most common example is a call you place to an endpoint that is in DND. When this occurs, you hear a fast busy tone for approximately one minute before the call terminates. During this time, the call is displayed in the call list where you can terminate the call earlier if desired.



Indicates that group listen is currently enabled on the call.



Indicates that the given call is currently being recorded.

- **Name:** Indicates the name of the party on the other end of the call. A name is only displayed if it is known. Next to the name, the  icon indicates positive Caller ID.
- **Number:** Indicates the number (if known) of the party on the other end of the call.

- **Call Control Buttons:** Below the call list, buttons appear that allow you to control the selected call(s). If you select a call from the call list, the state of the call determines which Call Control buttons are displayed. Call Control buttons include:

Hold Places the selected call on hold. This button is only present if the selected call is in a connected state.

Answer Answers the selected call. This button is only present if the selected call is an incoming ringing call or if the call is on hold.

Transfer Transfers the selected call. Refer to [page 107](#) for more information about transferring a call.

Mute Toggles the Mute feature on and off for the selected call. You can tell whether or not the selected call is currently muted based on the icon displayed in the state column (see [page 105](#)). If your current active call is muted, the **Mute** button on the dialpad is shown in a selected state. Depending on the skin you are using, the button may appear with a lamp next to it, or it may appear highlighted.

Record Toggles the Record-A-Call feature on or off for the selected call. You can tell whether or not the selected call is currently being recorded based on the icon in the state column (see [page 105](#)). After the call is recorded, it is sent to your voice mail. If you have selected the option to receive message alerts, a popup message indicates the mailbox number.

Hangup Ends the call.

Delete Deletes the selected item from the list.

Details Displays detailed information for the selected item in the list.

NOTE: Call Control buttons are displayed based on the features that are enabled on the system *and* the state of the displayed call. The operating mode of the endpoint dictates which features are supported. For example, if the Record-A-Call feature is not enabled, **Record** is not displayed. Similarly, if the call is in a state that does not support the Record-A-Call feature (i.e., on hold), **Record** is not displayed.


When UC receives a call from a telephone number that it cannot match to a contact in the address book, it uses positive Caller ID to try to identify the caller. If the caller is identified as a contact in your address book, a wizard automatically launches after you answer the call to allow you to save the new number for the contact.



The following instructions are for common tasks that you can perform using the Call List view.

To save a new telephone number for an identified contact:


1. Select the contact type to associate with the number (e.g., Mobile, Home, etc.).
2. Press **OK** to store the number or **Cancel** to cancel.
3. Select the check box if you do not want to be prompted to save numbers in the future. You can also set this preference by navigating to **My Account** on the Web Client.

To place a call on hold:


1. Select the call you want to place on hold.
2. Press .

The  icon indicates that a call is on hold. To answer a call on hold, press .


To transfer a call using .

1. Select the call you want to transfer.
2. Press .
3. *If you want to transfer to a number:* Enter the digits and press **OK** to transfer the call.


If you want to search for the party to which you want to transfer: Press the **Search** button. Your cursor is placed in the type-ahead search box. Type the name of the person to which you want to transfer the call. The search results include a transfer icon



 in the features column. Press the icon to transfer the call to that person.

To transfer a call using a type-ahead search:


1. Select the call you want to transfer.
2. Go directly to the type-ahead search and search for a person.
3. Press  next to the search result to transfer the call to that person.


To mute a call:

1. Select the call you want to mute.
2. Press .

NOTE: The  icon indicates that a call is muted. To unmute a call, select the call and press .

To record a call:

1. Select the call you want to record.
2. Press .

To stop recording the call, select the call and press .

NOTE: Recorded calls are saved in voice mail. When you record a call, a voice mail message icon indicates that you have a new voice mail message, and a voice mail indication appears on your endpoint. If you have chosen to receive message alerts, you also receive a message alert.


To create a conference call, use one of the following options:

- *If you want to conference selected or holding calls:* Select two or more connected or holding calls in your call list. Press **Conference**.
- *If you want to conference all calls:* With one call selected, press **Conference**.

The selected connected and/or holding calls disappear from your call list, and a new conference call appears.

NOTE: **Conference** is only present if you have two or more calls in your call list that can be conferenced. The conference call displays as a single call in the call list indicated with **CONFERENCE**. Each conference member is displayed under the call by name (if available) or by number.

To drop a party from a conference call:

Press the  icon next to the name of the person, or select the name of the person you want to drop from the conference, and then press **Hangup**. This option is only visible in the call list of the conference originator.

To end a conference call:

Select the call and press **Hangup**.

CALL LOG VIEW

The Call Log view allows you to view a history of your recent calls. For each call, you can view call details such as the call type, date and time of the call, and the name and number of the person that called. If a call in the log was from another UC account or device, the current account/device status is also displayed. You can return a call directly from the call log, and you can add a call log entry to your address book.

The main call log screen displays the date and time of the call, the name and number of the called party and the call result. Additional details are provided when pressing

Details

Call Log Main Screen

The call log main screen displays the following information:

- Date/Time:



Indicates an incoming call was answered.



Indicates an incoming call was missed.



Indicates an incoming call was transferred to another destination.



Indicates an incoming call went to voice mail.



Indicates an outgoing call was answered.





Indicates an outgoing call was not answered.





Indicates an outgoing call was transferred to another destination.


- **Name/Number:** Displays the name and number of the caller or called party (if available). If the name/number is not recognized, UC indicates that the called party/caller is unknown. If the caller is a device or account (or a contact linked to a device or account), this column also displays the caller's current status as an icon. If the caller exists in your address book, the caller's current status is always displayed and is updated in real time as the status changes. The status icon can be one of the following:


 Indicates that the status of the user is currently unknown. Press this icon to retrieve a snapshot of the status. The snapshot reverts back to an unknown state in approximately 30 seconds.


 Indicates that a user is currently available.


 Indicates that a user is currently unavailable.


 Indicates that a user is currently on a call.

 Indicates that the DND status for the device is currently unknown. This icon displays if the type-ahead results display a device that is not currently in your address book. Press this icon to retrieve the status. The snapshot reverts back to an unknown state in approximately 30 seconds. This icon can also appear when the node the device belongs to is down or when the connection between UC and the CT Gateway is down.

 Indicates that the DND status for the device is currently OFF.

 Indicates that the DND status for the device is currently ON.

 Indicates that the device is currently on a call.

 Indicates a call log entry that is neither a device or account. The presence of this icon does not necessarily indicate that the given name/number corresponds to an entry in your address book.

- **Result:** Indicates the call result as any of the following:
 - **Missed:** Indicates the incoming call was not answered.
 - **Answered:** Indicates the called party answered the call.
 - **Answered at:** Indicates the incoming call was answered at the specified endpoint.
 - **Unanswered:** Indicates the outgoing call was not answered.
 - **Voice mail:** Indicates the call went to your voice mailbox.
 - **Transferred to <number>:** Indicates the call was transferred

To sort the call log:

1. Press **Call Log** on the endpoint display.
2. Press any of the call log columns to sort the call log by date and time, name and number, or call result.

To return a call:

1. Press **Call Log** on the endpoint display.
2. Double-press the icon next to the entry.
3. Select from any of the following options:
 - Press one of the numbers in the list to initiate a call to that number.
 - Press **Find Me** to place a call to the account's primary device, allowing the account's call routing rules to route the call to the appropriate location. This option is only available if the contact is linked to an account, and the account has at least one device associated with it.
 - If the contact is linked to an account with at least one device, or if the contact is linked to a device, there will be two additional options in the popup menu: Voicemail and Leave Message. Press **Voicemail** to call the voice mail of the given person/device. Press **Leave Message** to leave a station message for the given person/device. If you leave a station message, the station message is left at the current location, or it is left at the primary device if the current location is not a UC device.

To add a call log entry to the address book:

1. Press **Call Log** on the endpoint display.
2. Select one or more entries containing a name or number, then press **Add to Address Book**. The entry is added to your Address Book.

NOTE: Call log entries without a name or number are ignored.

To delete a call log entry:


1. Press **Call Log** on the endpoint display.
2. Select one or more call entries and then press **Delete**. The entry is deleted from the list.

Call Details Dialog Box


The call log Details dialog box displays the following call information:

- **Type:** Displays the call type (incoming or outgoing) with an icon (see [page 106](#)) and text.
- **Date/Time:** Displays the date and time the call came in.
- **Name/Number:** Displays the name/number of the caller/called party. An icon indicates the current contact status if the entry corresponds to an account or a device. See [page 106](#) for a description of the icons. For an account, the current composite status is displayed. For a device, the current DND status is displayed. If the entry does not correspond to an account or a device, the status is unknown. This status is simply a snapshot and does not update in real time.
- **Result:** Displays the call result, as discussed on [page 110](#).
- **Call Steps:** Displays every step the call went through before it terminated. Each step indicates the date and time at which the step occurred, the action the step took (e.g., CONNECTED), and the telephone number of the other party involved (if applicable).

To view call details:

Select the entry from the call log and press .

To return or delete a call from the call log details dialog box:

1. Press **Call Log** on the endpoint display.
2. Select the entry, then press .
3. Select any of the following options:
 - **Call:** Opens the Call dialog box allowing you to place the call, leave a station message, or go directly to the voice mail system for the party you want to call.
 - **Delete:** Removes the entry from the call log.
 - **Close:** Closes the dialog box and returns to the call log.

ADDRESS BOOK VIEW

NOTE: You must use the Web Client to Synchronize your UC Address Book and to add, edit, and delete Groups.

The Address Book view is where you store and work with your contact information. The address book stores two types of contacts: static and linked. Linked contacts are associated with an account or device on the telephone system, and display a real-time status. Static contacts contain information about a person or company you manually added to the address book. Static contacts are not linked to an account or device and do not display status.

Contacts are displayed in a scrollable table under the columns, Name, Status, and Options. You can sort, filter, edit, call, check the status of, or simply view address book information.

Sorting Address Book Contacts

The Address Book table allows you to sort your contacts using the Name and Status column headings.

To sort Address Book contacts:

1. Press **Address Book** on the endpoint display. You can sort the address book by the following columns:
 - **Name:** Lists contacts as [Last Name, First Name].
 - **Status:** Displays current status information for the contact. The information displayed depends on the type of result as follows:
 - *Linked Account:* Displays the current status icon for the user.
 - *Linked Device:* Displays the current DND status for the device.

NOTE: An additional column displays the icon to call a contact. This column cannot be sorted.

2. Press either of the column names to sort the contacts in the table. Pressing the same column name again sorts the data in the opposite direction (ascending/descending order).

Filtering Address Book Contacts

The tabs located at the bottom of the Address Book table allow you to filter contacts.

To filter the contact list:


1. Press **Address Book** on the display.
2. Filter the address book contacts, using either or both of the following methods:
 - Press the following tabs to filter a subset of your contacts:
 - **#**: Filters contacts to display only those names that start with non-alphabetic characters.
 - **ABC** through **YZ**: Filters contacts by the selected letter(s).
 - **ALL**: Displays all contacts in the address book.
 - Press the **Group** drop-down selection list to filter the address book by group.


To check contact status:


1. Press **Address Book** on the endpoint display.


NOTE: The Status column displays the real-time status for the contact. Simple contacts (contacts that are not linked to an account or device on the system) will not display a status.


Contacts linked to system accounts and devices can display one or more of the following icons:


 Indicates that the status of the user is currently unknown. Press this icon to retrieve a snapshot of the status. The snapshot reverts back to an unknown state in approximately 30 seconds.


 Indicates that a user is currently available.

 Indicates that a user is currently unavailable.


 Indicates that a user is currently on a call.


 Indicates that the DND status for the device is currently unknown. This icon displays if the type-ahead results display a device that is not currently in your address book. Press this icon to retrieve the status. The snapshot reverts back to an unknown state in approximately 30 seconds. This icon can also appear when the node the device belongs to is down or when the connection between UC and the CT Gateway is down.

 Indicates that the DND status for the device is currently OFF.

 Indicates that the DND status for the device is currently ON.

 Indicates that the device is currently on a call.



 Indicates a call log entry that is neither a device nor account. The presence of this icon does not necessarily indicate that the given name/number corresponds to an entry in your address book.

 Indicates a simple company contact.

2. Check the Status column for text information about the current account or device status.

To add a simple contact to your address book:

1. Press **Address Book** on the endpoint display. (The list appears empty if no contacts have been added.)
2. Press **Add Contact**.
3. Enter the following information for this contact:
 - **Name** (see [page 117](#))
 - **Work** (see [page 117](#))
 - **Home** (see [page 118](#))
4. Press **OK**. The information is saved for your address book, only and the newly added simple contact appears in the address book.

NOTE: Filling out only the Work tab Company field results in adding a simple company contact. The icon changes from a simple contact icon  to this icon .

5. Repeat steps 2 - 4 to add more simple contacts.

NOTE: You can add your system's voice mail extension as a contact and add it to your speed-dial buttons for quick access to voice mail.

Adding a Linked Contact

A linked contact is connected to a UC account or device in the system. Like simple contacts, linked contacts also store contact information. Unlike simple contacts, linked contacts also display real-time status information for the account or device to which they are linked.

To add a linked contact, either use the type-ahead search (see [page 99](#)) or the call log main screen (see [page 109](#)).

To add a linked contact:

1. Press **Unified Communicator** on the interface, then press **Search**.
2. Enter the first few characters of the contact using the Input Panel. (You can also enter the entire contact name or device extension.)
3. If there are too many results, enter additional characters to refine the search. The search results include all matching contacts in your address book, all matching users, and all matching devices in the system. The search function automatically tries to eliminate duplicate results from the list. If the search matches an account, as well as one or more devices owned by the account, then the search results will only display the matching account.

NOTE: To select a range of items, activate the Input Panel (see [page 13](#)). Select the first item in your list, press the SHIFT key on the Input Panel, then select the last item in the list. You can also select one item, then press the CTRL key and select additional items.

4. Press **Add to Address Book**. The selected items are added as linked accounts and linked devices respectively.

NOTE: Selecting the **Add to Speed Dial** button adds the result to the speed-dial list and to the address book.

5. Repeat steps 1-4 to add additional linked contacts.

To delete a contact from your address book:

1. Press **Address Book** on the interface. The address book with your contact information appears.
2. Select a contact and press **Delete**.

NOTE: Removing a contact from the address book also removes it from the speed-dial list.

To access and edit address book contact information:

1. Press **Address Book** on the interface. The Address Book view appears.
2. Press the contact you want to edit, then press **Edit**. You can also double-press the contact to enter edit mode.

NOTE: This panel provides full access to all of the contact information as it appears in the database. To edit your personal information, use the Web Client from your PC.

3. Change the information in the following tabs:
 - **Name:** Includes the following fields:
 - *First, Middle, and Last* (64-character limit)
 - *E-mail addresses:* Displays a list of all the contact's e-mail addresses (256-character limit).

NOTE: Press **Add** to add an e-mail entry to the list. Select an entry and press **Edit** to change an entry in the list, or press **Delete** to remove the entry from the list. Selecting an entry and pressing **Make Primary** will move that entry to the top of the list and make it the primary E-mail address. Some contact managers such as Microsoft Outlook[®] distinguish between the primary and secondary E-mail addresses.

- *Notes:* Allows you to add comments for the contact (4096-character limit).
- *Make contact private:* Select this option to mark the selected contact as private. Private contacts are only visible in your address book. They are not visible to other users or administrators.
- **Work:** Includes the following fields:
 - *Company* (64-character limit)
 - *Title* (64-character limit)
 - *Department* (64-character limit)
 - *Work Street Address* (64-character limit)
 - *Work Primary Phone* (64-character limit)
 - *Work Secondary Phone* (64-character limit)
 - *Work Mobile Number* (64-character limit)
 - *Work Fax Number* (64-character limit)
 - *Work IP Phone* (64-character limit)
 - *Work Pager Number* (64-character limit)
 - *Work Pager Number* (64-character limit)
 - *Work Web Page* (2048-character limit)


NOTE: Include <http://> in the **Work Web Page** address.

- **Home:** Includes the following fields:
 - *Home Street Address* (64-character limit)
 - *Home Primary Phone* (64-character limit)
 - *Home Secondary Phone* (64-character limit)
 - *Home Mobile Number* (64-character limit)
 - *Home Fax Number* (64-character limit)
 - *Home Pager Number* (64-character limit)
 - *Home IP Phone* (64-character limit)
 - *Home Web Page* (2048-character limit)

NOTE: Include `http://` in the **Home Web Page** address.

4. Press **OK**.

To place a call from the Address Book view:

1. Press **Address Book** on the interface.
2. Press the  icon next to a contact to open a place call dialog box listing the telephone numbers for the contact. This icon does not appear if no numbers exist (i.e., the number field was left blank). Select from any of the following options:
 - Press one of the numbers in the list to initiate a call to that number.
 - Press **Find Me** to place a call to the account's primary device, allowing the account's call routing rules to route the call to the appropriate location. This option is only available if the contact is linked to an account, and the account has at least one device associated with it.
 - If the contact is linked to an account with at least one device, or if the contact is linked to a device, there will be two additional options in the popup menu: **Voicemail** and **Leave Message**. Press **Voicemail** to call the voice mail of the given person/device. Press **Leave Message** to leave a station message for the given person/device. If you leave a station message, the station message is left at the current location, or it is left at the primary device if the current location is not a UC device.

CALL ROUTING VIEW

NOTE: You must use the Web Client to set up your **Call Routing** rules and to create **Greetings**.

The Call Routing view allows you to view and enable or disable the call routing rules you created on your PC desktop using the UC Web Client. To enable call routing, select the **Enable call routing** option under the displayed call routing rules.

To view call routing rules:

1. Press **Call Routing** on the endpoint display. The list of call routing rules appears.
2. *To expand a rule and view rule steps:* Press the + sign next to the rule.

To enable or disable a rule: Press the icon next to the rule. A green-filled radio button (🟢) indicates an enabled rule. A red-filled square button (🔴) indicates a disabled rule. Press the icon in this column to enable/disable the individual rule.

The client application has an option to display alerts for new messages, status changes, and incoming calls while logged in to UC. This option is set on the Behavior tab of the Options dialog box (see [page 36](#)). An alert consists of a small window containing information, and sometimes buttons, which appears on the screen and allows you to perform a related action. The alert remains on the screen for a few seconds, and then scrolls off the screen and disappears. If you want to close the alert window immediately, press the “X” in the upper-right corner of the alert window.

NOTE: You will only receive alerts while your endpoint is logged on to UC.

Receiving New Message Alerts

This alert appears when you receive a new station or voice mail message on any of your devices in your UC account. This alert indicates the message type received, which can be one of the following:

- **If it is a station message:** The alert indicates who left the message and includes a button you can press to place a return call to that person.
- **If it is a voice mail message:** The alert indicates the mailbox where the message was delivered and includes a button you can press to call the mailbox to retrieve the message.

Receiving Status Change Alerts

The Status Change alert appears any time a status of someone in your UC speed-dial list changes. The alert information differs as follows:

- *If the contact in your speed-dial list is a device:* The alert indicates the person whose status changed and the new DND status of the device.
- *If the contact in your speed-dial list is an account:* The alert indicates the person whose status changed and the account's new status description.

NOTE: The alert also includes a button you can press to place a call to the person whose status has changed.

Receiving Incoming Call Alerts

The Incoming Call alert appears any time your endpoint receives an incoming call. The alert indicates the caller ID (if available) and includes buttons you can press to answer the call or to send the call to the voice mail of your primary device. You can configure your primary device on the Devices view of the Web Client on your PC.

NOTE: UC searches your address book for a match in addition to using Caller ID information to determine the true identity of the caller.

Using E-Mail Reader

SECTION CONTENTS	PAGE
Introduction	122
E-Mail Reader Features	123
Using Your Advanced Mailbox	124
Setting Up Your E-Mail Password	125
Accessing E-Mail Messages	127
Using Main Menu E-Mail Reader Count	129
Accessing Fax Messages	130
Recovering Deleted Messages	131
Changing Message Envelopes	132
Voice Mail Flowchart (Advanced Mailbox).	133

INTRODUCTION

Enterprise Messaging (EM) is the voice processing system that provides advanced messaging features with the E-mail Reader feature. This section provides information and instructions about advanced mailbox tasks for users who have E-Mail Reader enabled for their mailbox.

If your mailbox does not have E-Mail Reader enabled, you have a standard voice mailbox (see [page 15](#)). The instructions for many voice mail tasks are identical for standard voice mailbox and advanced mailbox users, therefore, the instructions for these common mailbox tasks are not repeated in this section.

See the following pages for common mailbox tasks:

- Initializing your mailbox (see [page 26](#))
- Recording your personal greetings (see [page 27](#))
- Recording your voice mail directory name (see [page 28](#))
- Accessing your mailbox (see [page 29](#))
- Disabling and enabling ASR (see [page 30](#))
- Accessing voice mail messages (see [page 57](#))
- Recording and sending voice mail messages (see [page 60](#))
- Canceling unheard voice mail messages (see [page 62](#))
- Changing your mailbox password (see [page 71](#))
- Changing the call screening transfer method (see [page 73](#))
- Programming a fax destination (see [page 74](#))
- Changing the message search order (see [page 74](#))
- Programming remote messaging (see [page 75](#))
- Screening calls (see [page 82](#))
- Using the voice mail directory (see [page 87](#))

NOTE: For a voice mail flowchart for standard mailbox users, see [page 151](#).

E-MAIL READER FEATURES

When E-Mail Reader has been enabled for your mailbox, you have the advanced mailbox. The advanced mailbox unifies your local voice mail messages and your remote fax and e-mail messages in one convenient location. E-mail Reader uses Text-to-Speech (TTS) capabilities to convert the text in an e-mail message to a **.wav** file. If E-Mail Reader is enabled for your mailbox, you can access voice mail, e-mail, and fax messages in your mailbox using your endpoint.

When you access an e-mail message in your mailbox, E-Mail Reader first announces your e-mail according to the envelope options that you set (see [page 132](#)). Then, after the envelope is played, E-Mail Reader reads the text in the body of the message. Once you have listened to your e-mail, you can access additional options to reply, forward, save, or delete the message (see [page 127](#)).

When you access a fax message, E-Mail Reader announces the fax envelope according to the envelope options that you set (see [page 132](#)). Because a fax message is received by your e-mail account as an attachment to an e-mail message in the form of a **.tiff** file, E-Mail Reader cannot read the text in the body of the fax. To view the fax and read it, you must access it from your e-mail account. With your advanced mailbox you can save, delete, and forward a fax (to another fax machine) using the available menu options, when prompted (see [page 130](#)).

USING YOUR ADVANCED MAILBOX

After you set up your mailbox (see [page 26](#)), you can use personal or system greetings to let callers know if you are out of town, on a call, etc. You can send messages to individuals and to a group of people if your voice mail administrator has programmed a name for the group. In addition, various options allow you to customize your mailbox, manage your messages, and screen your calls. To allow the system to retrieve e-mail and fax messages from your e-mail account, you must first set up your e-mail password (see [page 125](#)).

When you access your mailbox (see [page 29](#)), the system announces how many new and saved voice mail, fax, and e-mail messages you have in your mailbox. You can choose which type of message you want to access by selecting voice mail, fax, or e-mail from the main subscriber menu.

Main menu options include the following:

- **To access voice mail messages:** Say “Voice Mail” or press **1**.
- **To record voice mail messages:** Say “Record” or press **2**.
- **To access e-mail messages:** Say “E-Mail or press **3**.
- **To access personal mailbox options:** Say “Personal” or press **4**.
- **To access message options:** Say “Options” or press **5**.
- **To access facsimile messages:** Say “Facsimile” or press **6**.
- **To disable ASR (for that call only):** Say “Disable” or press **8**.

At any menu level, you can say “Cancel” or press ***** to cancel or return to the previous menu or say “Accept” or press **#** to accept. For a voice mail flowchart for advanced mailbox users, see [page 133](#).

NOTE: All of the menu options and instructions for using the advanced mailbox are presented as voice commands and numeric entries.

SETTING UP YOUR E-MAIL PASSWORD

When E-Mail Reader is enabled for your mailbox, the EM system prompts you to enter your e-mail password after you or your voice mail administrator does one of the following:

- Set up your mailbox (see [page 26](#))
- Change your e-mail password for your e-mail client

To access your e-mail and fax messages from your advanced mailbox, you must set up your e-mail password. While completing the setup, you cannot use Automatic Speech Recognition (ASR) if it is enabled for your voice mail system. To prevent others from overhearing your password, you must use the dialpad buttons on your endpoint to set up your e-mail password.

When setting up your password, the number of times you press a button determines which character is entered, as shown in the table on the following page. Notice that the capital letters and lower case letters require different button presses. As you press the buttons, the system announces the current character. For security reasons, use the handset and not the speakerphone when you set up your e-mail password.

E-mail passwords are case-sensitive and your entry must match your e-mail password exactly. Also, your e-mail password cannot include any characters that are not included in the table on the following page and cannot exceed 40 characters. Check with your administrator if you encounter any difficulties setting up your e-mail password.

To enter your e-mail password:

NOTE: To repeat menu instructions, say “Help” or press **0** at any time.

ALSO: If you enter an incorrect password, or if you choose to skip setting a new E-Mail Reader password, the Main Menu E-Mail Reader Count option (see [page 129](#)) is automatically disabled to prevent having to hear the invalid password prompt for each subsequent login and to protect against being locked out from your e-mail account.

1. Access your mailbox as described on [page 29](#). The system announces that it was unable to retrieve your e-mail and fax messages, and gives you the following options:
 - Say “Continue” or press **#** to access your mailbox without access to your e-mail messages.
 - Say “Password” or press **1** to enter your new e-mail password.
2. When prompted, enter your e-mail password using the dialpad buttons, and then press **#**. (Refer to the table below for dialpad button descriptions.)

NOTE: For a description of special character locations, press **2**.

3. Your new password is played. You have the following options:
 - Say “Accept” or press **#** to accept the password.
 - Say “Re-enter” or press **3** to erase and re-enter the password.

	NUMBER OF TIMES BUTTON IS PRESSED								
BUTTON	1	2	3	4	5	6	7	8	9
1	1	-	&	()	_	space*		
2	a	b	c	2	'	A	B	C	
3	d	e	f	3	!	D	E	F	
4	g	h	i	4	*	G	H	I	
5	j	k	l	5	#	J	K	L	
6	m	n	o	6	M	N	O		
7	p	q	r	s	7	P	Q	R	S
8	t	u	v	8	?	T	U	V	
9	w	x	y	z	9	W	X	Y	Z
0	0	@	:	.	,	/	+		

*Press **1** seven times for a blank space.

ACCESSING E-MAIL MESSAGES

NOTE: By default, the message lamp on your endpoint lights when you receive a new voice mail message. Although the lamp can be programmed for other functions, it cannot be programmed to indicate that you have received a new e-mail message.

E-Mail Reader does not distinguish between conventional e-mail messages and meeting invitations and responses. Therefore, e-mail messages and meeting messages (including invitations, cancellations, and responses) can all be accessed by selecting option three from the main menu.

When you access your e-mail messages, E-Mail Reader first announces the message according to the envelope options you select (see [page 132](#)). Then E-Mail Reader reads the text in the body of the message. After you access your message you can replay the message, listen to the next or previous message, replay the message envelope, save the message, or delete the message. In addition, you can reply to the message or forward a copy to another recipient.

When you select the reply option, you are prompted to record a message and your reply is sent as an attachment in the form of a **.wav** file. If the e-mail has multiple recipients, you have the option of replying to just the sender, or to all of the recipients. When you forward an e-mail message, the e-mail is converted to a fax and forwarded to the fax destination telephone number you specify.

NOTE: The body of Outlook meeting messages contain links that E-Mail Reader interprets as text. These links are displayed if you are using a third-party mail application or Outlook Express, but they are hidden in Outlook.

EXAMPLE: Sally User's supervisor creates a Sales Team meeting invitation in Outlook and sends it to Sally. Sally accepts the meeting and in the body of her acceptance e-mail she writes, "I'm looking forward to attending." When Sally's supervisor access Sally's meeting acceptance using E-Mail Reader, the e-mail is announced according to the supervisor's e-mail envelope preferences. Then E-Mail Reader reads Sally's written response followed by the hidden link inserted by Outlook, "I'm looking forward to attending. Microsoft Outlook Web Access: http://TMS-NT-EVS01/Exchange/Sally_User/Inbox/Accepted%3A%20Sales%20Team%20Meeting-5.EML."

To access your e-mail with E-Mail Reader:

NOTE: To repeat menu instructions, say “Help” or press **0** at any time.

1. Access your mailbox as described on [page 29](#).
2. Say “E-Mail” or press **3** to listen to your e-mail messages. Then select one of the following:
 - Say “New” or press **1** to listen to new messages.
 - Say “Saved” or press **3** to listen to saved messages.

NOTE: You may experience a delay if you have a large number of e-mail messages in your in-box (for example, more than 500 messages).

3. After the e-mail envelope is played, E-Mail Reader reads the body text of the e-mail message. While you are listening to a message, you can use the following options:
 - Say “Skip” or press **#** to skip to the end of the recording.
 - Say “Back up” or press **1** to “rewind” a few seconds and replay the message.
 - Say “Pause” or press **2** to pause. Say “Continue” or press **#** to continue.
 - Say “Forward” or press **3** to skip ahead.
 - Say “Lower” or press **4** to lower the volume.
 - Say “Envelope” or press **5** to play the message envelope.
 - Say “Higher” or press **6** to raise the volume.
 - Say “Delete Message” or press **9** to delete the message.
 - Say “Cancel” or press ***** to return to the previous menu.
4. When E-Mail Reader has finished reading the e-mail you have the following options:
 - Say “Replay” or press **1** to replay the message from the beginning.
 - Say “Reply” or press **2** to reply to the message. If the e-mail message had more than one recipient, you have the following options:
 - Say “Everyone” or press **1** to reply to all recipients.
 - Say “Sender” or press **2** to reply to the sender.
 - Say “Hear” or press **3** to hear all recipients.
 - Say “Forward” or press **3** to forward a copy of the message to a fax destination. Then say or enter the fax destination number. The system plays the fax destination number. Select one of the following:
 - Say “Yes” or press **#** to verify the number. The system announces that the fax is scheduled for delivery.
 - Say “No” or press ***** to start over.

NOTE: You cannot forward an e-mail message to a mailbox or group list. When you forward an e-mail message, the e-mail is converted to a fax and forwarded to the fax destination telephone number that you specify.

- Say “Previous” or press **4** to listen to the previous message.
 - Say “Envelope” or press **5** to play the introductory message envelope (see [page 132](#) for programming instructions).
 - Say “Next” or press **6** to listen to the next message.
 - Say “Save” or press **7** to save the message.
 - Say “Delete Message” or press **9** to delete the message.
-

NOTE: You may be prompted to confirm deleting the message. Say “Yes” to delete the message or “No” to cancel the request to delete the message.

5. Hang up.

USING MAIN MENU E-MAIL READER COUNT

After you set up your E-Mail Reader account, the system announces the number of voice mail, e-mail, and fax messages you have each time you access your mailbox before you can listen to your messages. The voice prompt that indicates the number of **e-mail** and **fax** messages is the “Main Menu E-Mail Reader Count” option. (Voice mail message prompts are not included in Main Menu E-Mail Reader Count and will always be played when you access your mailbox.)

You can disable the Main Menu E-Mail Reader Count option in your mailbox.

Disabling the Main Menu E-Mail Reader Count option defers e-mail and fax prompts **until** you select the E-Mail or Fax message option from the main menu. Disabling Main Menu E-Mail Reader Count does not disable E-Mail Reader. It only defers the voice prompts until the appropriate option is selected.

To disable or enable the Main Menu E-Mail Reader Count option:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options menu.
3. Say “More” or press **9** to select More Options.
4. Say “E-Mail Reader Count” or press **4** to select the E-Mail Reader Count toggle option.
5. *If E-Mail Reader Count is **enabled**, say “Disable” or press **1** to disable.*
*If E-Mail Reader Count is **disabled**, say “Enable” or press **1** to enable.*

ACCESSING FAX MESSAGES

NOTE: By default, the message lamp lights when you receive a new voice mail message. Although the lamp can be programmed for other functions, it cannot be programmed to indicate that you have received a new fax message.

When you access a fax message using option six on the main menu, E-Mail Reader announces the fax message according to the envelope options that you selected (see [page 132](#)). E-Mail Reader does not have the capability to read the text in a fax. You can, however, save, delete, and forward a fax (to the fax number that you specify) using the associated options.

To access fax messages and the associated options:

1. Access your mailbox as described on [page 29](#).
2. Say “Facsimile” or press **6** to access your fax messages. Then select one of the following:
 - Say “New” or press **1** to listen to new messages.
 - Say “Saved” or press **3** to listen to saved messages.
3. After the fax envelope is played, you have the following options:
 - Say “Forward” or press **3** to forward a copy of the message to another destination. Then say or enter the fax destination number. The system plays the fax destination number. Select one of the following:
 - Say “Yes” or press **#** to verify the number. The system announces that the fax is scheduled for delivery.
 - Say “No” or press ***** to start over.
 - Say “Previous” or press **4** to listen to the previous message.
 - Say “Envelope” or press **5** to play the introductory message envelope (see [page 132](#) for programming instructions).
 - Say “Next” or press **6** to listen to the next message.
 - Say “Save” or press **7** to save the message.
 - Say “Delete Message” or press **9** to delete the message.

NOTE: You may be prompted to confirm deleting the message. Say “Yes” to delete the message or “No” to cancel the request to delete the message.

4. Hang up.

RECOVERING DELETED MESSAGES

Recovering deleted messages varies based on media type. If you delete a voice mail message, you can retrieve it within a specific time frame (up to 24 hours, programmed by your voice mail administrator). The specified time frame for retrieving deleted e-mail and fax messages is determined by the Exchange administrator. Once you recover a deleted message, it is then restored to your saved-message queue. Deleted voice mail, e-mail, and fax messages that are not recovered within the specified time frames are automatically erased.

NOTE: Contact your system administrator if you want to know how long you have to recover deleted messages.

To recover deleted messages:

1. Access your mailbox as described on [page 29](#).
2. Say “Options” or press **5** for Message Options.
3. Say “Recover” or press **2** to access undelete options.
4. Specify which media type you would like to recover. Your options are:
 - Say “Voice Mail” or press **1** to recover a voice mail message.
 - Say “E-Mail” or press **2** to recover an e-mail message.
 - Say “Facsimile” or press **3** to recover a fax message.
5. *EITHER*, Say “Listen” or press **1** to listen to your deleted messages and choose which ones to recover. After each message you can:
 - Say “Replay” or press **1** to replay the message.
 - Say “Reply” or press **2** to reply to the message.
 - Say “Forward” or press **3** to forward the message.
 - Say “Previous” or press **4** to listen to the previous message.
 - Say “Envelope” or press **5** to play the message envelope.
 - Say “Next” or press **6** to listen to the next message.
 - Say “Recover” or press **7** to recover the message.

OR, say “Recover” or press **2** to recover all deleted messages.

OR, Say “Purge” or press **3** to **permanently** delete all deleted messages.
6. Hang up.

CHANGING MESSAGE ENVELOPES

When you receive a voice, fax, or e-mail message, a message “envelope” is played. The envelope can include the time and date the message was left, the source of the message, and additional information that is associated with the media type. Common envelope options for voice mail, e-mail, and fax include:

- **Time and Date:** The time and date the message was received.
- **Source:** The source of the voice, e-mail, or fax message.

These envelope options vary by media type:

- **Length:** The recorded time, in minutes, for **voice messages**.
- **Subject:** The text in the subject field for **e-mail** messages.
- **Pages:** The number of pages included in the **fax** attachment.


By default, all of the envelope options are enabled for each type of message. However, you can change your envelope options, as described below.

To change and save your message envelope:

1. Access your mailbox as described on [page 29](#).
2. Say “Personal” or press **4** to select the Personal Options Menu.
3. Say “Envelope” or press **4** to select the Message Envelope Options Menu.
4. Select the media type you would like to change:
 - Say “Voice Mail” or press **1**.
 - Say “E-Mail” or press **2**.
 - Say “Facsimile” or press **3**.
5. You can then do any of the following:
 - Say “Time, Date” or press **1** to enable or disable the time and date options.
 - Say “Source” or press **2** to enable or disable the message source option.
 - *For voice mail*, say “Length” or press **3** to enable or disable the message length option.
For e-mail, say “Subject” or press **3** to enable or disable the subject option.
For faxes, say “Pages” or press **3** to enable or disable the pages option.
 - Say “All Options” or press **4** to enable all options and return to the Personal Options Menu.
 - Say “None” or press **5** to disable the entire envelope and return to the Personal Options Menu.
 - Say “Accept” or press **#** to accept the changes.
 - Say “Cancel” or press ***** to return to the Personal Options Menu.
6. Hang up.

VOICE MAIL FLOWCHART (ADVANCED MAILBOX)

NOTE: In most menus, you can say "Cancel" or press ***** to return to the previous menu. Say "Accept" or press **#** to accept the option.

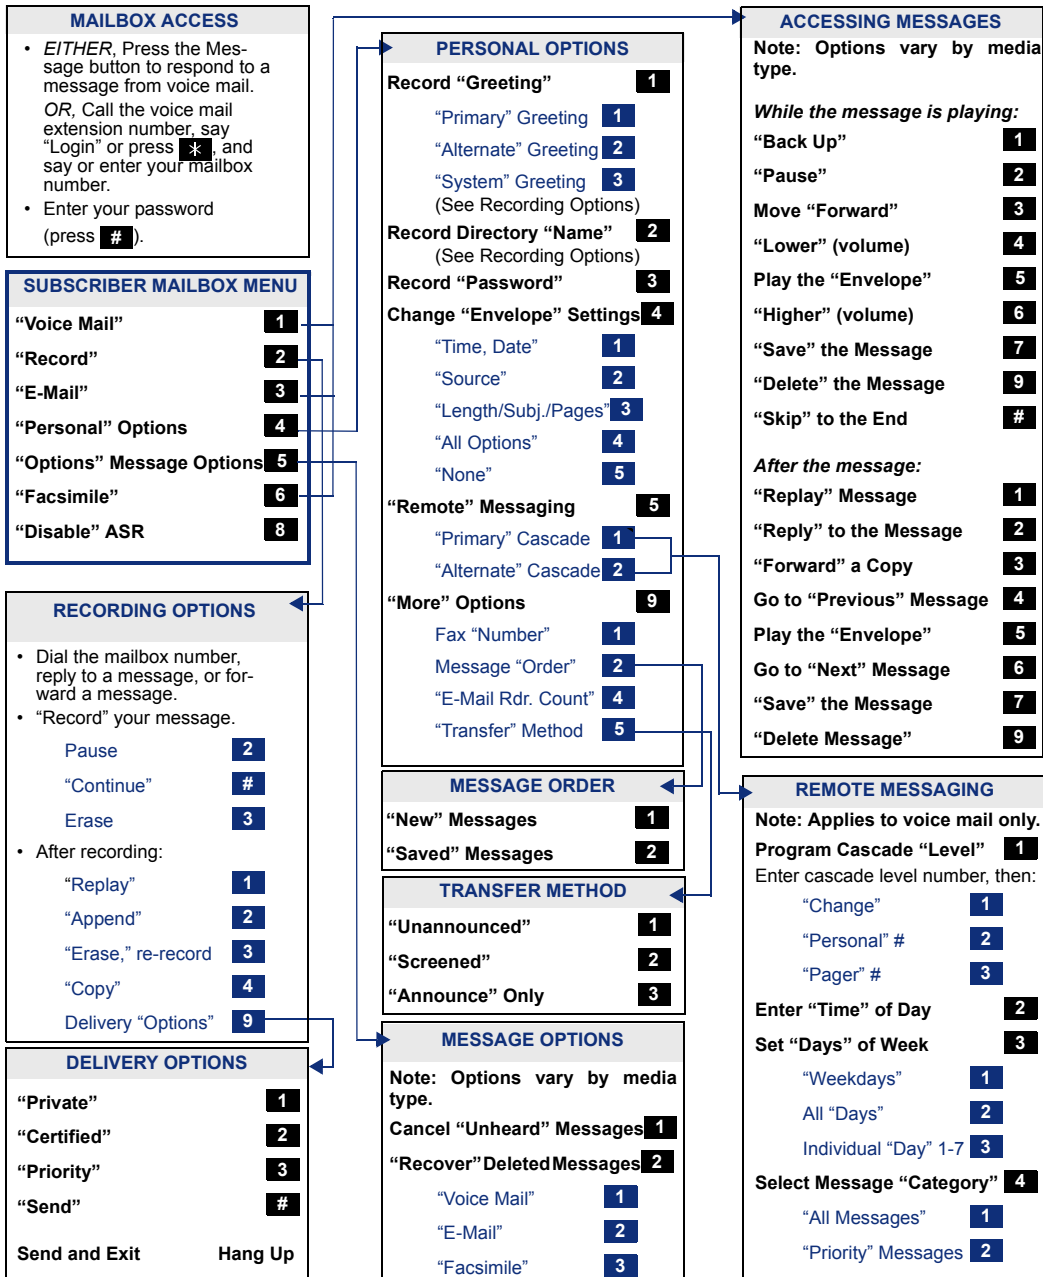

USING E-MAIL READER

Learning More

SECTION CONTENTS	PAGE
Introduction	136
What the Administrators Can Do for You	136
Frequently Asked Questions (FAQs)	137
Default Feature Codes	141

INTRODUCTION

If you want to know more about your endpoint and voice mail system, this is the section for you. With additional information and FAQs, you should be able to find answers to most of your questions.

NOTE: Because the telephone system is very flexible and programmable, the procedures for using the features might vary slightly from the descriptions in this guide. If so, your trainer or system administrator can tell you how your system differs and how to use the features.

WHAT THE ADMINISTRATORS CAN DO FOR YOU

The administrators are the people to whom you should turn if you have any problems with your endpoint and/or voice mail. They have access to advanced programming features and can reset certain settings associated with your endpoint.

The types of administrators that can help you with your endpoint/voice mail are as follows:

- **System Administrator:** Performs certain telephone system functions, including:
 - Setting the date and time
 - Programming System Speed-Dial numbers
 - Making database changes, such as programming usernames, toll restriction, DND messages, and extension numbers
- **Voice Mail Administrator:** Performs tasks associated with the voice mail system, including:
 - Recording a broadcast message that is sent to all mailboxes at once
 - Performing mailbox maintenance (such as changing your password)
 - Customizing voice mail prompts

NOTE: For problems that are network-related, contact your network administrator.

If you are a system administrator or if you need additional information not available in this guide, refer to either your system's administrator guide, or the *Model 8690 Administrator's Guide* (part no. 550.8120). If you are a network administrator, refer to the latest version of the *IP Devices Installation Manual* (part number 835.2195).

FREQUENTLY ASKED QUESTIONS (FAQS)

This section includes some of the most frequently asked questions. If you have problems with your endpoint or voice mailbox, refer to this section before you contact the appropriate administrator or your local Inter-Tel provider.

- Q1.** *How can I retrieve messages if I do not know the password for my voice mail?*
- A1.** Try using your extension number, which is your default password. Or, maybe you do not have a password, in which case pressing **#** is all you need to do. If these options don't work, contact your voice mail administrator, who can change or erase the password for you. You can then retrieve your messages and reset the password, if desired (see [page 71](#)).
- Q2.** *How can I set the number of rings that are allowed before the call is sent to voice mail?*
- A2.** Only your system administrator can change the number of rings.
- Q3.** *Why can't I retrieve deleted messages?*
- A3.** Voice mail may have erased your message. After a programmed amount of time has lapsed, up to 24 hours, voice mail automatically erases all deleted messages (see [page 59](#)). If you attempted to undelete a voice mail message within this time frame but you were still unsuccessful, your voice mail system may not have sufficient space programmed to store deleted messages.
- Q4.** *How can I change the name displayed on my endpoint?*
- A4.** Only your system administrator can change the usernames assigned to extensions.
- Q5.** *How do I change the time and date on my endpoint?*
- A5.** Only your system administrator can change the time and date. Please contact your system administrator if you notice that the date and time are incorrect. You can only change the time and date for Windows CE. NET.
- Q6.** *How do I program System Speed-Dial numbers?*
- A6.** Only your system administrator can program System Speed-Dial numbers. You can, however, program up to ten Station Speed-Dial numbers without UC (see [page 77](#)), or add an unlimited number of contacts to your Speed-Dial list with UC (see [page 103](#)).

- Q7.** *Why don't the local telephone company star codes (i.e. *82, *69, etc.) work when I press the **Outgoing** button or use the **Outgoing Call** feature code (**8** by default) to call an outside number?*
- A7.** Rather than pressing the **Outgoing** button or **8** to access an outside line, you must dial a Select Line Group number before you can use the star codes. For example, if your system is using the default Select Line Group numbers, dial 92001 to access that line. Once you have dial tone, you can dial the star code and the number.
- Q8.** *Can I store applications and data on my endpoint?*
- A8.** The Mounted Volume folder is the only location on the endpoint where data and files persist across power loss and resets. Although you can store a small amount of data on the endpoint, it is strongly suggested that you store applications and data on an accessible storage device such as a Compact Flash memory card or your desktop PC.
- Q9.** *Why do the views change when my endpoint is logged on to UC and there is call activity on my endpoint?*
- A9.** When you are logged on to UC, the Model 8690 automatically displays the most appropriate view based on the current activity. For example, if your endpoint is logged on to UC and the dialpad and display are showing, an incoming call will trigger UC to display the Call List view. The Call List view allows you to see who is currently calling, and also allows you to use the Call Control buttons to take action on the call. When the call is no longer active, the original view is restored.
- Q10.** *When I set my preferences using the Options dialog box, I opted to use large icons. Because the large icons and text take up so much area in the tables that display the information, how can I see all of the information that is displayed?*
- A10.** The large fonts option (see [page 113](#)) increases the size of the text and icons when the information is presented in a table format such as the Address Book view, Call List view, etc. However, the overall size of the table remains the same whether you use large fonts or not. Therefore, large fonts will take up more table area and reduce the amount of information that you can view in the table at one time. To view additional information when using large fonts, you can scroll to the information using the vertical and horizontal scroll bars. If you notice that some of the information is cut off, you can resize the column by moving the column bar in the heading to the right or the left.
- Q11.** *Why can't I use the Agent Help or Record-a-Call features?*
- A11.** If your endpoint is configured to use peer-to-peer (P2P) audio, you will not be able to use the Agent Help and Record-A-Call features when you are on a P2P call. To determine if your endpoint is configured to use P2P audio, consult your network administrator.

Q12. *What happened to the skin and custom ring I saved?*

A12. The preferences that you save, like skin and custom ring, are only used when the endpoint is in the state (logged on or off UC) that it was in when you set these preferences. The Model 8690 allows you to save two sets of preferences that are stored locally on the endpoint. For example, if you log into UC and save a custom ring and skin to use with your UC account, the skin and custom ring will only be available when you are logged in to UC.

Q13. *Why can't I use ASR to enter my e-mail password?*

A13. To prevent others from overhearing your password, you must enter it using the dial-pad buttons on your endpoint. See [page 125](#) for additional information about entering your e-mail password if E-Mail Reader is enabled for your mailbox.

Q14. *If my e-mail password expires for my e-mail client and I have to change it, do I also have to update it for my mailbox?*

A14. Yes. Whenever you change your e-mail password, you will be prompted to update it for E-Mail Reader. See [page 125](#) for additional information about entering your e-mail password.

Q15. *Why don't I have e-mail and fax messages in my mailbox?*

A15. If your mailbox is the standard voice mailbox (see [page 15](#)), you will not receive e-mail and fax messages in your mailbox. To receive these types of messages, E-Mail Reader must be enabled for your mailbox. Check with your voice mail administrator to see if E-Mail Reader is enabled for your mailbox.

Q16. *Why do I get the wrong response when I try to complete a task by saying a command?*

A16. Several things affect the system's response to voice commands. One reason the system may not be responding to voice commands is that Automatic Speech Recognition (ASR) may not be enabled on your system. If your system's voice prompts do not include the option to "say" a command, then ASR is not enabled. See [page 30](#) for additional guidelines for using ASR.

Q17. *Why can't I use one of the features described in this guide?*

A17. There are a few reasons why you might not be able to access the feature. Some possible reasons include:

- Your system software version may not support the feature. Check with your system administrator to see which software version your telephone system currently uses and if there are any features restrictions for your system.
- Your system administrator may not have enabled the feature for your endpoint.
- Your system administrator may have programmed your endpoint to block the feature.

Q18. *If I need further assistance, how do I get technical support?*

A18. First, contact the appropriate administrator (system, voice mail, or network) if you have a question that is not covered in this user guide. If you need further assistance, contact your local authorized Inter-Tel provider. Providers can be located using the Inter-Tel Web site at www.inter-tel.com. All Inter-Tel sales, service, and support are handled at the local level.

DEFAULT FEATURE CODES

Use the blank spaces below to enter custom feature codes, if necessary.

OUTSIDE LINE ACCESS CODES

ACCESS CODE NAME	ACCESS CODE	NEW CODE
Select Line Group 1-208	92001-92208*	
Automatic Route Selection	92000*	
Emergency Call	911 (999 in Europe)	
Outgoing Call	8	

*These defaults may differ depending on the software version.

EXTENSION NUMBERS

EXTENSION NAME	EXTENSION NUMBER	NEW NUMBER
Endpoint Extensions	1000-1999	
Hunt Groups	2000-2299	
Attendant	0	

GENERAL FEATURE CODES

FEATURE NAME	FEATURE CODE	NEW CODE
Account Code – Following Calls	391	
Account Code – Optional	390	
ACD Agent Log In	326	
ACD Agent Log Out	327	
ACD Agent Log In/Out	328	
ACD Agent Wrap-Up Terminate	329	
Agent Help Request	375	
Agent Help Reject	376	
Answer (Ringing Call)	351	
Automatic Intercom Access On/Off	361	
Automatic Line Access On/Off	360	
Automatic Line Answer	350	
Background Music On/Off	313	
Call Forward All Calls	355	
Call Forward If Busy	357	
Call Forward If No Answer	356	
Call Forward No Answer/Busy	358	
Call Logging	333	
Conference	5	
Default Station	394	
Directory (IDS or Basic)	307	

FEATURE NAME	FEATURE CODE	NEW CODE
Display Time And Date	300	
Do-Not-Disturb	370	
Do-Not-Disturb Cancel	371	
Do-Not-Disturb On/Off	372	
Do-Not-Disturb Override	373	
Group Listen	312	
Handsfree On/Off	319	
Headset On	315	
Headset Off	316	
Headset On/Off	317	
Hold – Individual	336	
Hold – System	335	
Hookflash (Recall in Europe)	330	
Hunt Group Remove	322	
Hunt Group Replace	323	
Hunt Group Remove/Replace	324	
Message	365	
Message – Cancel Message Left	366	
Message – Cancel Message On Endpt	368	
Message – Silent Message	367	
Microphone Mute On/Off	314	
Page	7	
Page Receive On/Off	325	
Program Station Password	392	
Queue (Callback) Request	6	
Record-A-Call	385	
Redial	380	
Redirect Call	331	
Reminder Message	305	
Reminder Message Cancel	306	
Remote Programming	359	
Reverse Transfer (Call Pick-Up)	4	
Ring Intercom Always On/Off	377	
Ring Tone Selection	398	
Routing Off	304	
Station Speed Dial	382	
Station Speed-Dial Programming	383	
System Forward Enable	352	
System Forward Disable	353	
System Forward On/Off	354	
System Speed Dial	381	
Transfer To Hold	346	
Transfer To Ring	345	

NOTES

Index

A

- Abbreviations 9
- About Tab 38
- About This Guide 2
- About Voice Mail 17
- About Your Endpoint 3
- Accessing
 - e-mail messages 127
 - fax messages 130
- Accessing Address Book Contact Information 117
- Accessing Your Mailbox 29
- Account Codes 81
- Account Icons 99
- ACD 92
- ACD Hunt Groups 92
- ActiveSync 4
- Adding a Linked Contact 116
- Adding Parties to a Conference 51
- Adding Simple Contacts 115
- Address Book
 - accessing and editing 118
 - contact information 118
 - view 113
- Address Book View 113, 118
- Adjusting Your Endpoint's Viewing Angle 22
- Administrators 136
- Advanced Mailbox
 - using 124
 - voice mail flowchart 133
- Advanced Options 39
- Agent Help 91
- Agent IDs 92
- Alternate Greeting 27
- Answering Calls 48
- Appearance Tab 36
- Automatic Call Answer 70
- Automatic Call Distribution (ACD) 92
- Automatic Speech Recognition (ASR) 17
- Automatic System Forwarding 55
- Available status 98

B

- Background Music 69
- Basic Search 86
- Behavior Tab 36
- Buttons
 - dialpad 7
 - feature 7, 11
 - menu 7
 - message 24
 - mute 51
 - navigation 7
 - special 8

C

- Calibrating the Screen 32
- Call Control Buttons 106
- Call Details Dialog Box 112
- Call List View 105
- Call Log
 - main screen 109
 - view 109
- Call Logging, using 83
- Call Routing View 119
- Call State 105
- Call Waiting 49
- Callbacks 46
- Caller ID 105
- Caller ID, Positive 105
- Calls
 - answering 48
 - making 27, 45, 47
 - making conference 51
 - placing on hold 50
 - receiving 27, 46, 48
 - receiving non-handsfree 47
 - returning to held caller 50
 - waiting for called endpoint 46
- Camp On 46
- Cancelling
 - call forward request 55
 - callback requests 46
 - messages 24
 - queue requests 48
 - Record-A-Call 79
 - reminder messages 65
- Cascade Levels 75

- Changing
 - call screening transfer method 73
 - e-mail password 126
 - fax destination number 74
 - message envelope 72
 - message search order 74
 - personal greeting 28
 - remote feature access password 90
 - transfer method 73
 - voice mail message envelope 72
 - voice mail password 71
 - voice mail, e-mail, and fax message envelope 132
 - volume levels 68
 - Web Client options 97
 - your status 98
- Checking Contact's Status 114
- Checking Messages 104
- Clearing Reminder Messages 65
- Compact Flash (CF) Port 4
- Composite Status, Current 113
- Conference Calls 51
- Connecting a Headset 25
- Contacts
 - accessing and editing 118
 - adding linked 116
 - E-mail addresses 117
 - information panel 117
 - simple, adding 115
 - telephone numbers 117
- Creating a Conference Call 108
- Current Status 98

D

- Date, Time, Name, and Extension Number 22
- Default Feature Codes 141
- Defaults 70
 - do-not-disturb message chart 63
 - feature codes 141
 - mailbox password 26
- Deleting a Call Log Entry 111
- Deleting a Linked Contact 116
- Deleting Messages 104
- Deleting Station Speed-Dial Numbers 78
- Delivery Options 61
- Device Icons 100
- Dial Tone 19
- Dial Tones 69
- Dialing Options 48
- Dialpad Buttons 7
- Directories
 - Basic Search 86

- Basic Search dialpad button descriptions 86
- IDS dialpad button character descriptions 85
- Intelligent Directory Search 84
 - outside 48
 - Telephone 84
 - voice mail 87

- Disabling
 - account codes 81
 - automatic call answer 70
 - background music 69
 - call forwarding 90
 - cascade levels 76
 - do-not-disturb 90
 - group listen feature 23
 - handsfree 46
 - hunt group calls 92
 - message envelope options 72
 - paging 80
 - record-a-call 79
 - system forwarding 55
 - time/date option 72

- Disconnecting a Headset 25

- Display 7

- Displaying
 - date and time 22
 - outside party's name 22

- Displaying Information on Your Endpoint 22

- Distributing Calls 92

- Do-Not-Disturb 63, 90

- Dropping a Party from a Conference 108

- Dropping Out of a Conference 51

E

- Editing Address Book Contact Information 117
- E-Mail Messages 127
- E-Mail Reader 17, 125
- Emergency Calls 49
- Enabling
 - automatic call answer 70
 - background music 69
 - call forwarding 90
 - cascade levels 76
 - do-not-disturb 64
 - group listen feature 23
 - handsfree 46
 - hunt group calls 92
 - paging 80
 - record-a-call 79
 - system forwarding 55
- Ending a Conference 108

- Ending a Conference Call 51
- Endpoint Configuration
 - changing volume levels 68
 - selecting a ring tone 69
- Endpoint Connectors 4
- Endpoint Idle 19, 33
- Entering Account Codes 81
- Enterprise Messaging 17
- Erasing Station Speed-Dial Numbers 78
- Exiting a Conference 51
- External Microphone Jack 4
- External Speaker Jack 4

F

- Favorites 102
- Favorites Button 102
- Fax Destination Number 74
- Fax Messages 130
- Feature Buttons 7, 8, 11
- Feature Codes 141
- Features
 - account codes 81
 - agent help 91
 - automatic call answer 70
 - Automatic Speech Recognition (ASR) 18
 - background music 69
 - call waiting 49
 - conference 51
 - default endpoint 70
 - do-not-disturb 63
 - E-Mail Reader 125
 - group listen 23
 - handsfree 46
 - hold 50
 - hookflash 81
 - hunt groups 92
 - individual hold 50
 - last number dialed/saved 56
 - manual forwarding 54
 - mute 23
 - paging 80
 - queue 46
 - record-a-call 79
 - redial 56
 - redirect 55
 - remote feature access 89
 - ring intercom always 45
 - system forwarding 55
 - system hold 50

- system speed dial 79
- transfer 52
- UC
 - address book 113
 - alerts 119
 - call control 106
 - call log 109
 - call routing 119
 - conference 108
 - feature code favorites 102
 - mute 107
 - recording a call 107
 - redial 102
 - search 99
 - speed dial 103
 - transfer 107

- Filtering Address Book Contacts 114
- Flash Memory Conflict 21
- Flowchart
 - advanced mailbox 133
 - standard voice mailbox 151
- Forced Account Codes 81
- Forwarding Calls 54
- Full Mailbox 29

G

- Greetings 27
- Group Listen Using the Speaker 23
- Guidelines for Using the Model 8690 Endpoint 15

H

- Handset Jack 3
- Handsfree Mode 46
- Headset Jack 3
- Hearing Aid-Compatible (HAC) Handset 3
- Hold 51
- Hookflash 81
- Hunt Group Calls Enabled/Disabled 92
- Hunt Groups 92

I

- Individual Hold 50
- Initializing Your Mailbox 26
- Input Panel 13
- Installing Software and Firmware Upgrades 42
- Intelligent Directory Search 84
- Intercom Calls 45
- Inter-Tel Protocol (ITP) Mode 2

J

Jacks, LAN/PWR 4

L

LAN/PWR Jack 4
Last Number Dialed/Saved 56
LCD (Liquid Crystal Display) 3
Leaving Messages 24
Linked Contact 116
 adding 116
 deleting 116
 editing 117
Liquid Crystal Display (LCD) 3
Listening to Messages 57
Logging In and Out of ACD Hunt Groups 93

M

Mailbox Almost Full/Full 29
Main Menu E-Mail Reader Count 129
Making
 an emergency call 49
 calls 45
 pages 80
Making and Receiving Calls 27, 45
Manual Call Forwarding 54
Members, Hunt Group 92
Menu 9
Menu Buttons 7
Message
 button 24
 search order 74
Message Count and Type 29
Message Indicator Lamp 3, 5, 19
Messages
 recording and sending voice mail messages 60
 recovering deleted 131
 station 104
 system 104
 using do-not-disturb 63
 voice mail 104
Messaging, Remote 29, 75
Microphone 3, 51
Model 8690 (Photo) 3
Model 8690 Guidelines 21
Modes
 alphanumeric, numeric 19
Mounted Volume Folder 21
Mute Button 23, 51
Muting a Call 107

Muting the Microphone 51

N

Navigation Buttons 7, 10
Non-Handsfree Calls 47
Numeric Mode 19, 86

O

Off-Hook 19
On-Hook 19
Operating System 12
Optional USB Devices 5
Outside
 calls 47
 directory 48
 party's name and number 22

P

Paging 80
Passport, .NET 39
PC Ports 4
Peer-to-Peer (P2P) 138
Performing a Search 99
Personal Computer Memory Card International Association (PCMCIA) Port 4
Personal Data Assistant (PDA) 3
Placing
 a call 97
 calls on hold 50, 107
 conference calls 51
 intercom calls 45
 outside calls 47
Positive Caller ID 105
Power Requirements 6
Primary Greeting 27
Programming
 cascade levels 75
 date and time notification 76
 fax destination 74
 feature buttons 81
 remote feature access 89
 remote messaging 75
 ring intercom always 45
 station speed-dial numbers 77

Q

Queue the Line 46

R

- Receiving
 - incoming call alerts 120
 - intercom calls 46
 - new message alerts 119
 - outside calls 48
 - status change alerts 120
- Record-A-Call 79
- Recording
 - and sending voice mail messages 60
 - personal greetings 27
 - voice mail directory name 28
- Recording a Call 107
- Recovering Deleted Messages 59, 131
- Redial 102
- Redialing a Number 56, 102
- Redirect Calls 55
- Remote Access Password 89
- Remote Feature Access 90
- Remote Messaging 29, 75
- Requesting
 - a reminder message 65
- Requesting A Callback (Queue) 46
- Reset Button 4, 6
- Responding to a Waiting Call 49
- Responding to Agent Help 91
- Retrieving Messages 25
- Returning a Call 111
- Returning to a Call 50
- Returning Your Endpoint to Default 70
- Ring Intercom Always 45
- Ring Types 69
- Running Feature Code Favorites 102

S

- Saving the Last Number Dialed 56
- Saving Volume Levels 68
- Screening Calls 82
- Search Order 74
- Selecting
 - a message order 25
- Selecting a Ring Tone 69
- Sending
 - calls to voice mail 48
- Sending Messages 60
- Session Initiation Protocol (SIP) Mode 2
- Setting
 - account codes 81
 - backlight options 33
 - options 35

- personal options 132
- remote messaging 75
 - your e-mail password 125
- Setting Backlight Options 33
- Setting Preferences 68
- Show Desktop Icon 12
- Simple Contacts, Adding 115
- Six-Line Display 7
- Skins 11
- SMDR (Station Message Detail Recording) 81
- Software Compatibility 12, 26
- Sorting Address Book Contacts 113
- Sorting the Call Log 111
- Speakers 3
- Speed-Dial
 - button 103
 - list 103
- Standard Account Codes 81
- Standard Voice Mailbox Flowchart 151
- Standard Web Client
 - adding a linked contact 116
 - address book 116
 - filtering address book contacts 113, 114
- Static Contact Icons 100
- Station Message 46
- Station Message Detail Recording (SMDR) 81
- Station Password 41
- Station Speed Dial 77
- Stylus 7
- System
 - hold 50
 - memory and storage 13
 - registry 14
 - speed dial 79
 - tray 10
 - tray icon 10, 96
 - tray menu 35
- System Administrator 136
- System Forwarding 55

T

- Taskbar 12
- Telephone Directory 84
- Telephone Interface 7
- Temporary Composite Status 98
- Temporary Status 98
- Timers 54, 94
- Touch Screen Backlight 19, 33
- Transfer Button 107
- Transferring Calls 52, 107
- Type-Ahead Search 107

U

UC

- elements 10
- navigation buttons 10
- views 10

UC Views 10

Unavailable Status 98

Unified Communicator Elements 10

Unified Communicator View 98

Universal Serial Bus (USB) Client 4

Universal Serial Bus (USB) Host 4

Using

- account codes 81
- advanced mailbox 124
- defaults 26, 63, 70
- do-not-disturb mode 63
- headset 24, 25
- message button 24
- mute feature 23
- record-a-call 79
- system tray menu 34
- the speakers and the microphone 23
- UC on your endpoint 97
- UC views 97

V

Viewing Call Details 112

Viewing Call Routing Rules 119

Viewing Speed-Dial Numbers 79

Virtual Local Area Network (VLAN) 34

VLAN ID 34

Voice Mail

administrator 15

messages 46

listening to 57

Voice Mail Basics 26

Voice Mail Flowchart

advanced mailbox 133

standard mailbox 151

Voice Mail Messages

recording and sending 60

recovering deleted 59

Volume Levels 68

W

Waiting Calls 49

Wall Mounting 3

Web Client 96, 97

What the Administrators Can Do for You 136

Windows CE. NET 12

Working in Hunt Groups 91

Working with the Speed-Dial List 103


Wrap-Up Timer 94

Z

Zones, Page 80

VOICE MAIL FLOWCHART (STANDARD VOICE MAILBOX)

NOTE: At any menu level, you can say "Cancel" or press ***** to cancel or return to the previous menu or say "Accept" or press **#** to accept.

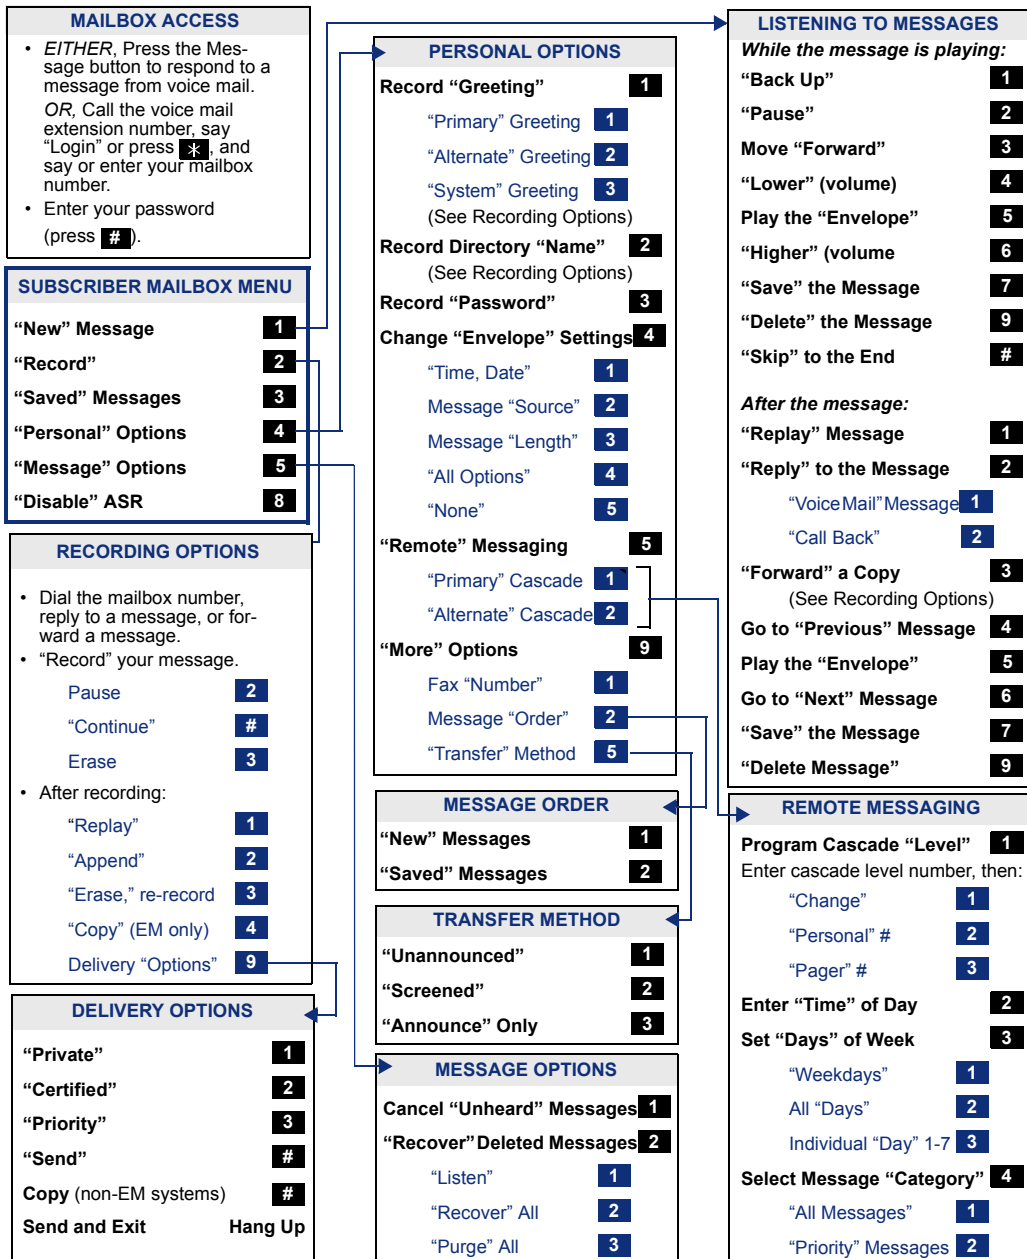

Part No. 550.8116
Issue 11, March 2006

